

# SUPERLOCK 2.0 QUICK EXIT RAPIDRESET KEYPAD ENTRY

## Specification Sheet BQDGRR 2.0

### FEATURES

- **RapidReset:** Enables you to change codes in just seconds.
- **Quick-Exit:** Push pad designed to facilitate easy exit through gates
- **Easy to fit:** Slim 70mm (2 3/4") wide lock case, along with an adjustable and removable latchbolt, ensures easy fitting to gates.
- **Secure:** The latchbolt moves 15mm (5/8"), ensuring the bolt enters deep into the gatepost.
- **Durable:** The latchbolt is supported on the edge of the gatepost to reduce friction and wear.
- **Anti-corrosion:** Designed for outdoor use for long-lasting performance.
- **Auto-latching:** Includes a gate post strike plate for easy and secure latching.
- A security shroud is available to prevent access to the push pad from the outside

 


### PRODUCT DETAILS


Product code	Description
BQDGRR1030L	To fit 10-30mm (1/2" - 1 1/4") gate frames, left hand
BQDGRR1030R	To fit 10-30mm (1/2" - 1 1/4") gate frames, right hand
BQDGRR4060L	To fit 40-60mm (1 1/2" to 2 1/4") gate frames, left hand
BQDGRR4060R	To fit 40-60mm (1 1/2" to 2 1/4") gate frames, right hand
<b>Compatible with:</b> Superlock Keeps ( <a href="#">BSK</a> , <a href="#">BSKS</a> , <a href="#">BSKG</a> ) & Shroud ( <a href="#">BQS</a> )	

### 5 Year Warranty

#### Left Hand Lock



#### Right Hand Lock

 

### INCLUDED IN THE BOX

- 2.5mm hex key + 3mm hex key
- Latchbolt
- M8 fixing bolts
- Strike plate (self-drilling fasteners)
- Face plate

### INSTALLATION

1. Drill 2 x 9mm (3/8") holes at 140mm (5 1/2") centres for fixing bolts provided.
2. Drill a 18mm (3/4") clearance hole for the latchbolt at 60mm (2 3/8") centres up from the bottom fixing hole.
3. Hold the lock against the back of the box section and screw on the latchbolt through the larger hole.
4. Lock the latchbolt with the hex key supplied by inserting the hex key into the end of the latchbolt.
5. Fix lock in place using the stainless steel bolt support plate and the countersunk screws provided. Ensure the latchbolt moves freely.
6. Fix strike plate by either welding or screw fixing onto the gate post.

**Maintenance:** Every 6 months, lubricate the latchbolt with light oil. Annually, dismantle the lock and spray mechanism with light oil.

