

OC46 Expansion Module


User Guide



Getting Familiar with the Expansion Module OC46

Note:

1. In order to use the UC46, you must first change a setting in the phone attached to the UC46 to accept Expansion Modules on the PC Port. This setting can be found in the phone menu under "Settings / Advanced Settings / Network / PC Port" or in the web GUI under "Network / PC Port".
2. Our expansion modules must be connected to the IP Phone's PC port and can't be connected to the any switches in a LAN.

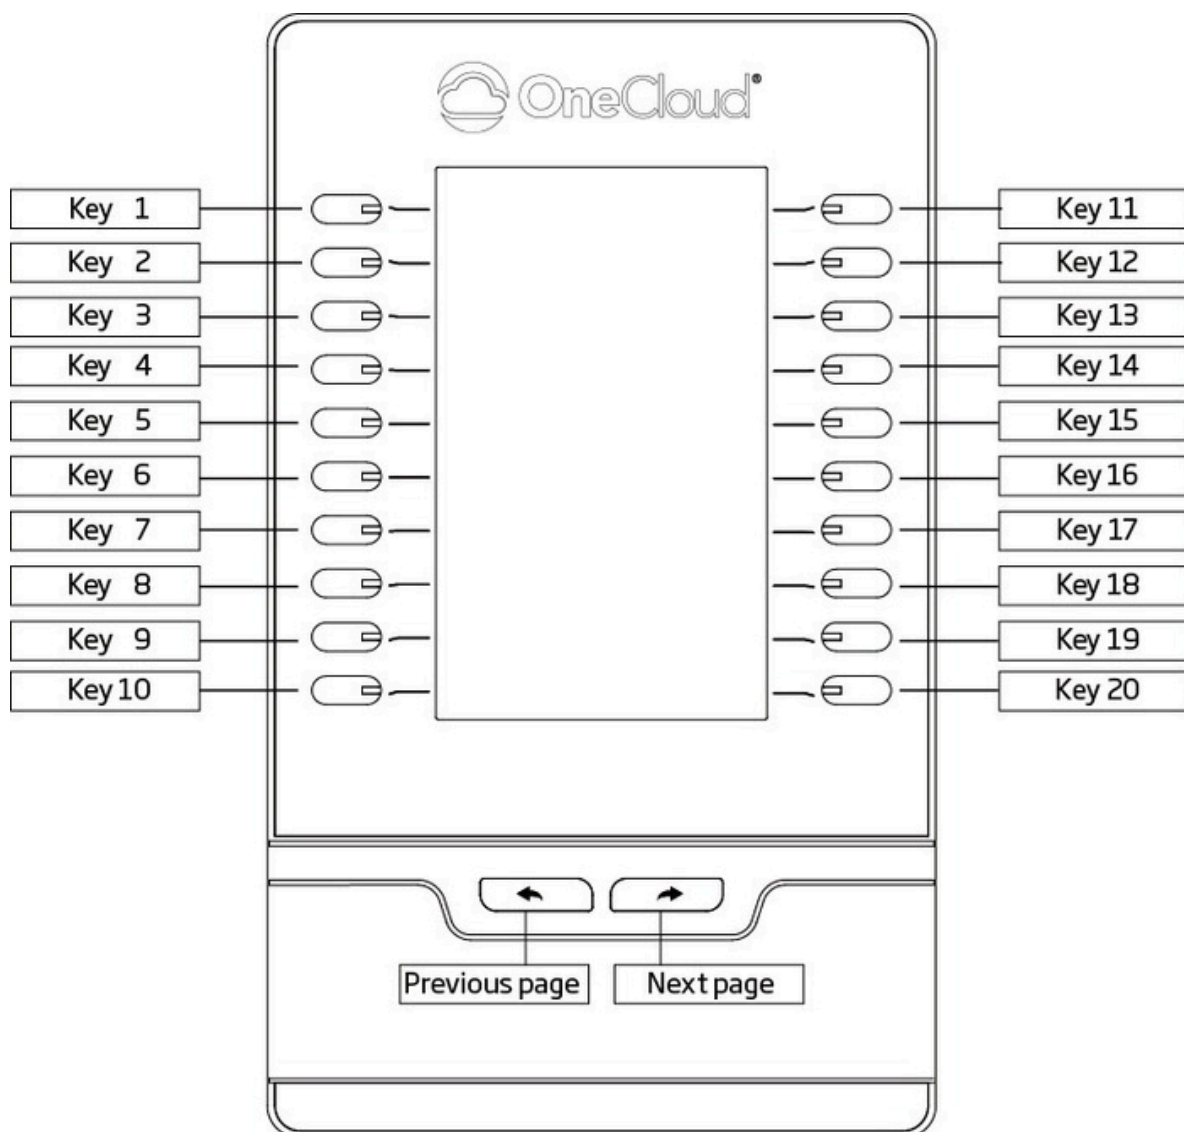

Icon Preview

Icon	Description
	Line(Registered succeed)
	Line (Unregistered)
	Line(Ringing)
	Speed Dial
	BLF
	BLF(Ringing)
	BLF(Talking)
	Voice messages
	Pick up
	Call Park
	Intercom/Paging
	DTMF
	Prefix
	XML Group
	Local Group

	XML Browser
	LDAP
	Broadsoft Group
	Conference
	Forward
	Transfer
	Hold
	Line on Hold
	DND
	Redial
	Call Return
	SMS
	Record
	Recording
	Group Listening
	Shared Line
	Other Functions