

SELECT PRO BOLT-ON DIGITAL KEYPAD QUICK EXIT

Specification Sheet **SBQEDGL**

FEATURES

- Quick-Exit: Push pad designed to facilitate rapid exit through gates with a digital keypad option for extra security.
- Precise: Stainless steel adjustable latchbolt which springs 22mm into the gate post for precise fitting on site.
- Auto-latching: Includes a gate post strike plate for seamless latching.
- A security shroud is also available to prevent access to the push pad from the outside.
- Keyed/no outside access versions also available.

PRODUCT DETAILS




| Product code | Description |
|--------------|--|
| SBQEDGLL01 | To fit 10-30mm (½" - 1 ¼") gate frames, left hand |
| SBQEDGLR01 | To fit 10-30mm (½" - 1 ¼") gate frames, right hand |
| SBQEDGLL02 | To fit 40-60mm (1 ½" - 2 ¼") gate frames, left hand |
| SBQEDGLR02 | To fit 40-60mm (1 ½" - 2 ¼") gate frames, right hand |

INCLUDED IN THE BOX

- 1x3mm hex key
- M8 fixing bolts
- Face plate
- Latchbolt
- Strike plate (self-drilling fasteners)
- Code changing pack

INSTALLATION

1. Drill 2 x 9mm (3/8") holes at 92mm (3 2/3") centres for M8 fixing bolts provided.
2. Drill a 18mm (¾") clearance hole for the latchbolt at 22mm (7/8") centres up from the bottom fixing hole.
3. Fix lock in place using the stainless steel clamp plate, bolt support plate and 2 stainless steel countersunk fixing bolts supplied.
4. Drill clearance hole in keep or outer frame to receive the latchbolt. Slot this hole vertically to allow for gate sag. Fit strike plate by either welding or screw fixing to the gate post.
5. Ensure latchbolt moves freely without binding on gate or frame.
6. **Maintenance:** Every 2 months, lubricate the latchbolt with light oil. Annually, dismantle the lock and spray the mechanism inside with light oil.

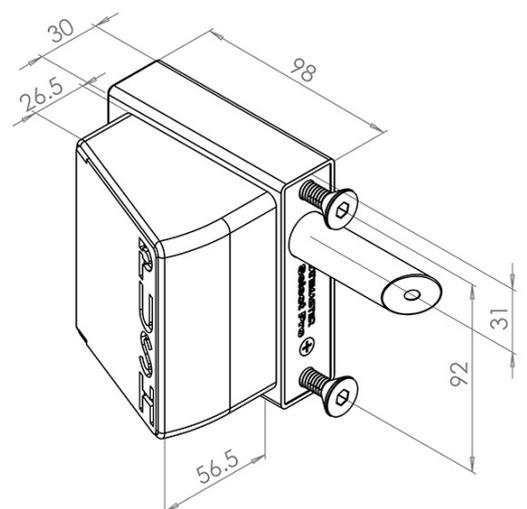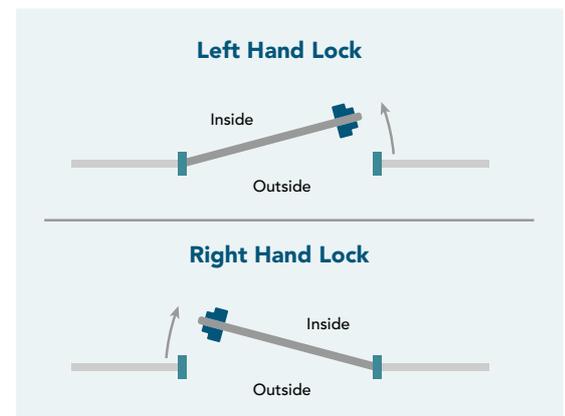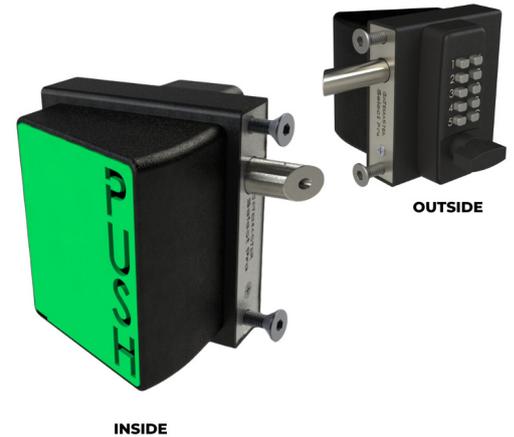


SELECT PRO BOLT-ON DIGITAL KEYPAD QUICK EXIT

 Specification Sheet
SBOEDGL
LOCK CODE: C

TO CHANGE THE CODE

1. Check the original code is working on the keypad.
2. Remove the keypad off the lock. To do this, unscrew the two screws fixing the keypad to the panel.
3. Turn the keypad over and remove the 4 screws.
4. Lift off the covering panel carefully as there are 10 springs attached to this panel. Note that the red tumblers relate to the code shown above. Also note that the C tumbler is uncoloured and should not be removed.
5. To change the code hold the keypad with the code buttons down and depress & hold the C button (if this is not done you may damage some of the internal components). Reposition the tumblers to the new code (red tumblers are coded and blue tumblers are uncoded). Ensure that the square cut-out on each tumbler is facing the outside of the lock body, also ensure that the coloured mark is facing upwards. If any one tumbler is upside down or the wrong way round the lock will not work and if forced will break the internal components. The code must always start with a 'C'

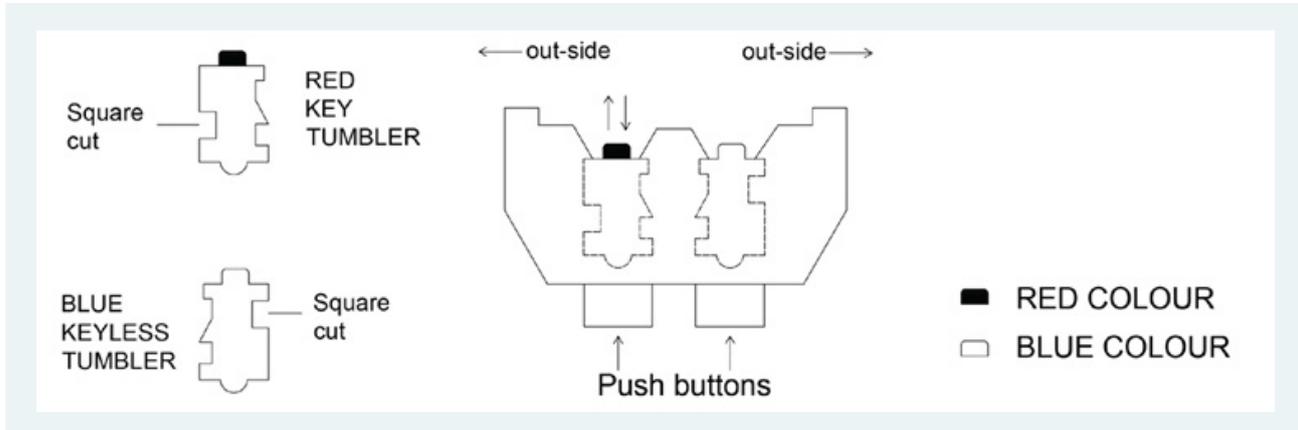

6. Replace the covering panel and tighten the 2 screws
7. The code is now changed, check to see that it is working correctly and make a note of the code for future reference. Once satisfied that the lock is working correctly refit keypads to the panel using the 2 screws and reassemble the lock.

MAINTENANCE

3 Monthly:

1. Remove keypads from the lock.
2. Spray the inside of the lock thoroughly with WD40 or equivalent, through the tumbler holes at the back of the lock.
3. Spray all the fixing accessories and the latch with WD40 or equivalent.
4. Push each of the buttons and rotate the knob several times to make sure the lock is working smoothly.