


SM-1 CONTROLLER

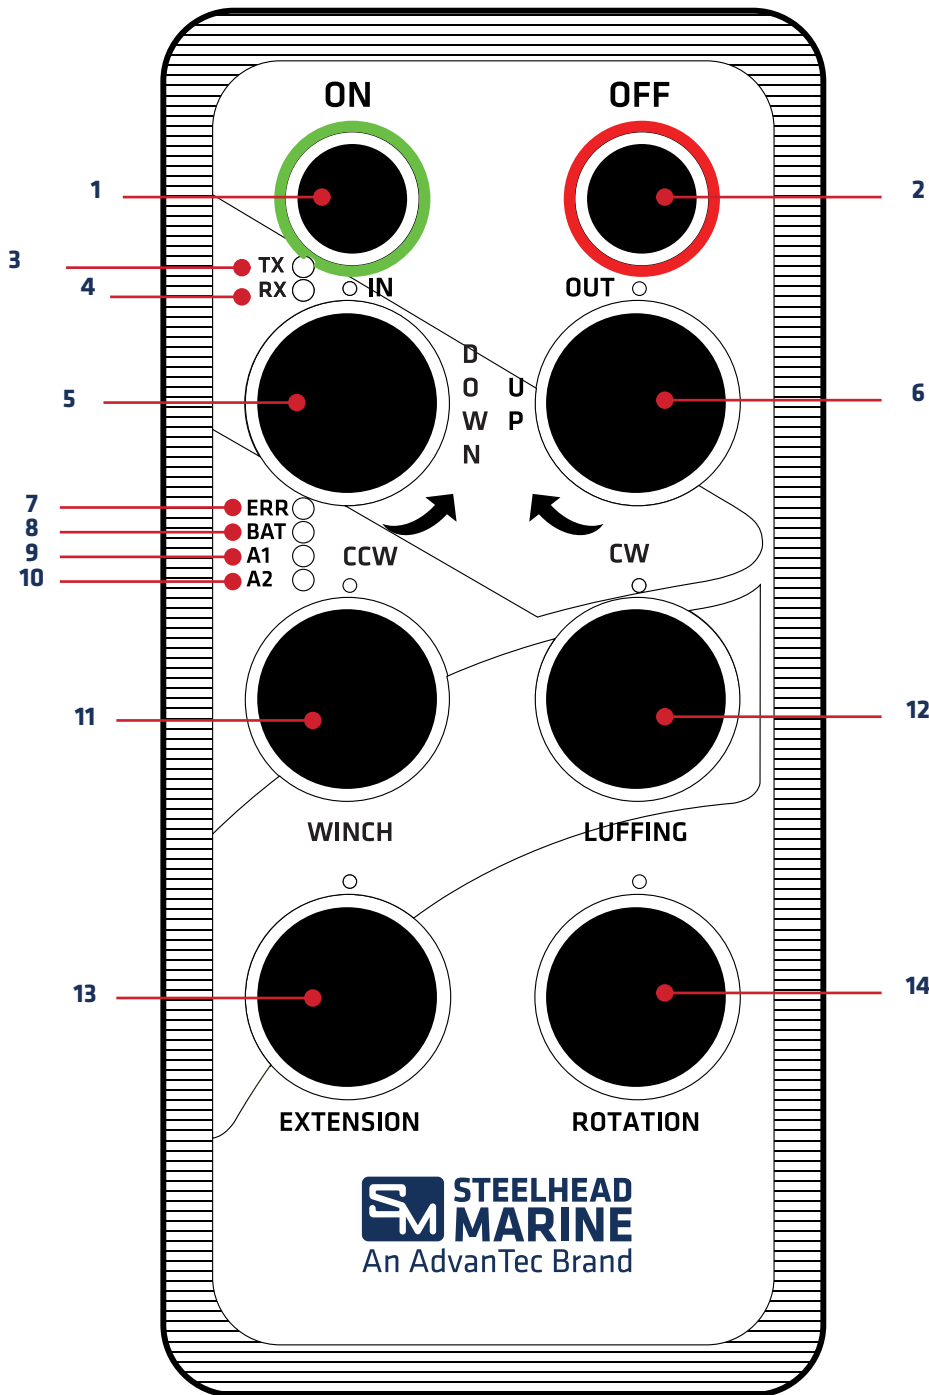

1	ON
2	OFF
3	TX - Green LED Indicator (flashes when transmitting message)
4	RX - Amber LED Indicator (flashes when receiving messages)
5	DOWN (COUNTER CLOCK WISE)
6	UP (CLOCK WISE)
7	ERR - Red LED indicator (flashes when errors detected)
8	BAT - Amber LED Indicator (flashes when battery is low)
9	A1 - Used when custom programmed
10	A2 - Used when custom programmed
11	WINCH
12	LUFFING - Rasing and lower of boom
13	EXTENSION
14	ROTATION

Crane Storage

To properly store the crane after use:

1. Retract boom extension.
2. Luff crane to horizontal position into boom checks.
3. Pay in the rope completely and install hook into hook hanger under the boom nose