

# SUPERLOCK 2.0 SURFACE MOUNTED DOUBLE-SIDED GATE LOCK

## Specification Sheet **BDGW 2.0**

### FEATURES

- A marine grade digital lock with 14 digit keypad and surface mounted fixing for quick installations.
- Auto-latching: Close the gate and the latchbolt latches into the gate frame. To open the gate enter the code and turn the handle.
- No power needed: High quality mechanical keypads ensure long lasting durability.
- Latchbolt is adjustable in length for precise fitting on site. Moves 20mm (3/4").

### PRODUCT DETAILS

Product code	Description
BDGWL	Left-handed keypad on outside, free exit handle on inside
BDGWR	Right-handed keypad on outside, free exit handle on inside
Compatible with: Superlock Keeps ( <a href="#">BSK</a> , <a href="#">BSKS</a> , <a href="#">BSKG</a> )	

### INCLUDED IN THE BOX

- 2.5mm hex key + 3mm hex key
- Latchbolt
- M8 fixing bolts
- Gate bracket with fixings
- Face plate
- Keep with fixings
- Code changing pack
- Outward opening keep conversion plate

 
### INSTALLATION

1. Position L bracket at a suitable height on the outside of the gate and mark it for reference. Start off the holes with a smaller drill bit, using the plate as a jig.
2. Drill the holes partway through, then mark and drill from the other side to ensure holes are straight. Specification Sheet Specification Sheet BDGW / BDGSW 2.0 BDGSW Right hand lock.
3. Drill the centre spindle hole with a 12mm drill bit, and open out the top and bottom holes with the 12mm drill bit to allow insertion of the outside keypad. Insert outside keypad and fasten with M5 screws provided. M5 screws may have to be cut to length with a grinder or a hacksaw. Screw L bracket to the gate with screws supplied. Insert spindle (ensuring it is fully seated) and measure a protrusion to the correct length (BDGW - 55mm (2 3/16"), BDGSW - 70mm (2 3/4"), BDGWRR - 45mm (1 3/4") BDGSWRR - 60mm (2 3/8")) then cut to length using a grinder or hacksaw. Use the notches as cutting guides - if your measurement falls between notches, cut at the next longer notch and trim further if needed.
4. Once cut, insert the spindle, then place lock body over spindle and fix using M8 fixing bolts and cover plate supplied. Use 5mm hex key to tighten bolts.
5. To fit the keep, align with the lock and mark the position on the gate post, then fasten with screws supplied.




### 5 Year Warranty

#### Left Hand Lock



#### Right Hand Lock

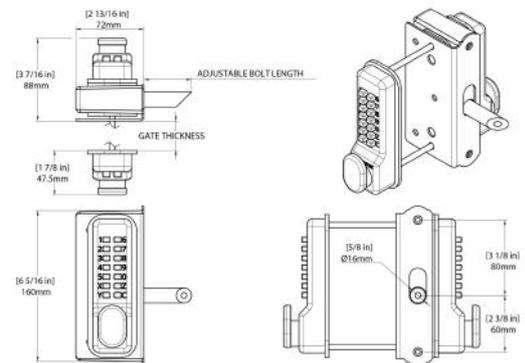

### WATCH VIDEO OF INSTALLATION



**ADJUSTMENT:** To adjust the length and orientation of the latch, twist clockwise to shorten or anti-clockwise to lengthen and lock in position with the 3mm hex key supplied.