

GUIDE DE MISE EN PLACE DE LA BOULE VERRE


Nous recommandons de porter des gants pour manipuler la boule de verre pour la protéger.

BOULE DE VERRE SANS COLLET

01


Pour mettre en place la boule de verre, dévisser la bague (A) et glisser vers le haut du fil ou de la tige la bague ainsi que la coupole (B).

Approcher la boule de verre.

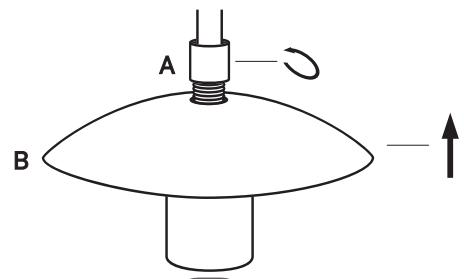

02

Tranquillement, soulever la boule de verre au dessus du socket de l'ampoule. Incliner la boule et porter là au dessus de l'attache (C).

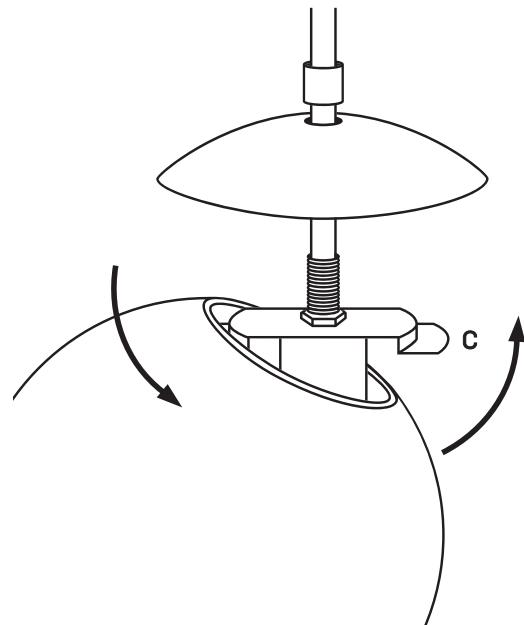


GUIDE MISE EN PLACE DE LA BOULE VERRE - SUITE

03


Centrer l'attache sur la paroi de la boule de verre. À ce stade-ci, la boule de verre devrait tenir en place et être en appui sur l'attache.

Remettre la coupole et la bague en place.

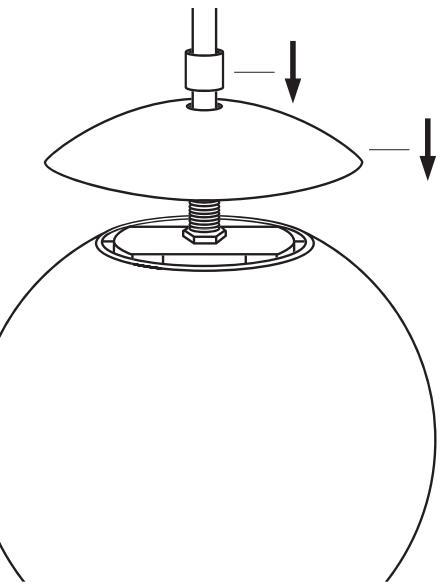

04

Resserrer la bague pour sécuriser le tout. Prendre soin de ne pas trop serrer la bague pour ne pas endommager la boule de verre et les composantes.

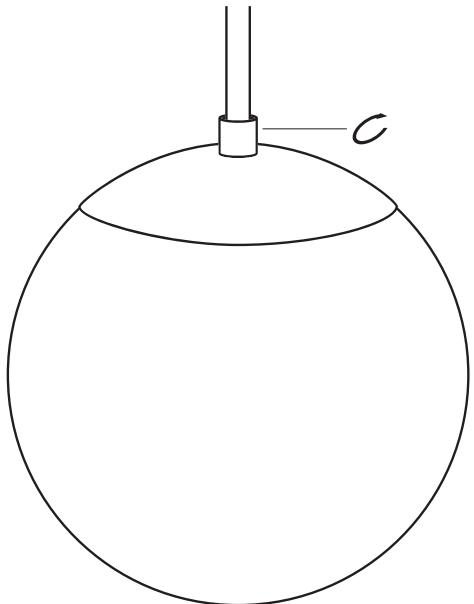


MISE EN PLACE DE LA BOULE VERRE - SUITE

BOULE DE VERRE SANS COLLET AVEC PINCES



01

Pour mettre la boule de verre, approchez là des pinces.

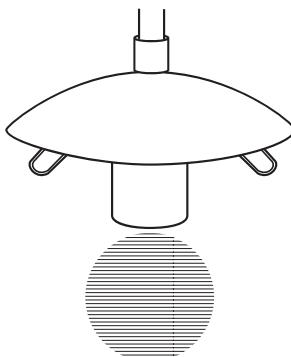


02

Incliner la boule de verre et presser contre les pinces papillon pour les insérer à l'intérieur de la paroi de verre

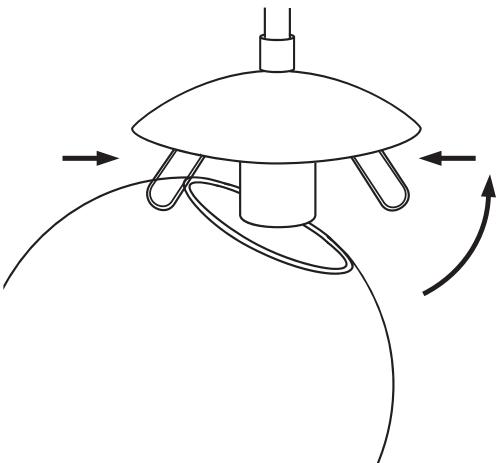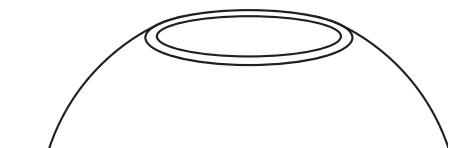

03

Relâcher doucement la boule de verre. Vérifier une dernière fois la stabilité avant de relâcher complètement.

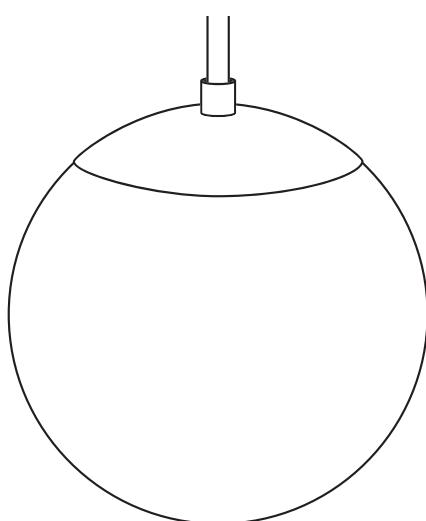


MISE EN PLACE DE LA BOULE VERRE - SUITE

BOULE DE VERRE AVEC COLLET


01

 Pour mettre la boule de verre, approcher l'attache du collet de la boule et maintenez-là en place.




02

En tenant bien la boule de verre, insérer les 3 vis de façon égale. Le vis ne doivent pas exercer une trop forte pression sur le verre.
Attention à ne pas trop serrer.

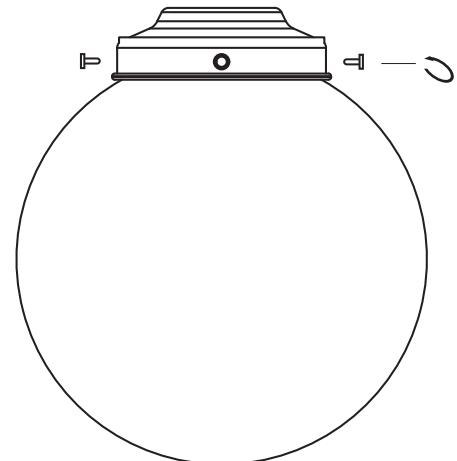

03

Une fois vissée, relâcher doucement la boule de verre. Vérifier une dernière fois la stabilité avant de relâcher complètement.

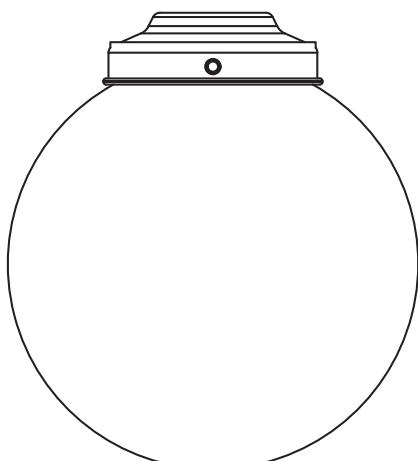


GLASS BALL INSTALLATION AND REMOVAL GUIDE

In order to protect it, we recommend wearing gloves to manipulate the glass ball.

NO NECK GLASS BALL


01

To insert the glass ball, unscrew the ring (A) and slide the ring and dome (B) up the wire or rod. Bring the glass ball closer.

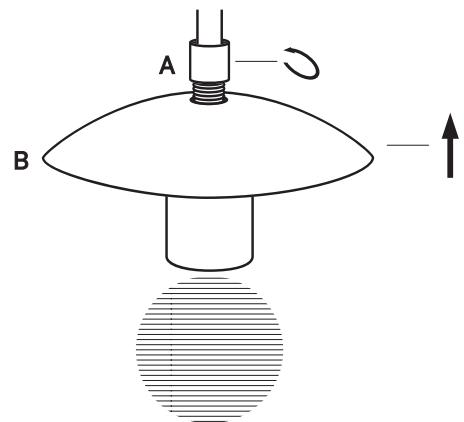

02


Slowly lift the glass ball over the socket of the bulb. Tilt the ball and bring it over the clip (C).

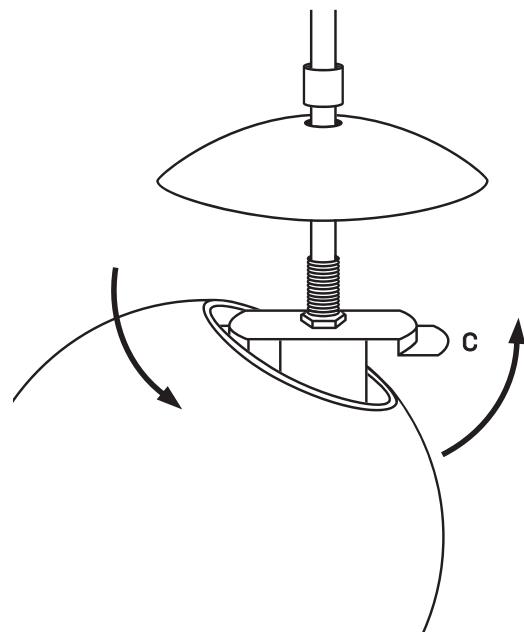

GLASS BALL INSTALLATION AND REMOVAL GUIDE - CONT'D


03

Centre the fastener on the wall glass ball wall. At this point, the glass ball should hold in place and press against the fastener. Replace the dome and ring.

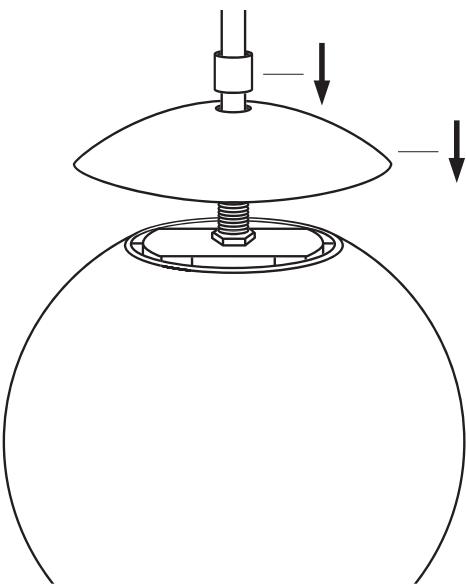

04

Tighten the ring to secure. Make sure not to overtighten the ring to avoid damage to the glass ball and components..

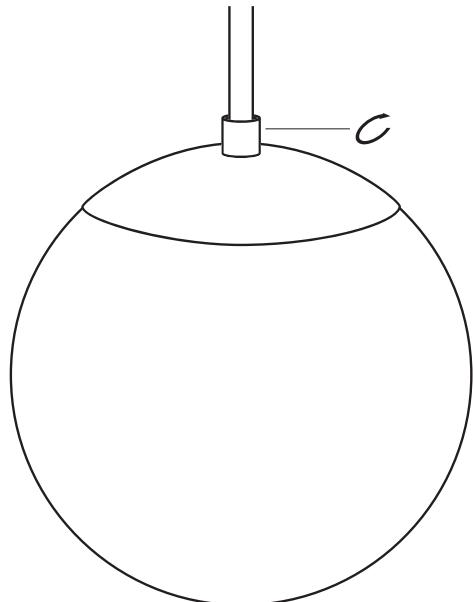


GLASS BALL INSTALLATION AND REMOVAL GUIDE - CONT'D

NO NECK GLASS BALL WITH CLAMPS



01

To put the glass ball, bring it to the tongs

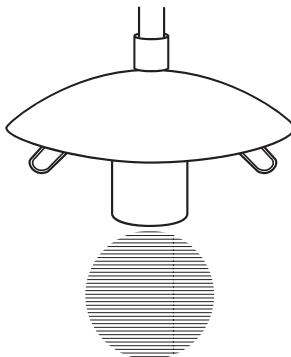


02

Tilt the glass ball and press against the butterfly clamps to insert them inside the glass ball.

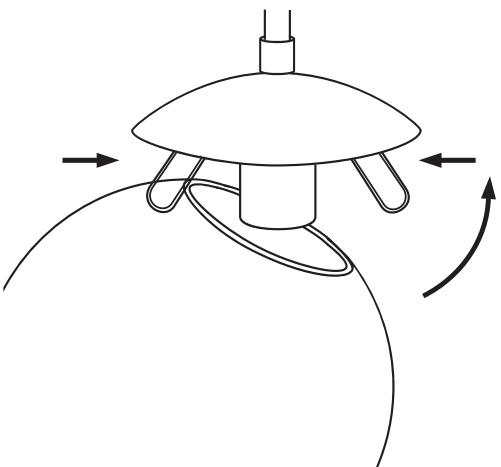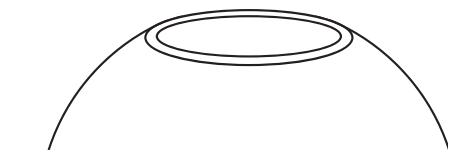

03

Gently release the glass ball. Check the stability one last time before fully releasing.

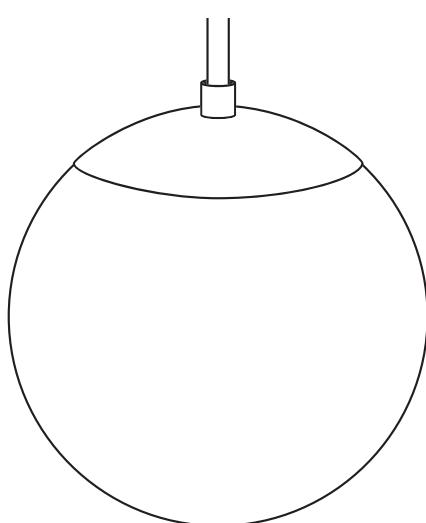



LUMINAIRE AUTHENTIK

 
GLASS BALL INSTALLATION AND REMOVAL GUIDE

- CONT'D

WITH NECK GLASS BALL

01



To put on the glass ball, bring the clip to the neck of the ball and hold it in place.



02

Tighten the ring to secure. Make sure not to overtighten the ring to avoid damage to the glass ball and components.

Be careful not to over tighten

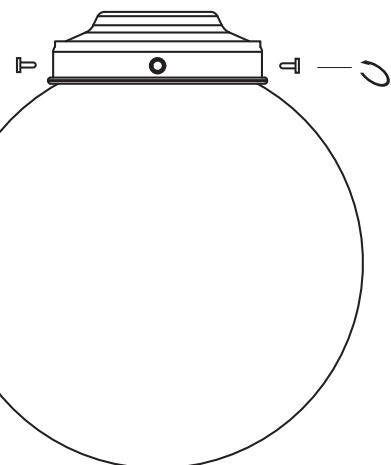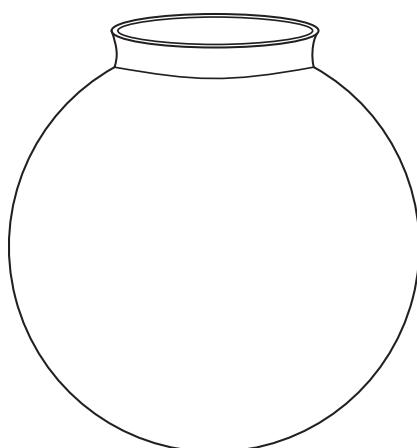

03

Once screwed in, gently release the glass ball. Check the stability one last time before fully releasing.

