


Horizontales Paneel

Montageanleitung - DE


Horizontales Paneel

Bitte lesen Sie die folgenden Anweisungen vollständig durch, bevor Sie mit der Montage beginnen. Fehler, die während der Installation gemacht werden, sind nicht durch die Produktgarantie abgedeckt. Falls Sie während des Installationsprozesses Fragen haben, kontaktieren Sie uns bitte.










Notwendige Werkzeuge und Sicherheitsausrüstung (NICHT MITGELIEFERT)

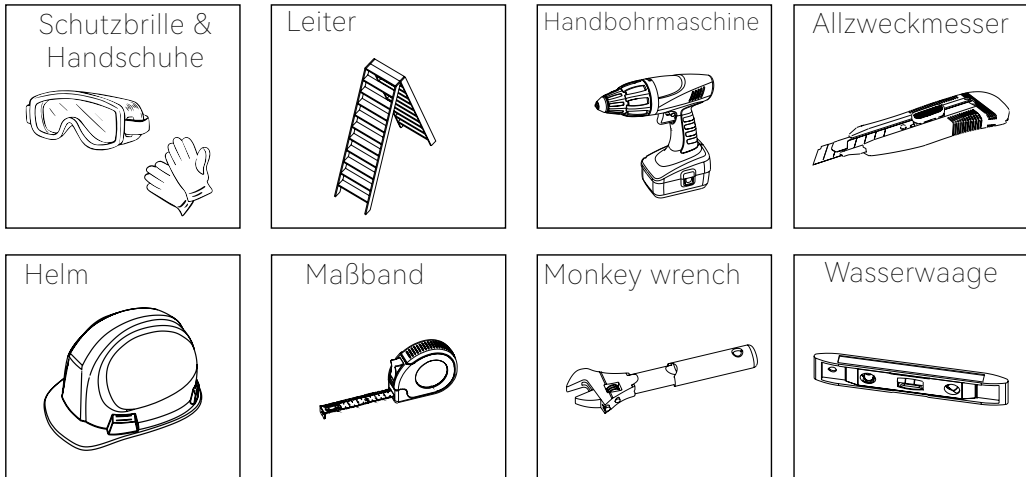




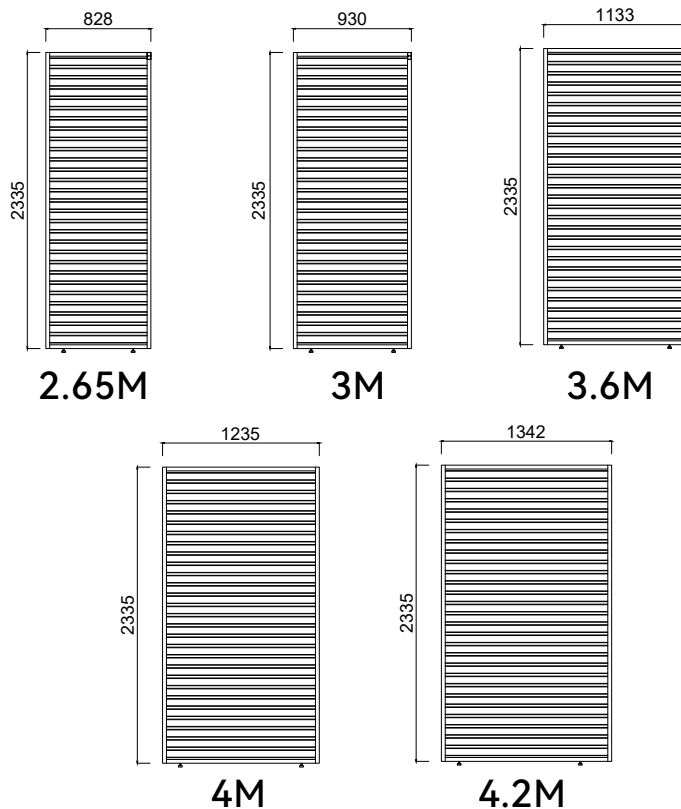




2D & 3D Fundamentmessung




KARTON

REF	BILD	Menge
M1		1
M2		1
N1		1
N2		1
H1		2
E1	 	1
E2	 	27


REF	BILD	Menge
W1		14
W2		2
W3		2

REF	BILD	Menge
W4	 	2
W5		1
W6		1
K1		2


1

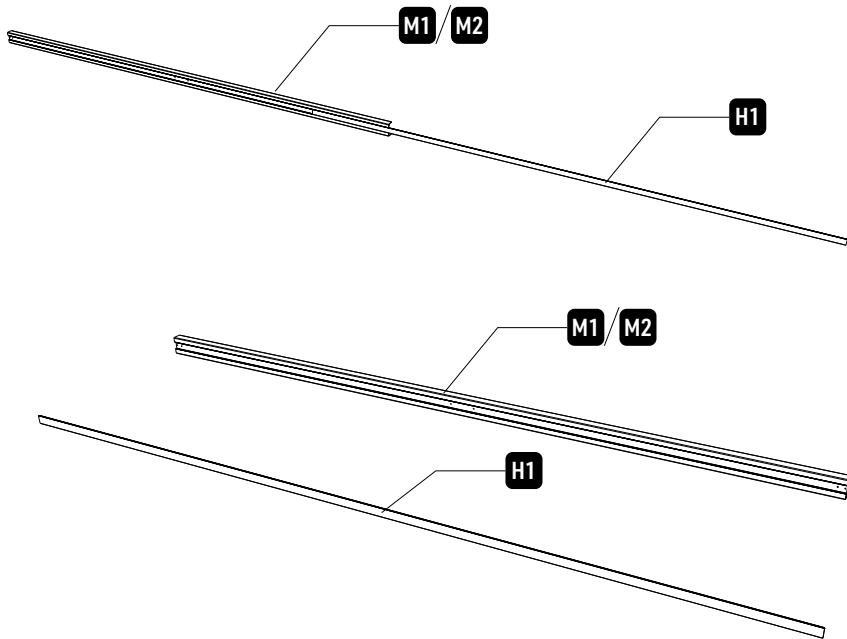


2

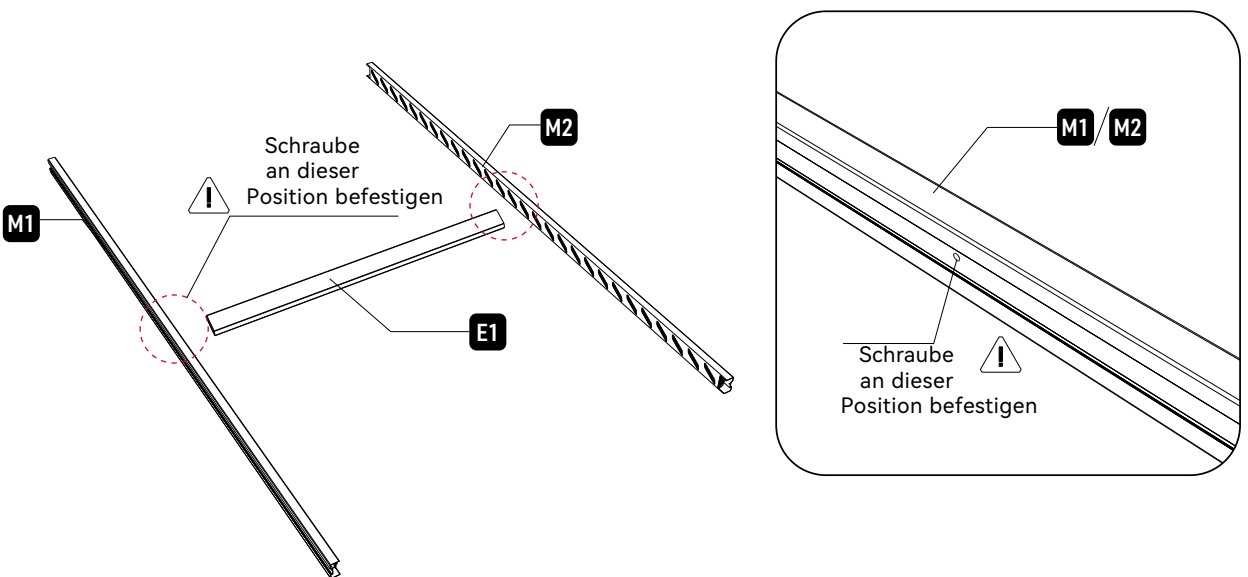


3

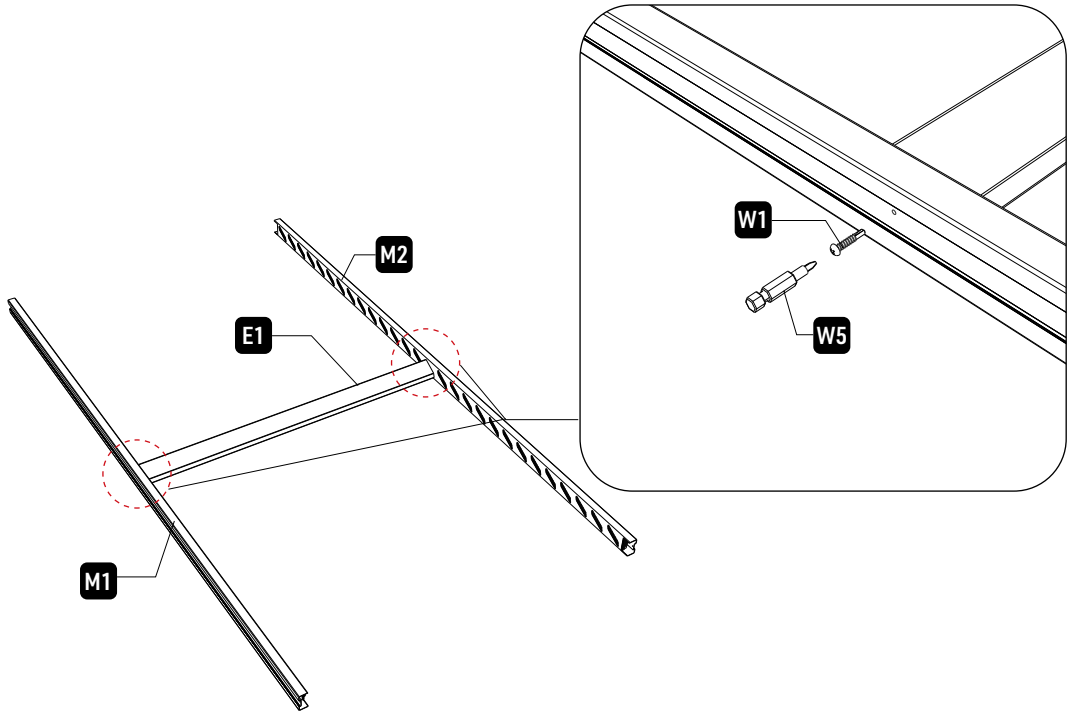


4



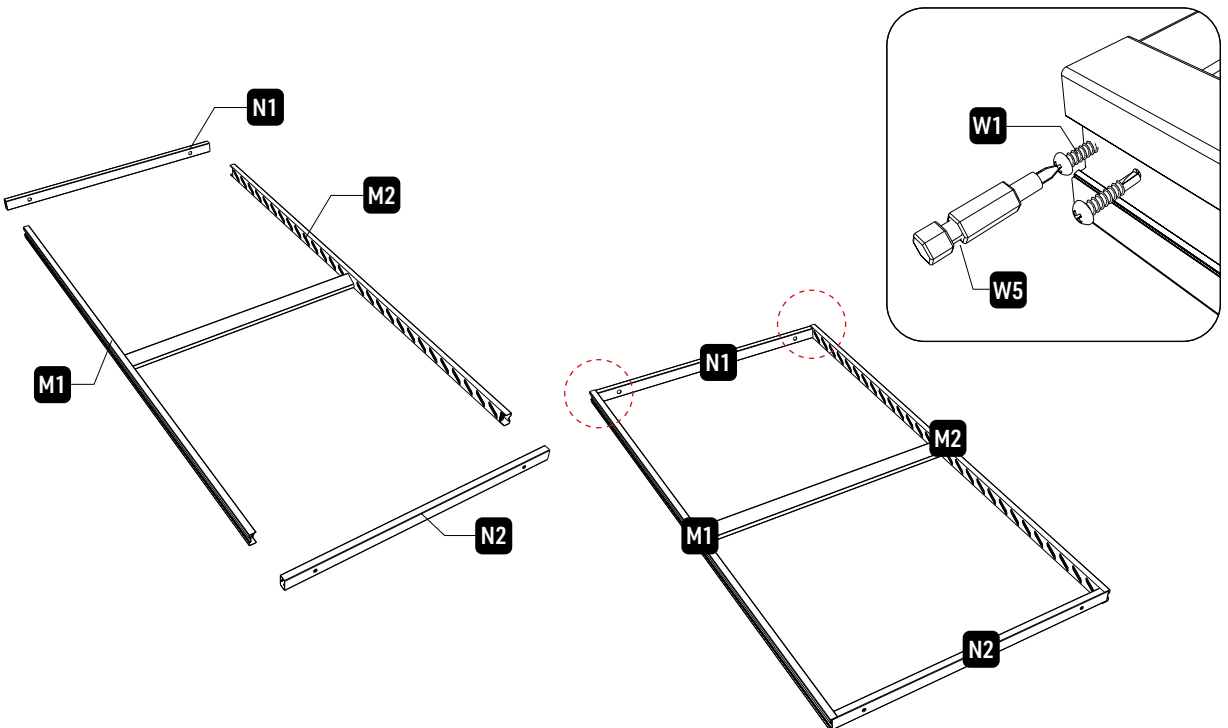


5


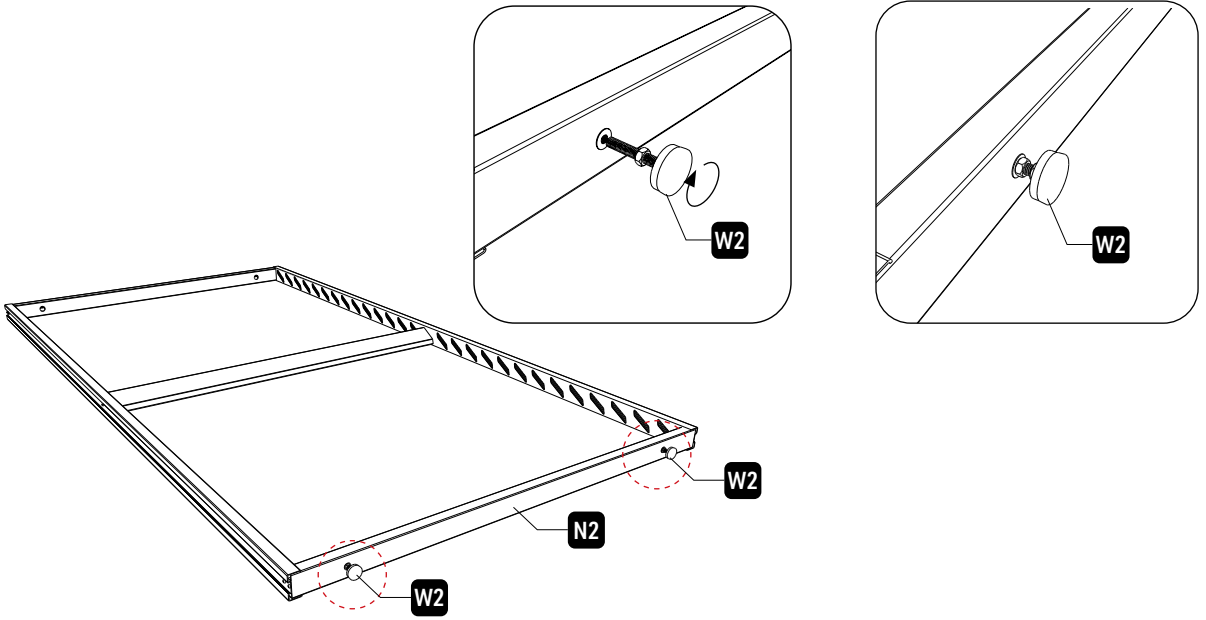


6



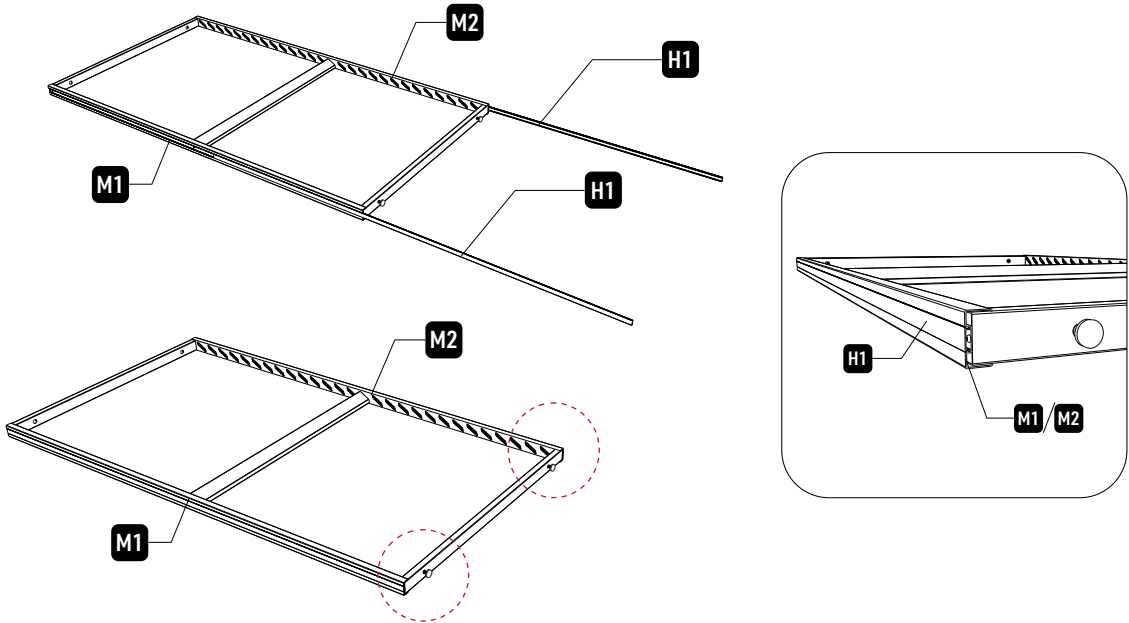




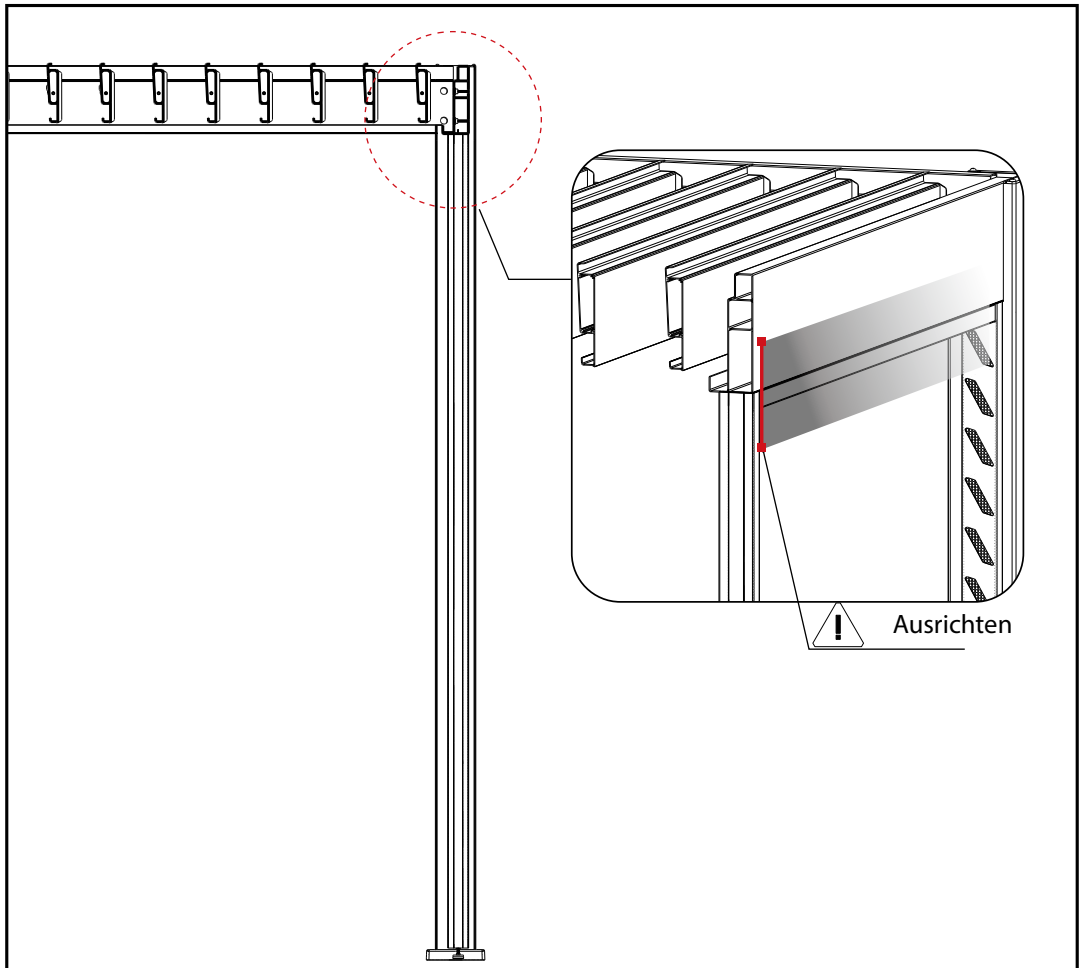
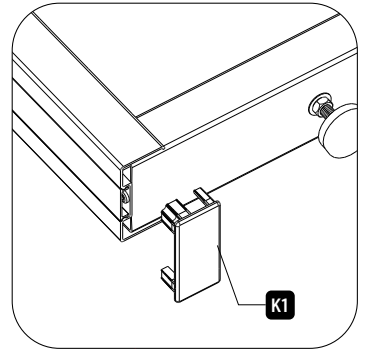
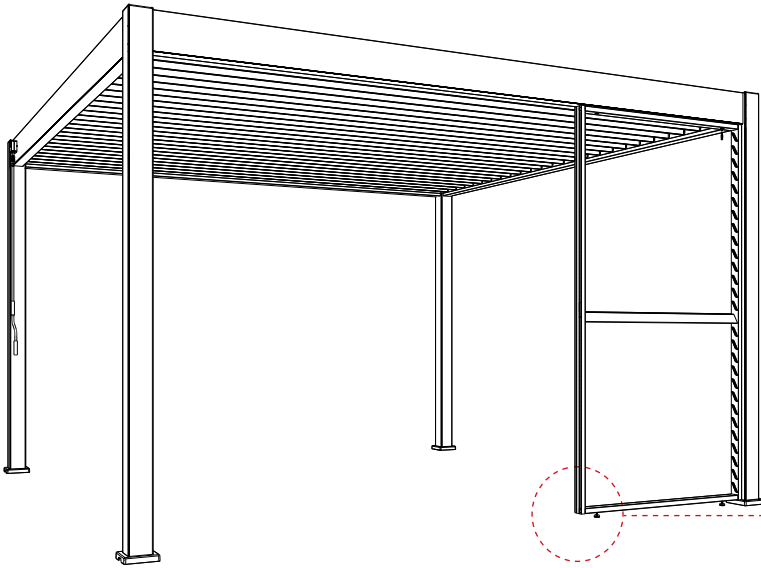







8

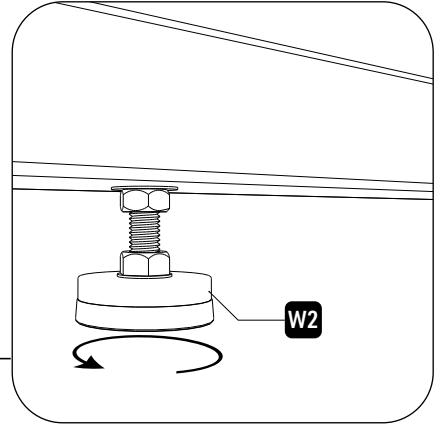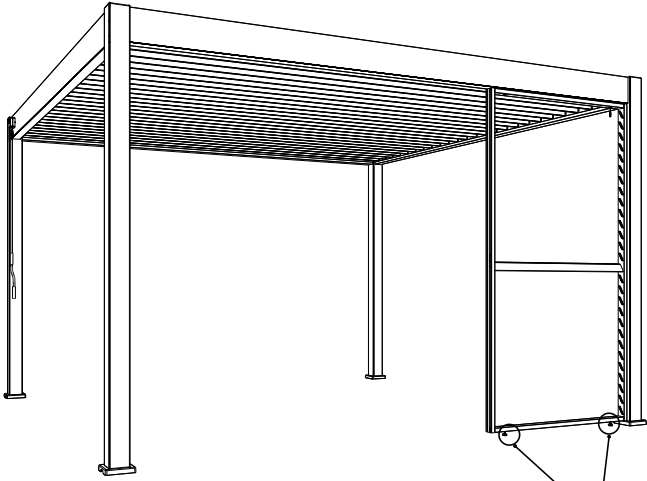

9

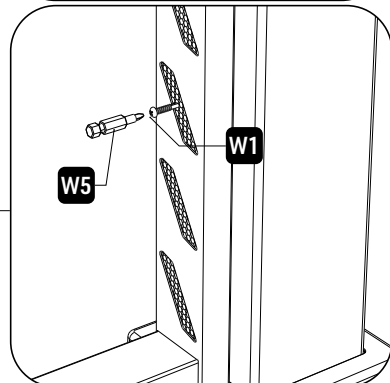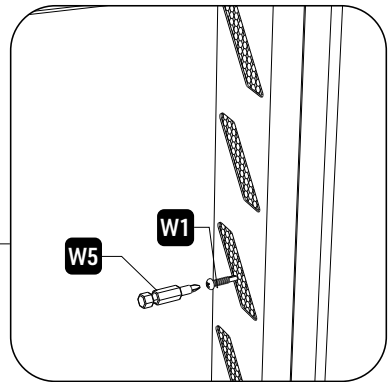
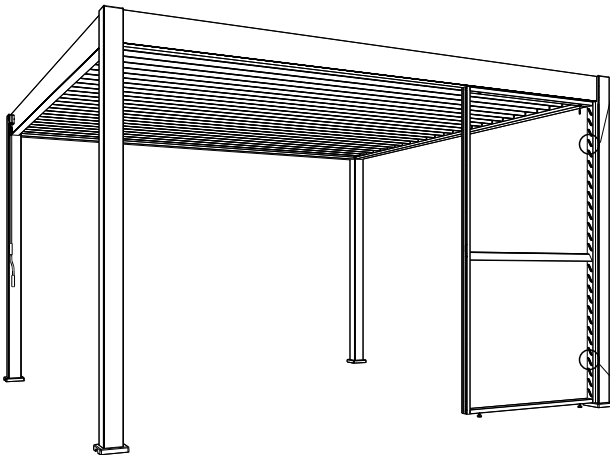


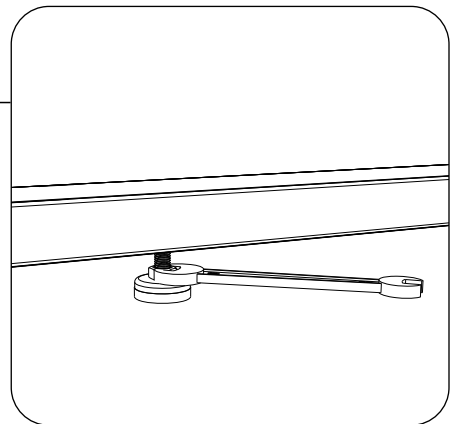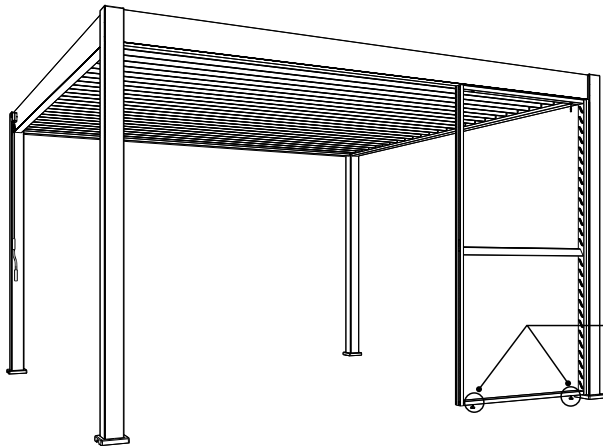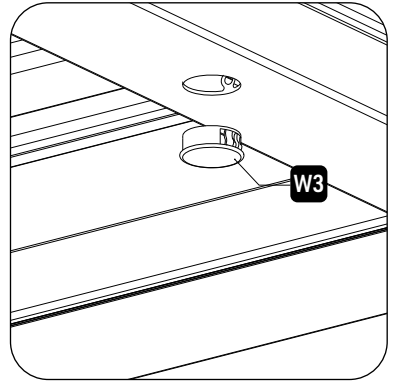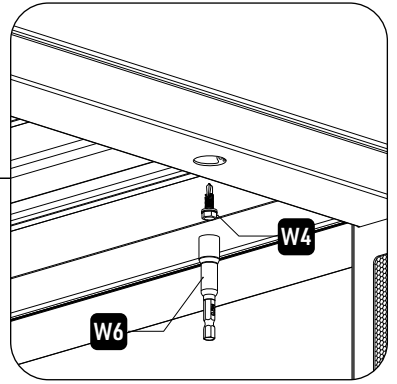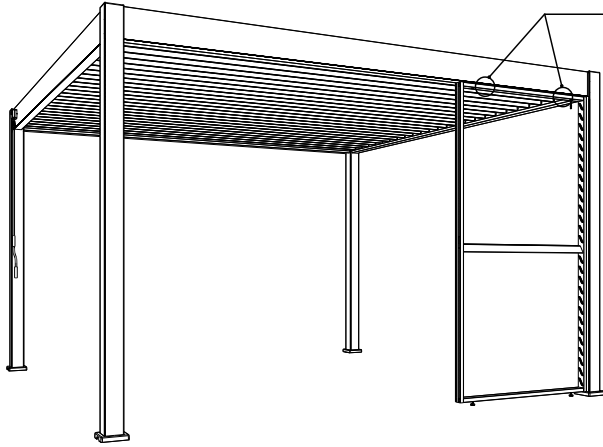

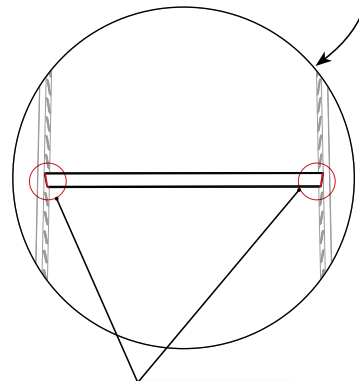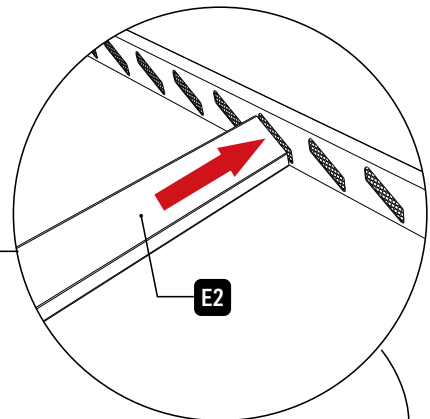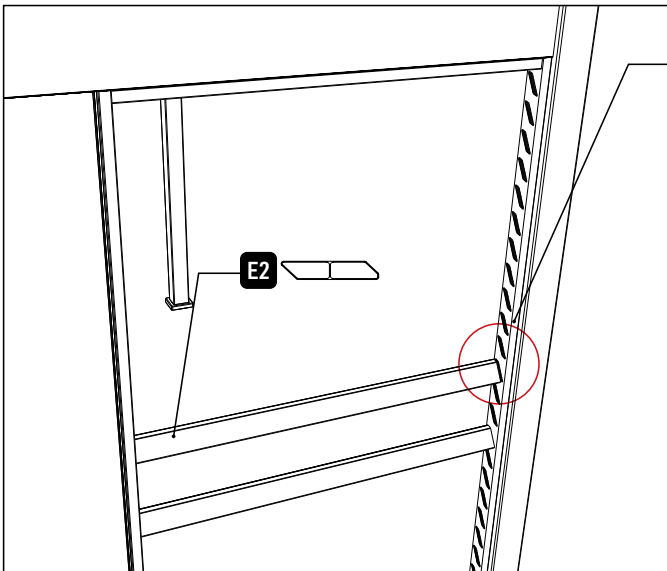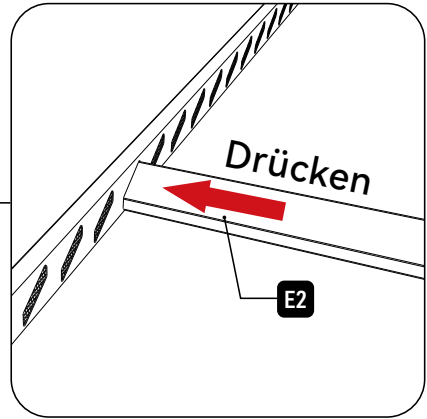
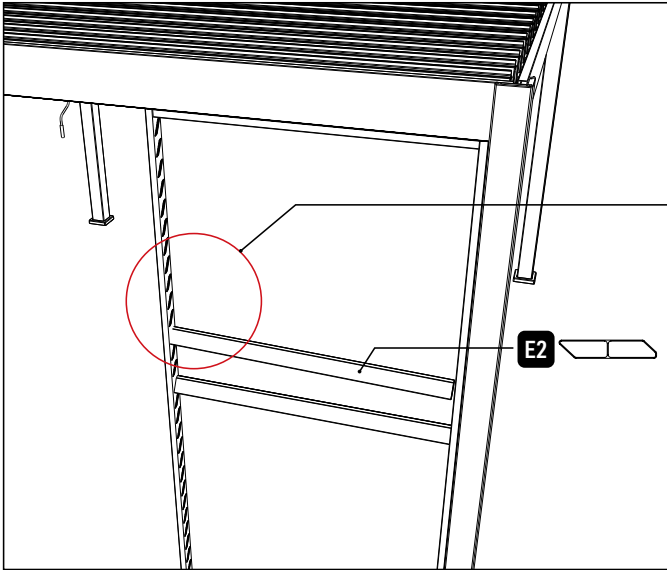



in den
Schaumstoff
stecken


Erweiterung+1

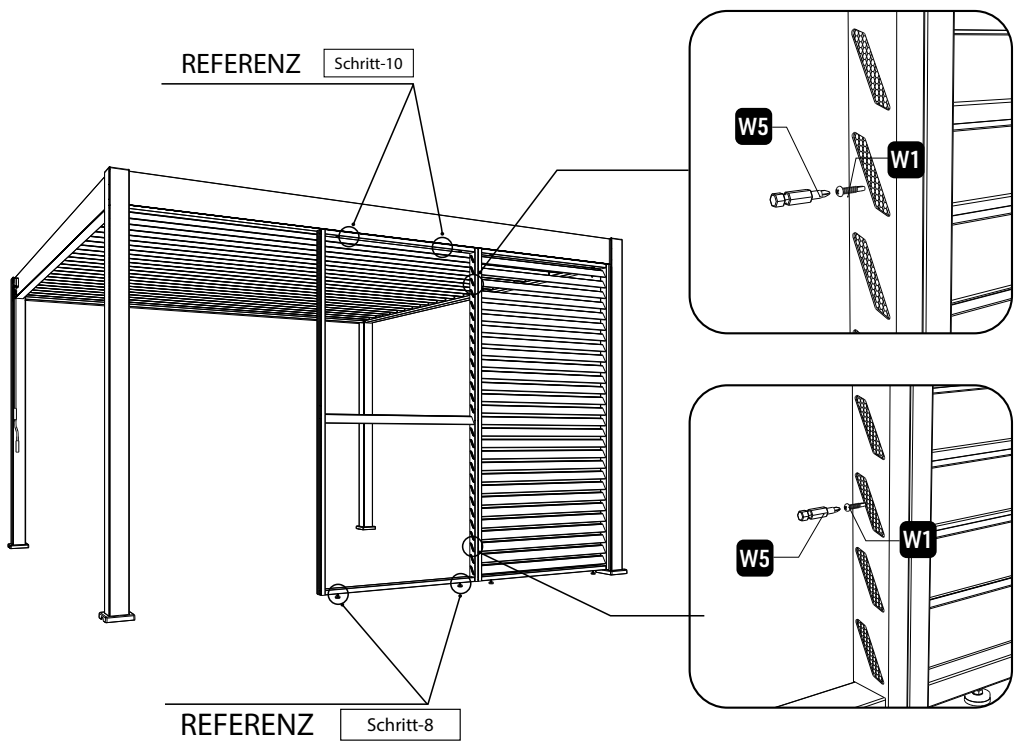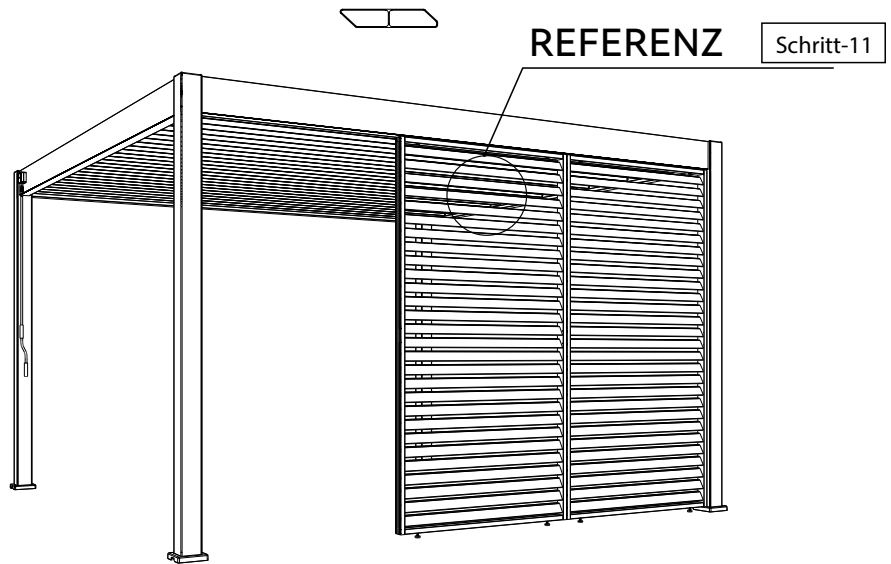

Erweiterung+2

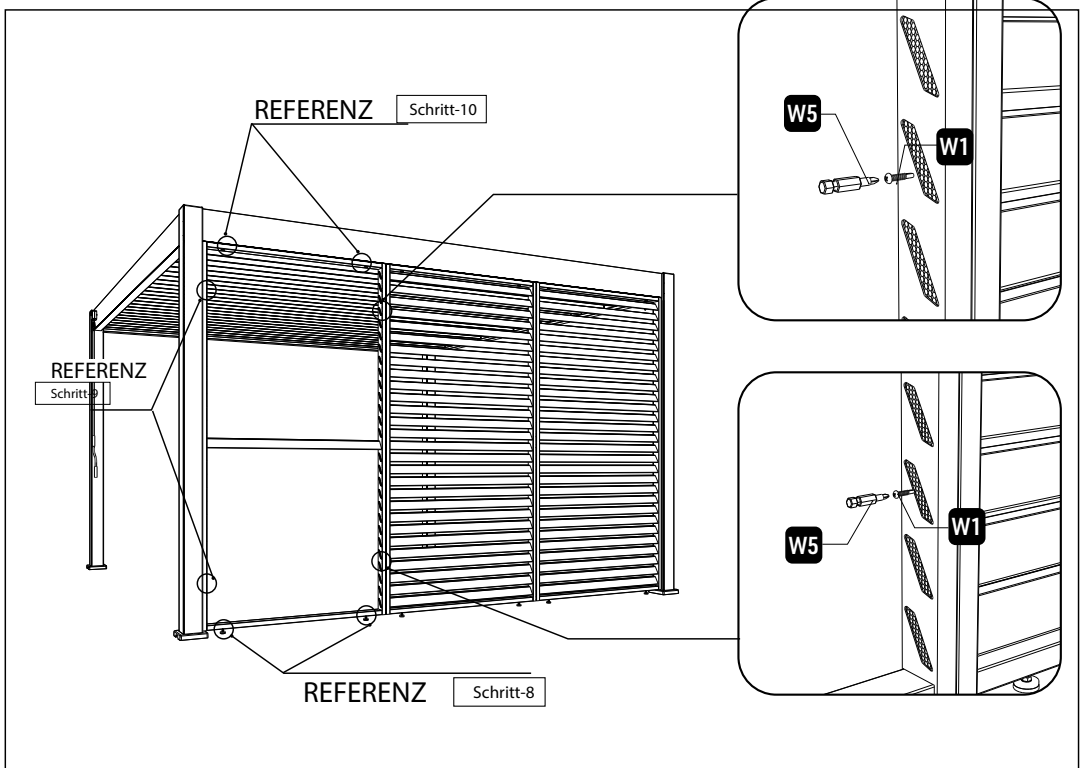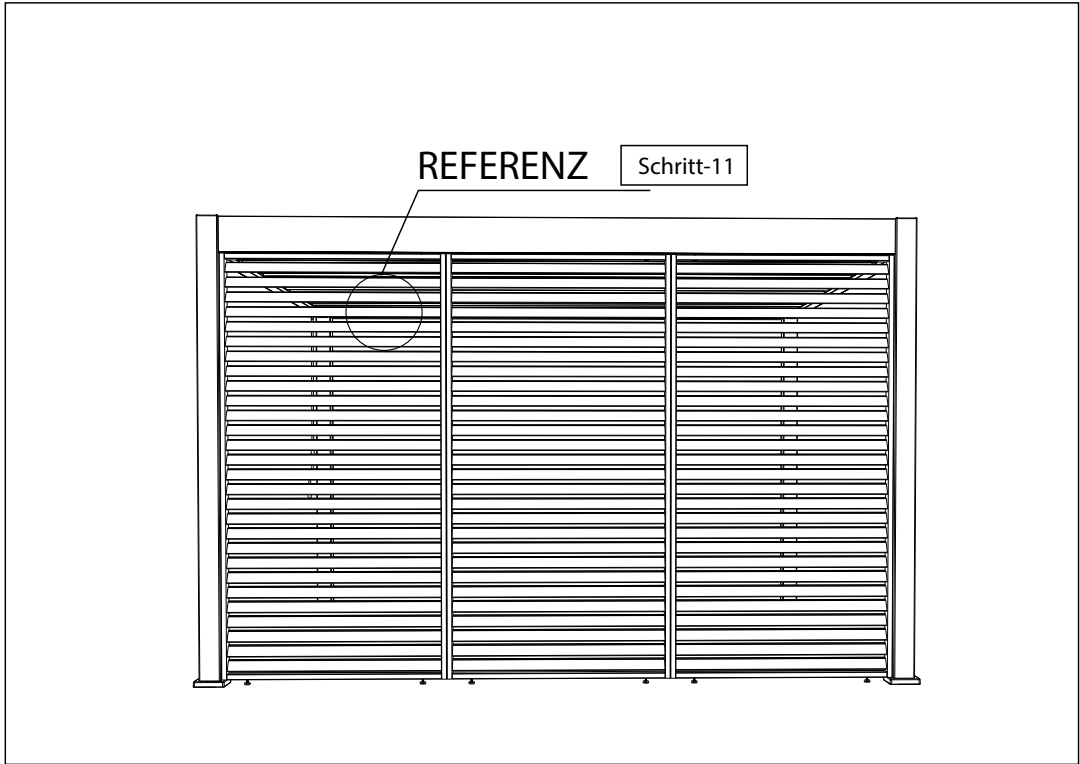

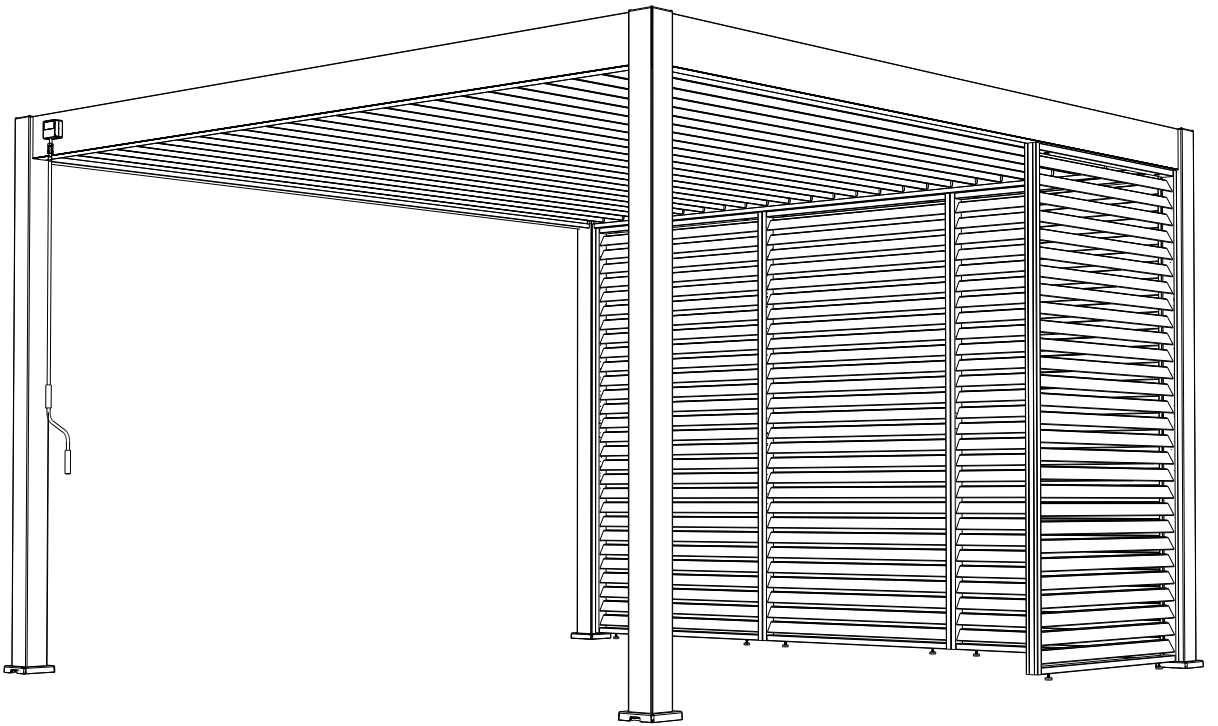

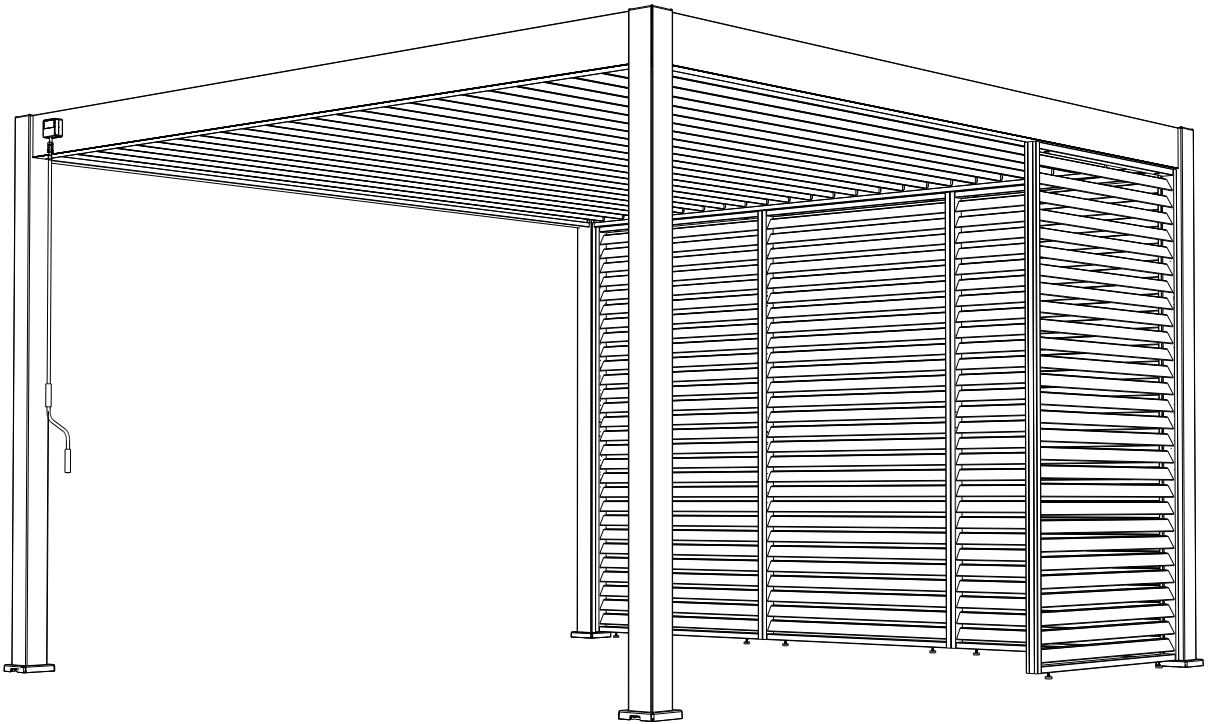


Horizontal Privacy Panel

Assembly Instructions - EN


Horizontal Privacy Panel

Please read the following instructions completely before you begin assembly. Any errors made during installation are not covered by the product's warranty. If you have any questions during the installation process, please call us .

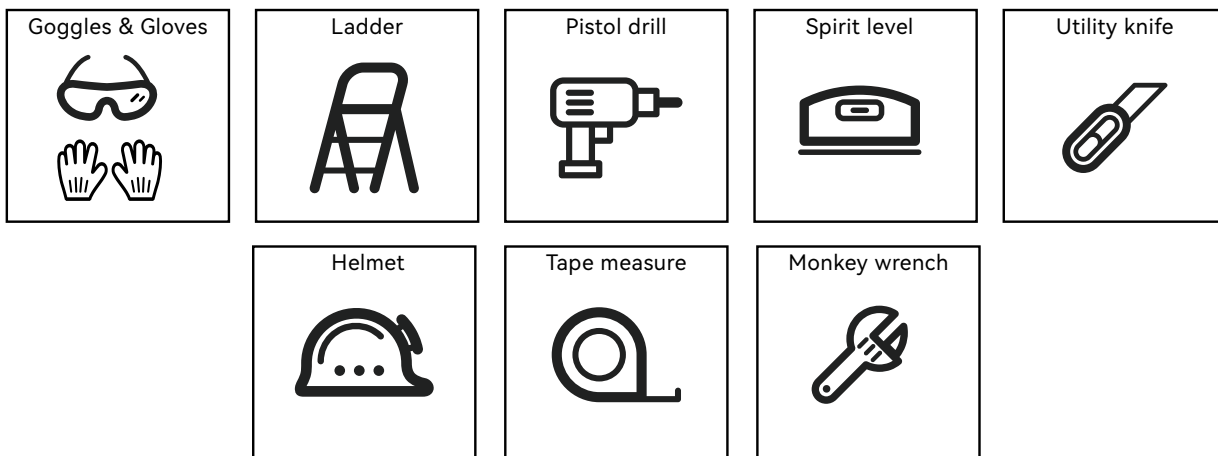








NECESSARY TOOLS AND SAFETY GEAR(NOT SUPPLIED)



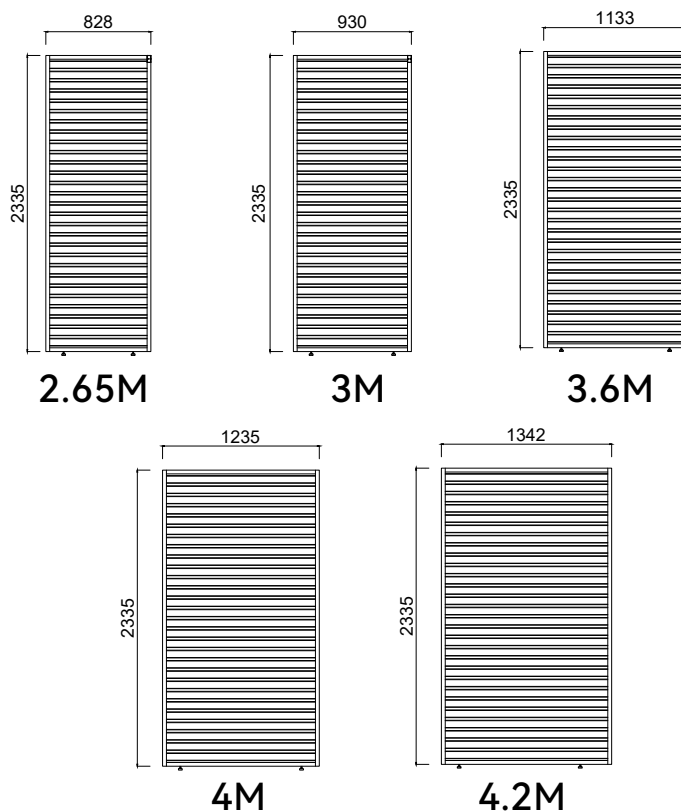







2D&3D FOOTING MEASUREMENT




CARTON

REF	ICON	QTY
M1		1
M2		1
N1		1
N2		1
H1		2
E1	 	1
E2	 	27


REF	ICON	QTY
W1	 3.9x25mm	14
W2		2
W3		2

REF	ICON	QTY
W4	  5x19 8mm	2
W5	 PH2	1
W6	 8mm	1
K1		2


1

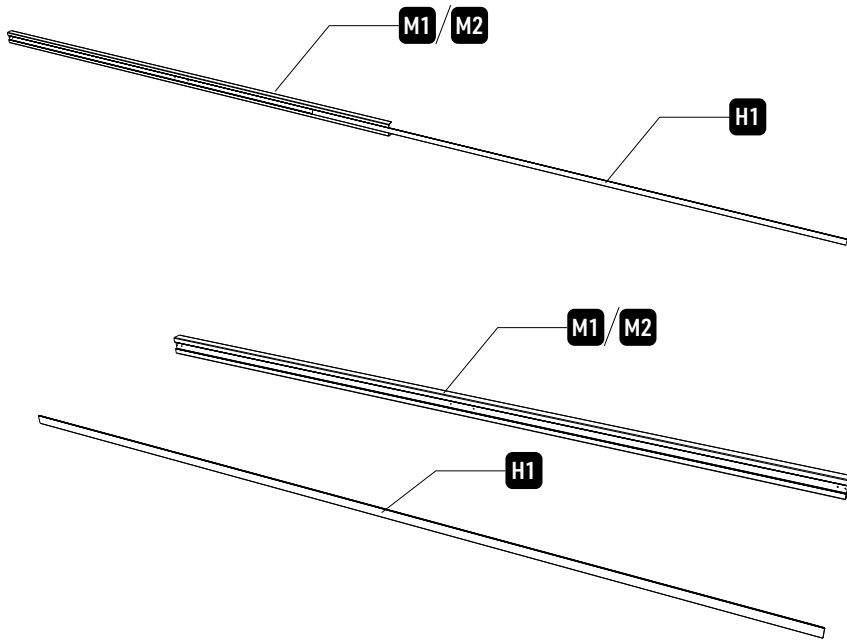


2

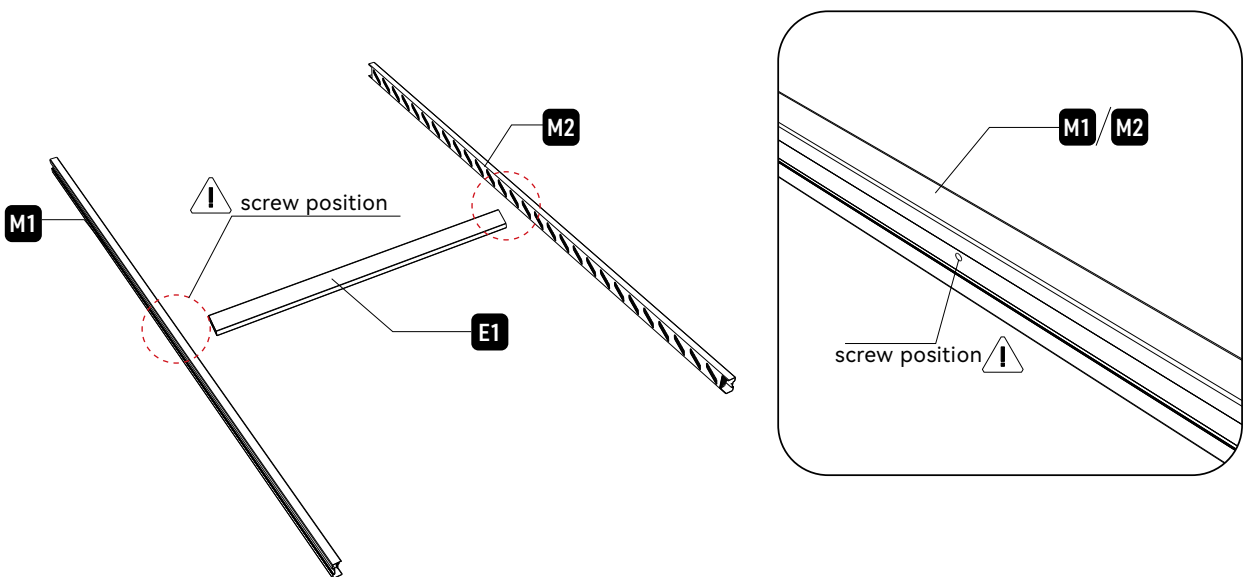


3

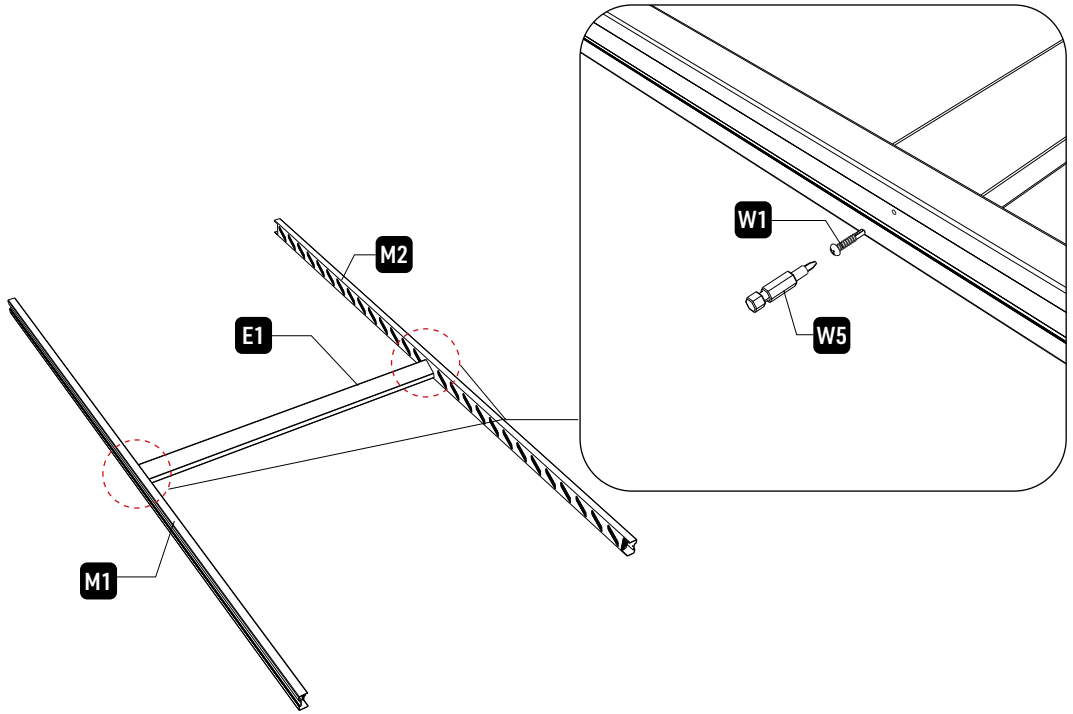


4



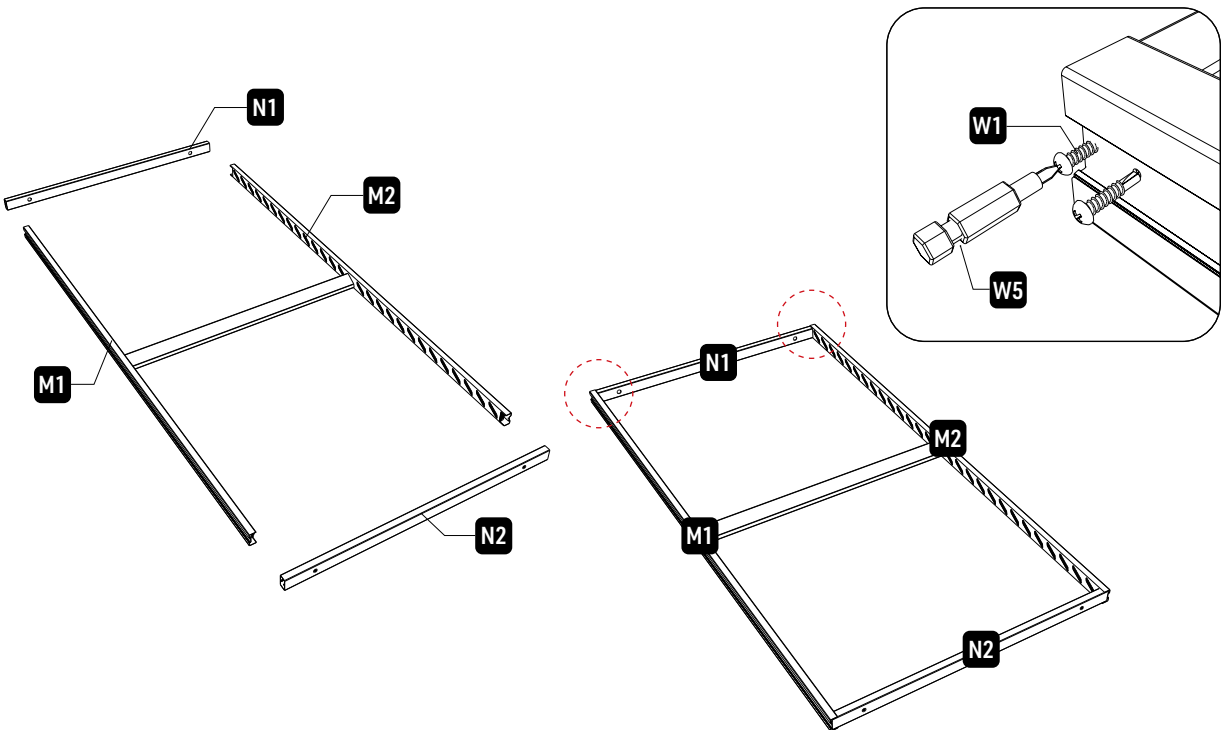


5


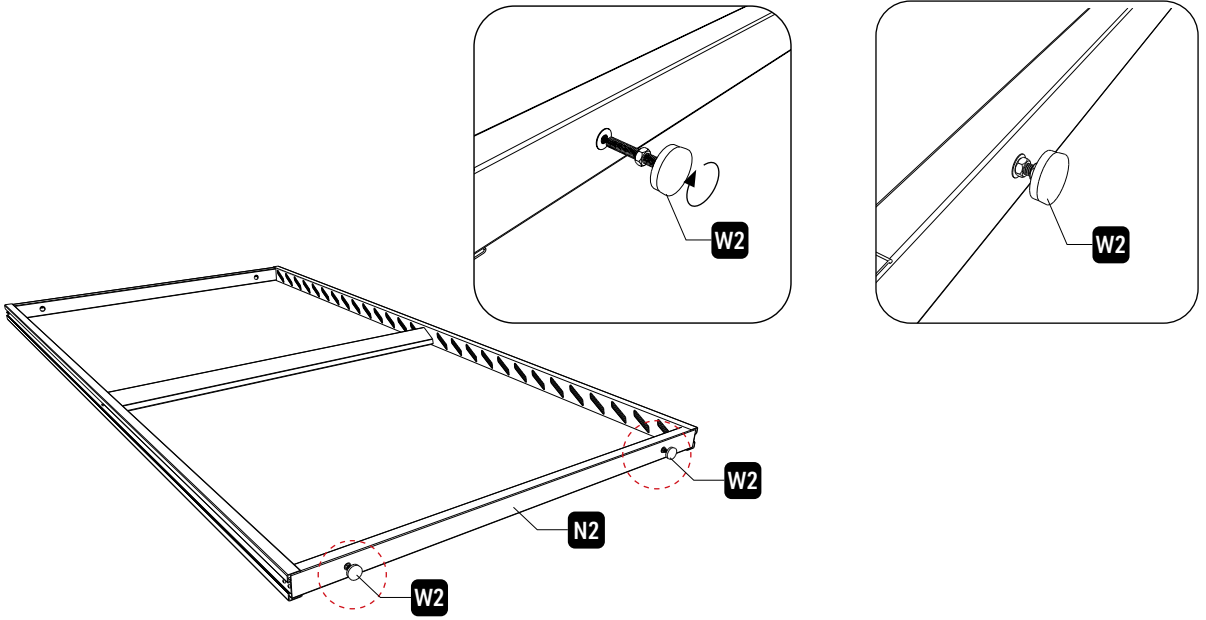


6



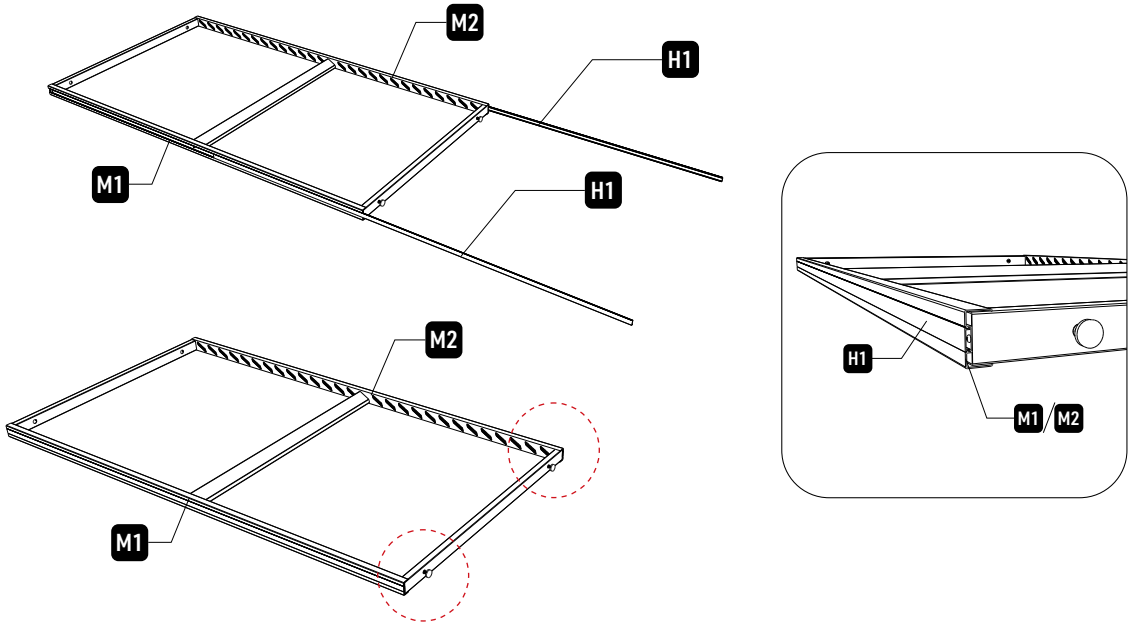




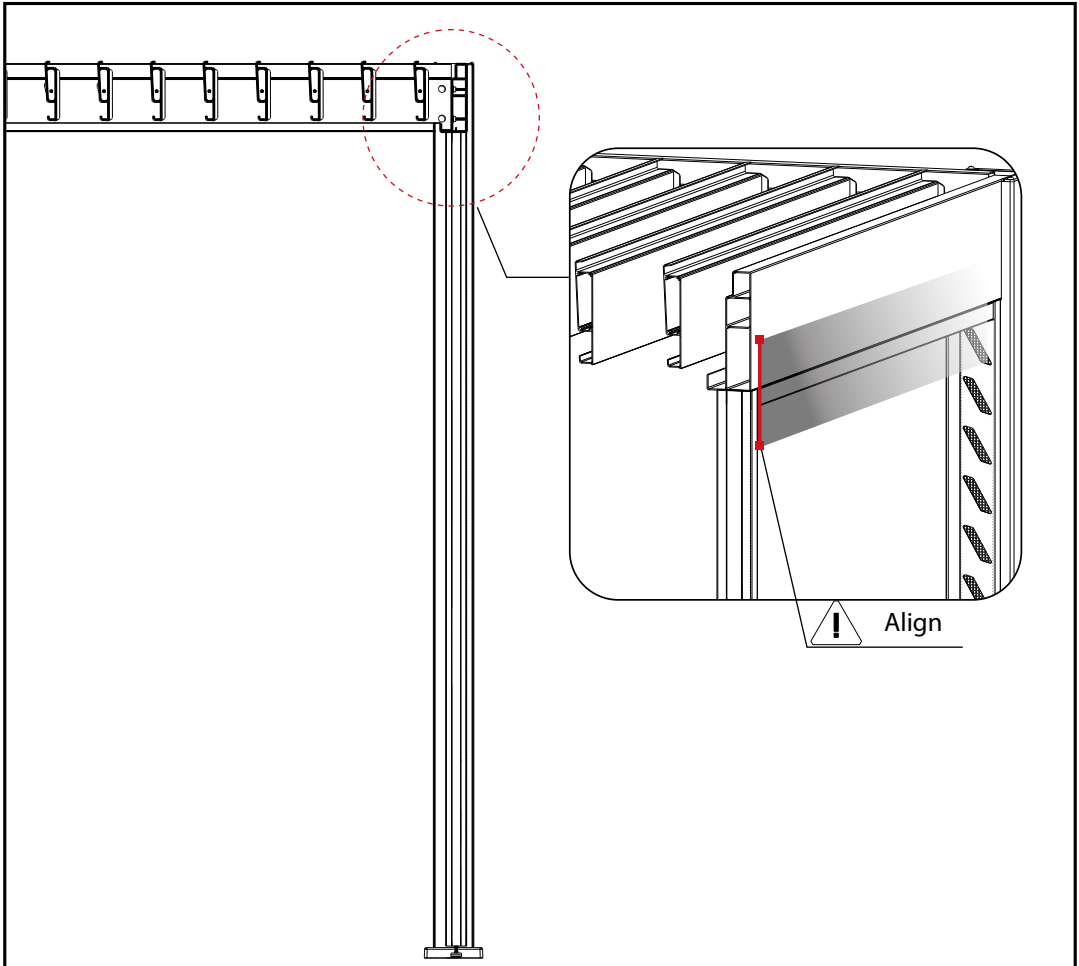
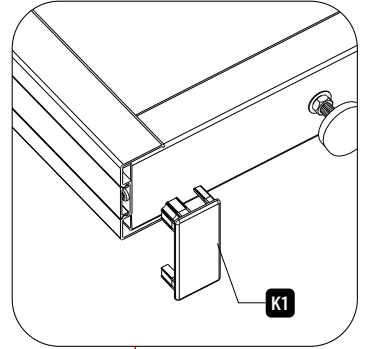
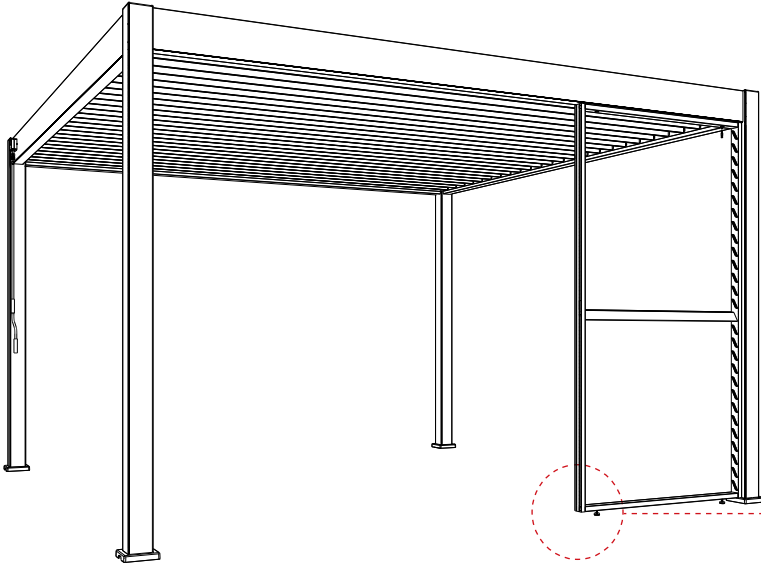







8

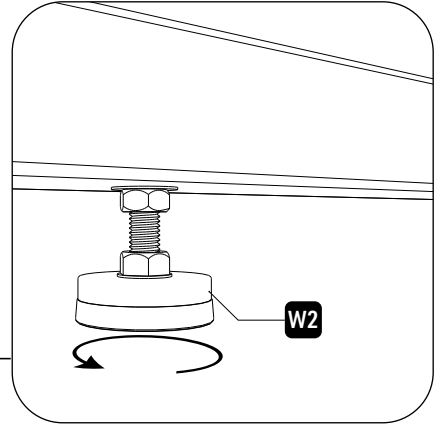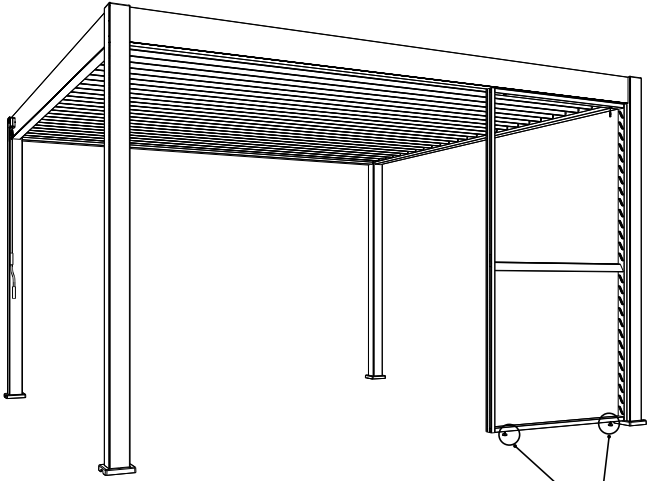

9

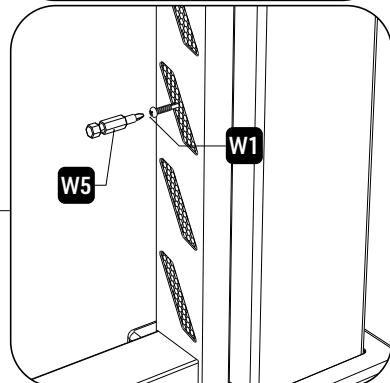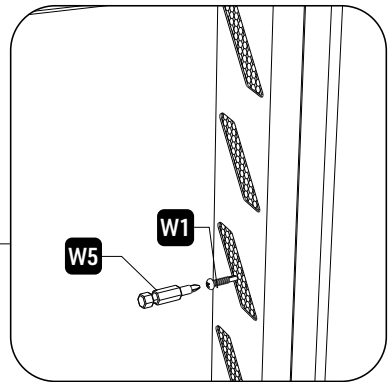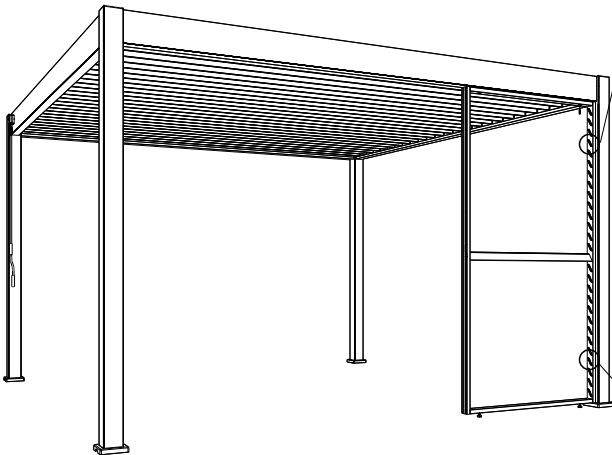

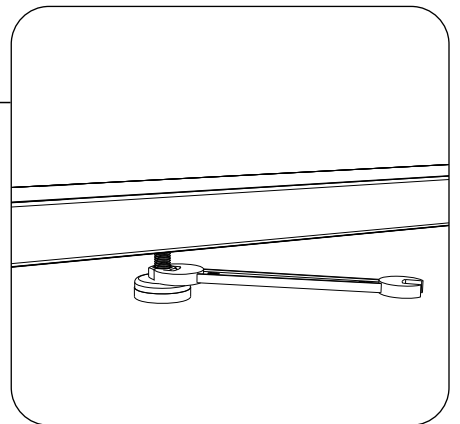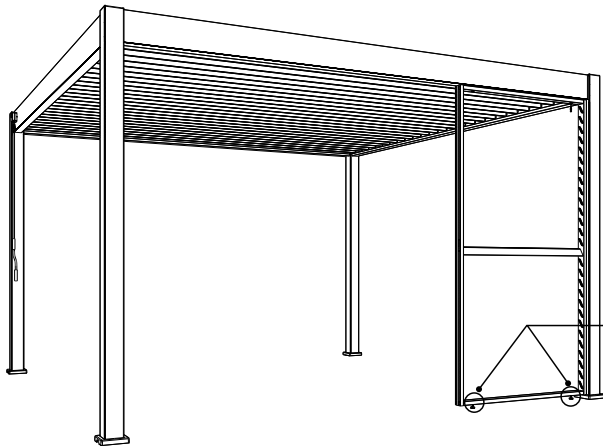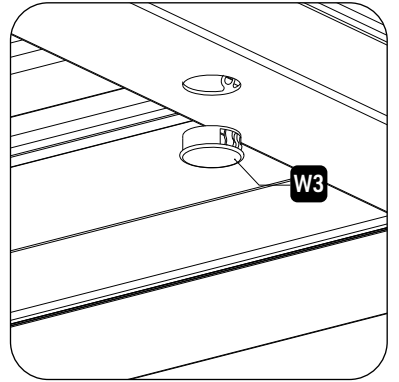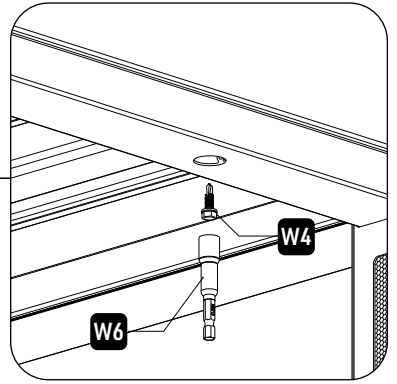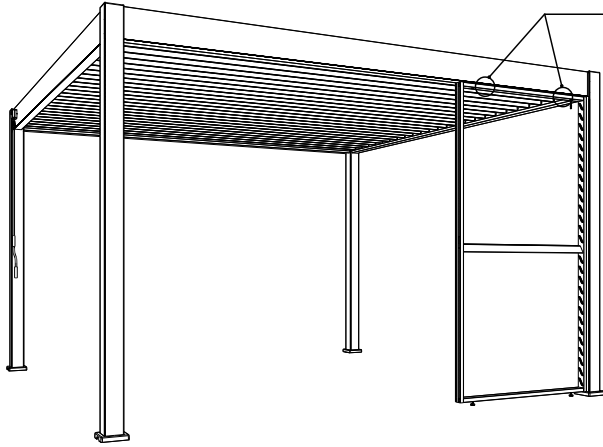

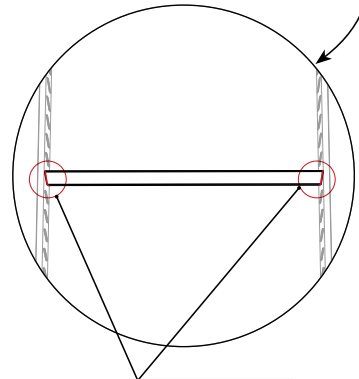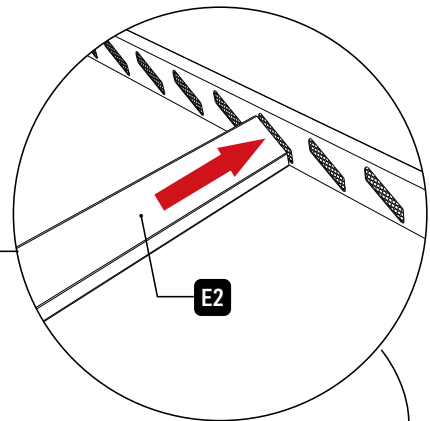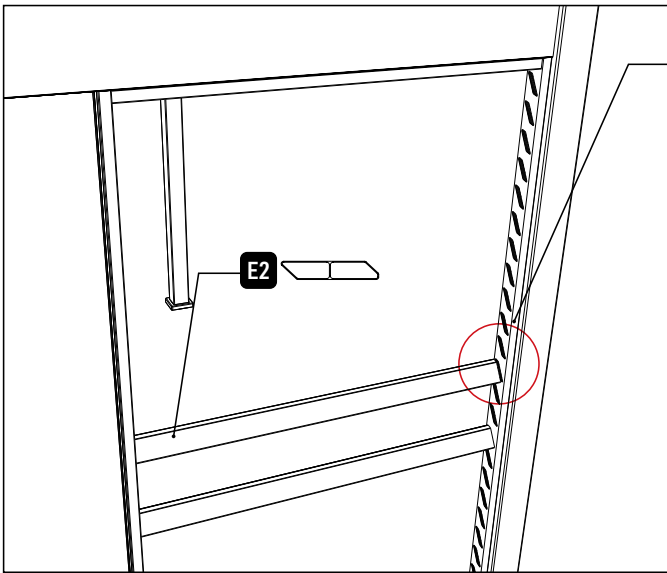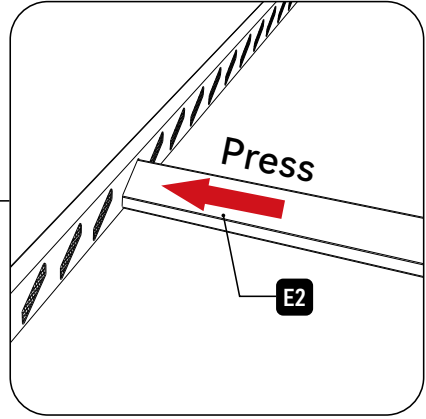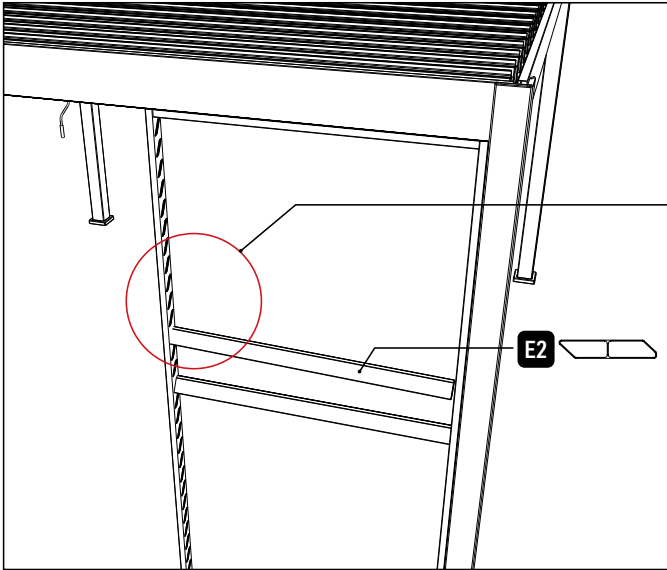

Stuck In Sponge

