

# **Verstellbare horizontale Lamellenwand**

Montageanleitung - DE


# Verstellbares horizontales Sichtschutzpaneel

Bewahren Sie die Anleitung während der gesamten Lebensdauer des Produkts auf. Bitte lesen Sie die Anleitung vor dem Zusammenbau aufmerksam durch. Der Nutzer haftet für Schäden oder Verletzungen, die durch unsachgemäße Verwendung verursacht werden.


## Zusätzlich benötigte Werkzeuge und Sicherheitskleidung für die Installation (nicht enthalten)



## 2D&3D FUNDAMENTMESSUNG

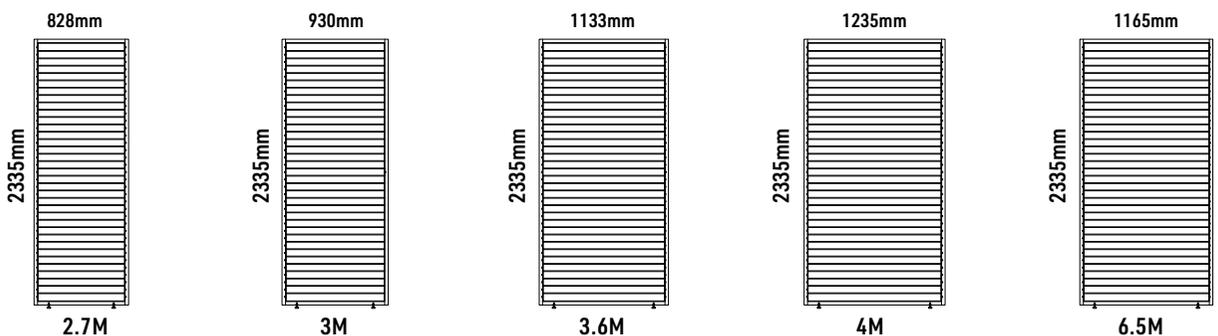

# KARTON

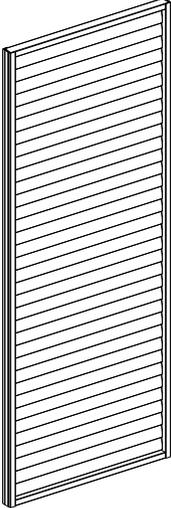
| Referenz | Teile   | Menge    |
|----------|---|----------|
| <b>A</b> |  | <b>1</b> |

| Referenz  | Teile   | Menge     |
|-----------|---|-----------|
| <b>#1</b> | <br>5x19      8mm | <b>10</b> |
| <b>#2</b> |                  | <b>2</b>  |

| Referenz  | Teile  | Menge     |
|-----------|--|-----------|
| <b>#3</b> |    | <b>10</b> |
| <b>#4</b> |  | <b>1</b>  |



## Schritt 1

Montieren Sie den verstellbaren Sockel unter dem unteren Rahmen der Sichtschutzwand.

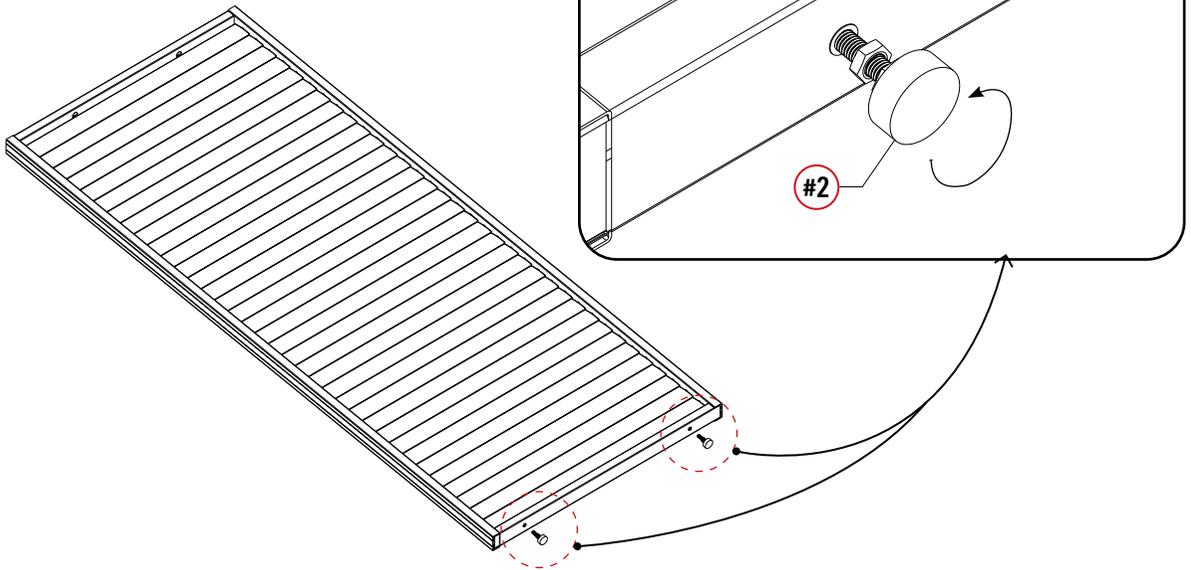


## Schritt 2

- Platzieren Sie das Sichtschutzpaneel unter der Pergola wie in der Abbildung unten gezeigt.
- Am Seitenrahmen des Sichtschutzes befinden sich Löcher. Bitte beachten Sie, dass die Seite mit den Löchern an der Außenseite der Pergola sein sollte.
- Achtung! Das Sichtschutzpaneel sollte mit der Außenseite des Balkens ausgerichtet sein. Um zu verhindern, dass die Lamellen durch Wind bewegt werden, stellen Sie sicher, dass das Paneel richtig installiert wird und die Lamellen so ausgerichtet sind, dass der Wind nicht darunter greifen kann.

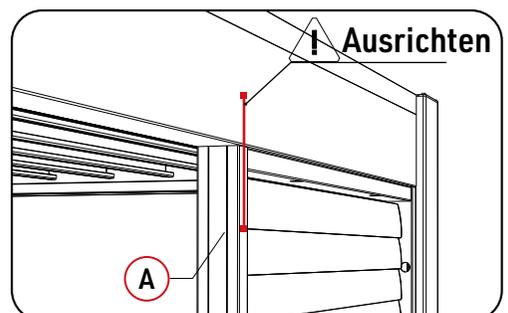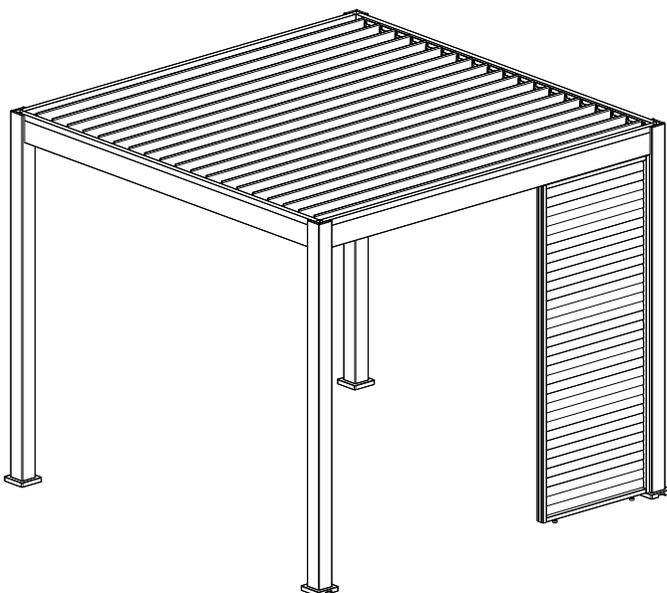


## Schritt 3

Um die Unterseite des Sichtschutzes auf dem Boden zu fixieren, befestigen Sie bitte den verstellbaren Sockel mit dem Schraubenschlüssel.

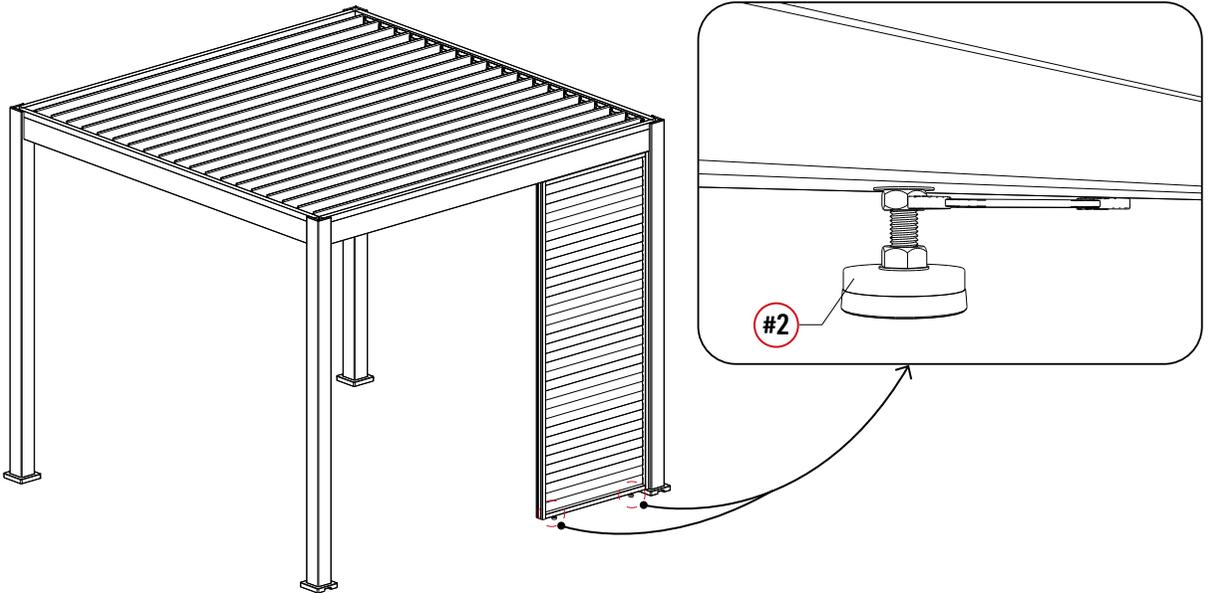



## Schritt 4

Befestigen Sie den oberen Teil der Sichtschutzwand mit der Pergola mit den mitgelieferten Schrauben.

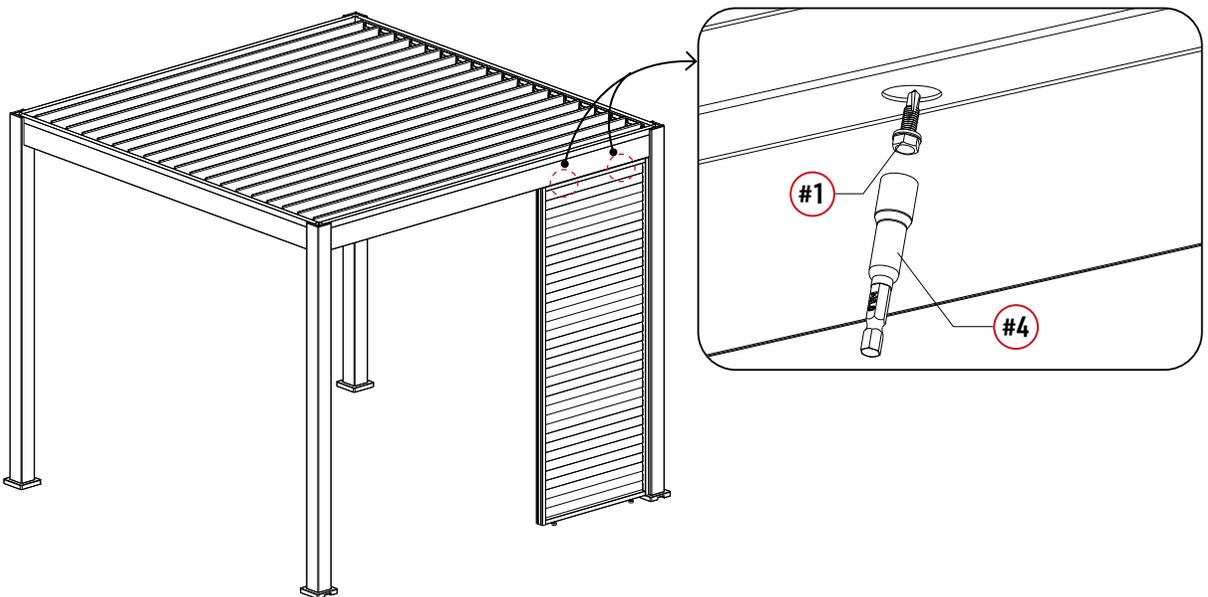



## Schritt 5

Befestigen Sie den Seitenrahmen der Sichtschutzwand mit den mitgelieferten Schrauben.

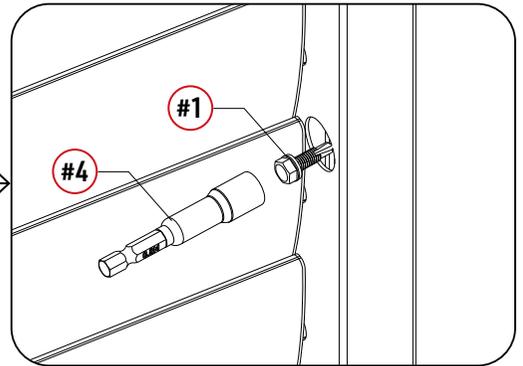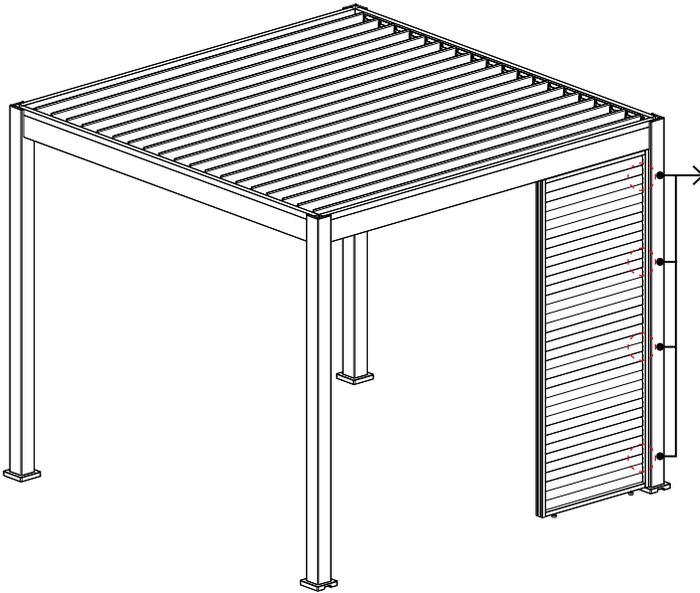



## Schritt 6

Decken Sie die Löcher am Sichtschutzrahmen mit den mitgelieferten Kunststoffkappen ab.

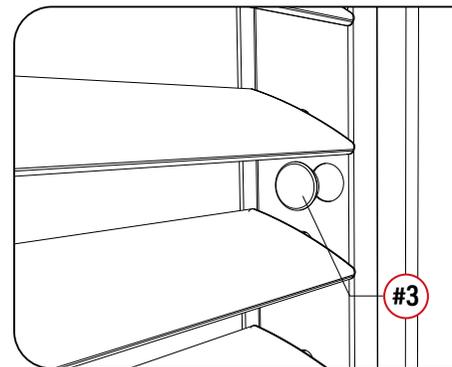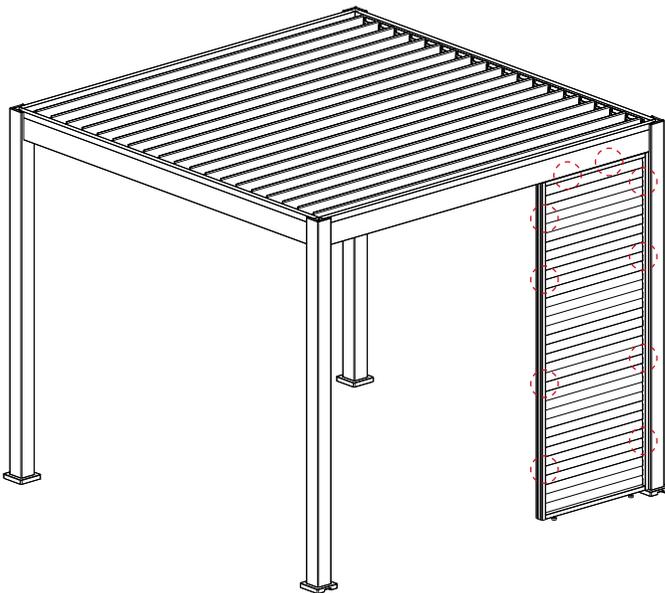


## Zwei oder mehr Sichtschutzwände installieren

Um zwei oder mehr Sichtschutzwände zu installieren, wiederholen Sie bitte dieselben Installationsschritte wie oben.

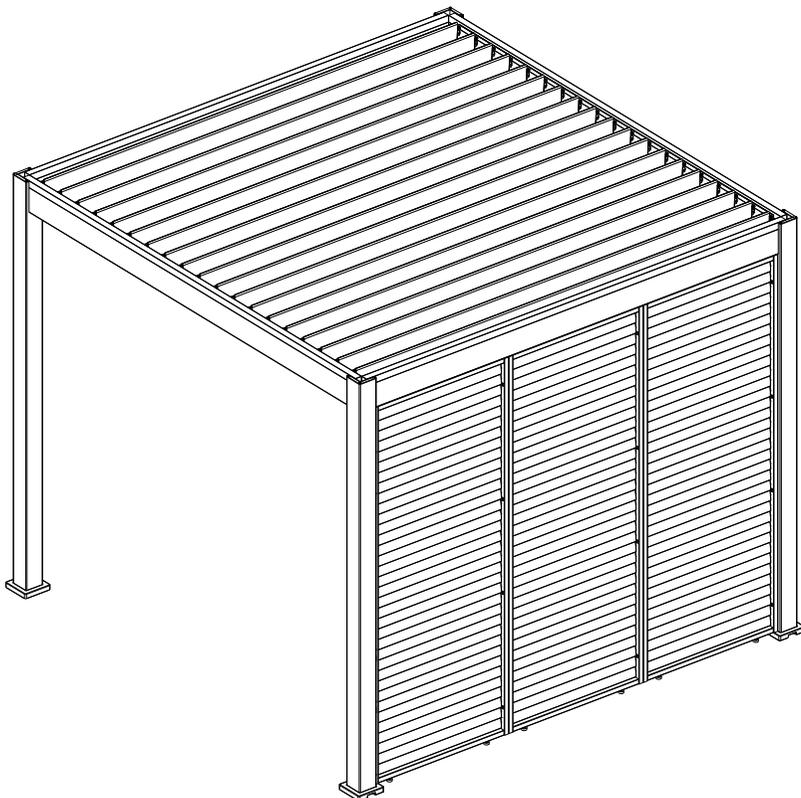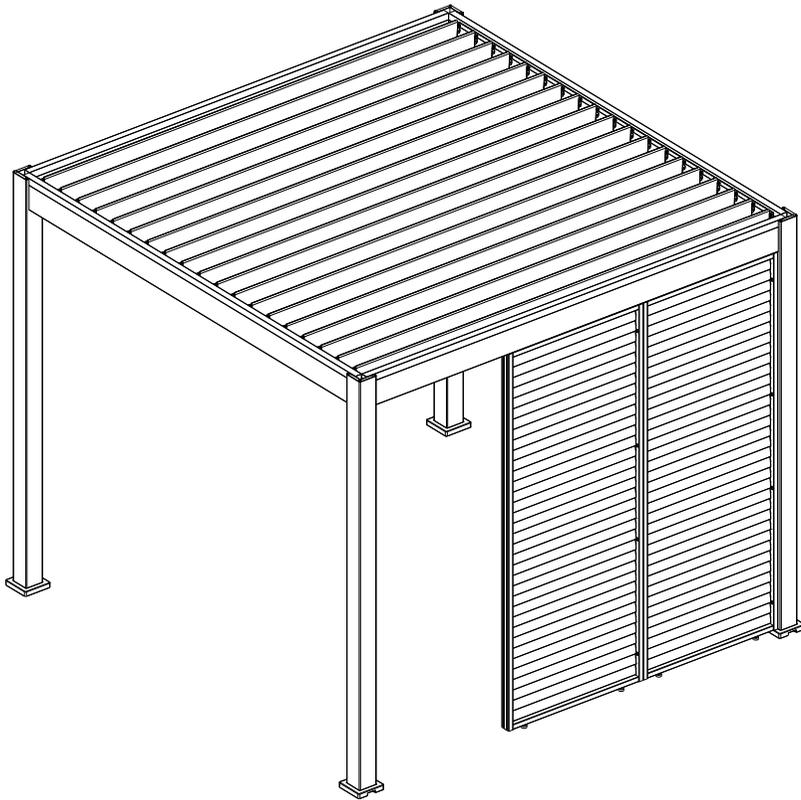






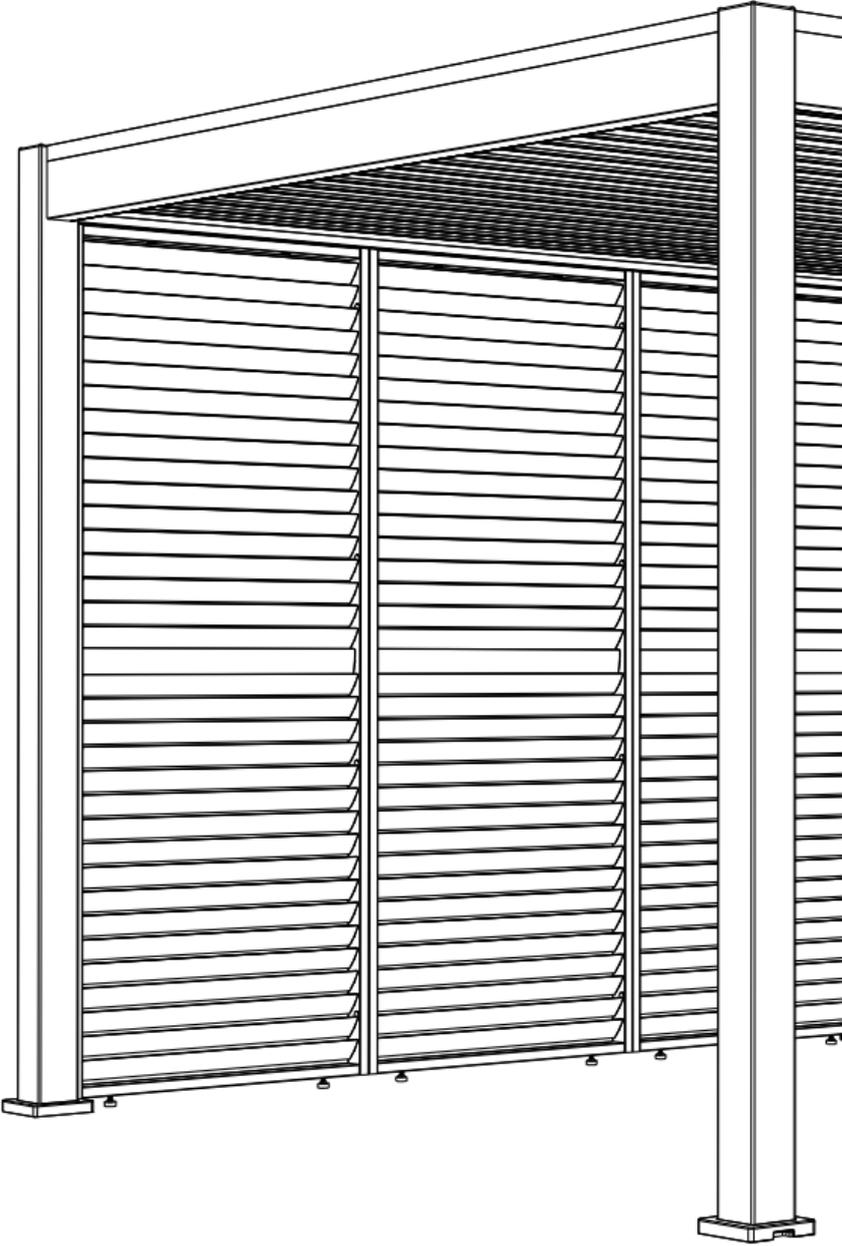

**Rotatable Horizontal**

Asser

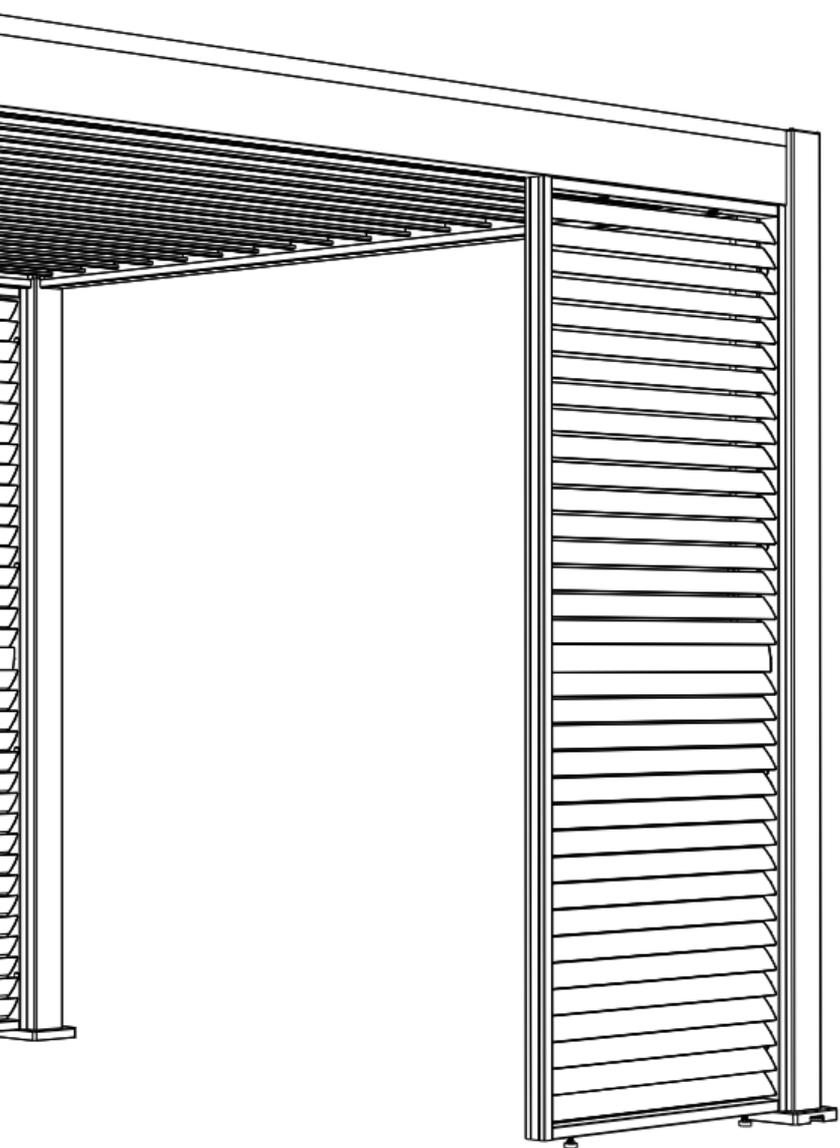


# Horizontal Privacy Panel Assembly Instructions - EN


# Rotatable Horizontal Privacy Panel

Please read the following instructions completely before you begin assembly. Any errors made during installation are not covered by the product's warranty. If you have any questions during the installation process, please call us .


## NECESSARY TOOLS AND SAFETY GEAR (NOT SUPPLIED)

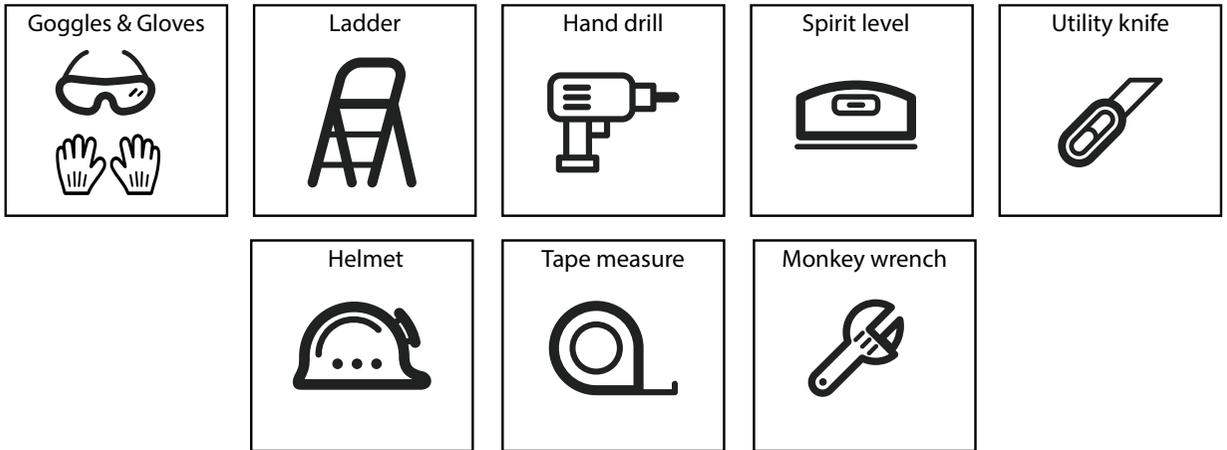

## 2D&3D FOOTING MEASUREMENT

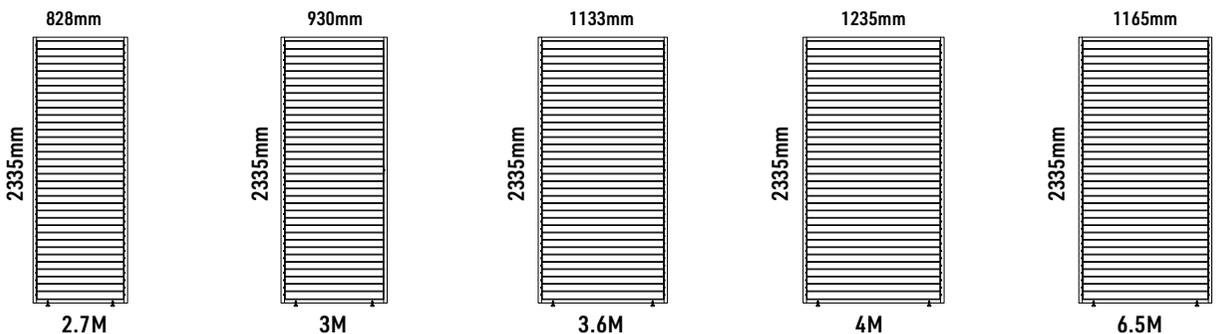

# CARTON

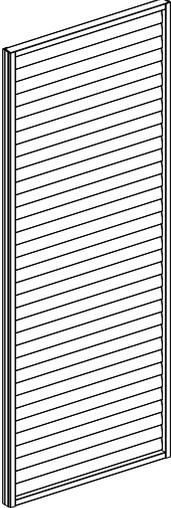
| Reference | Parts   | Quantity |
|-----------|---|----------|
| <b>A</b>  |  | <b>1</b> |

| Reference | Parts  | Quantity  |
|-----------|--|-----------|
| <b>#1</b> | <br>5×19      8mm | <b>10</b> |
| <b>#2</b> |                 | <b>2</b>  |

| Reference | Parts  | Quantity  |
|-----------|--|-----------|
| <b>#3</b> |    | <b>10</b> |
| <b>#4</b> |  | <b>1</b>  |




# STEP 1

Install the adjustable base under the bottom frame of the privacy panel

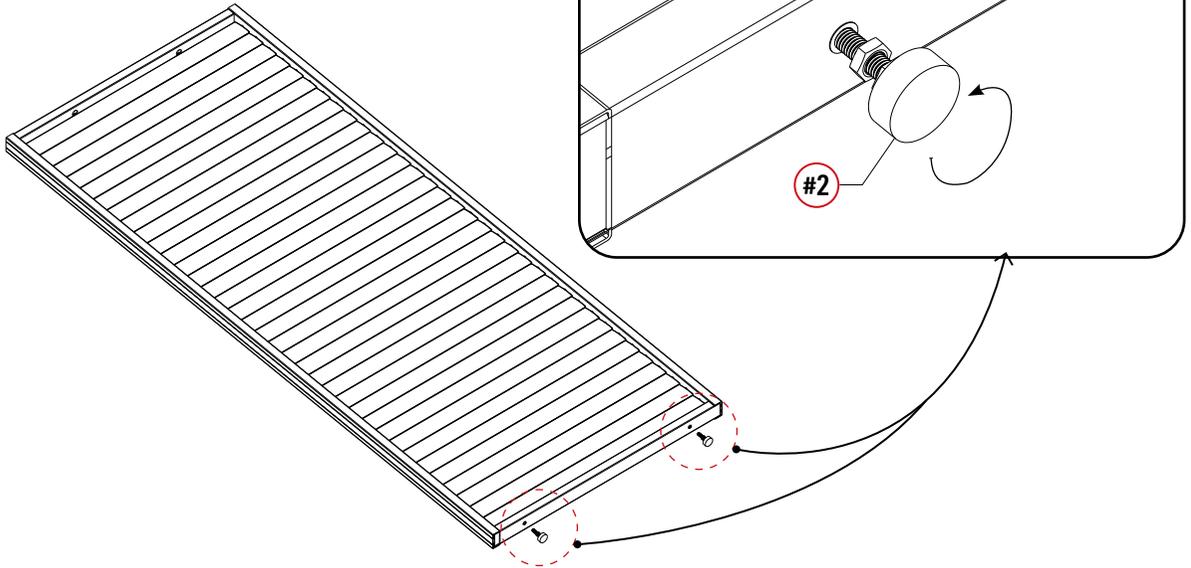


# STEP 2

- Place the privacy panel under the pergola as the diagram shows below.
- There are holes on the side frame of the privacy panel, please note that the side with holes should be at the outward face of the pergola.
- Attention! The privacy panel should be aligned with the outer side of the beam. To prevent the slats from moving due to wind, ensure the panel is installed correctly with the slats positioned so that the wind does not blow under them.

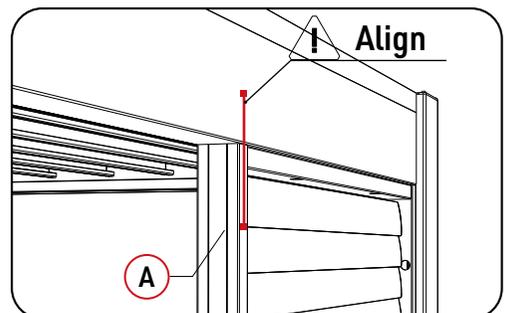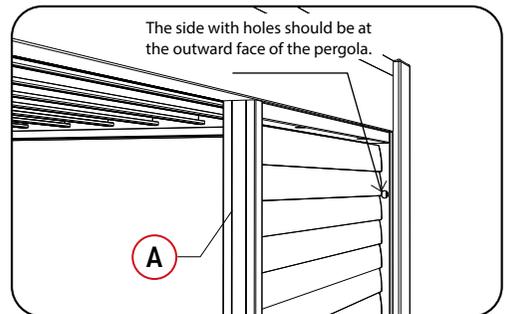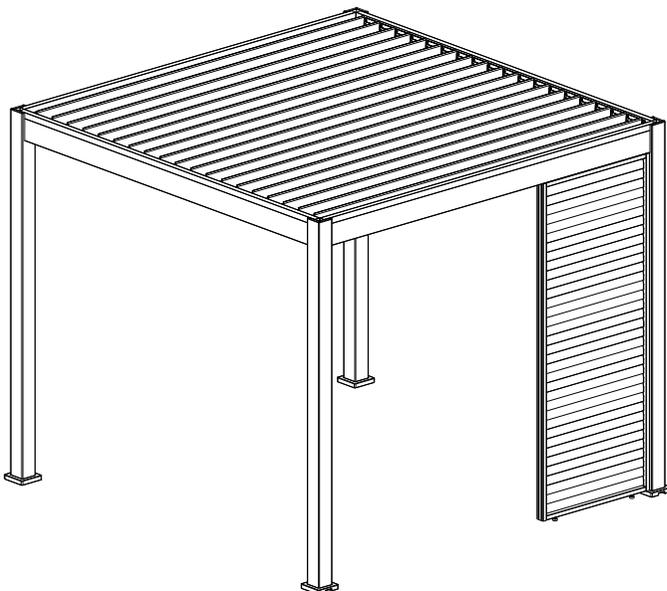


## STEP 3

To fix the bottom of the privacy panel on the ground, please fasten the adjustable base with the wrench .

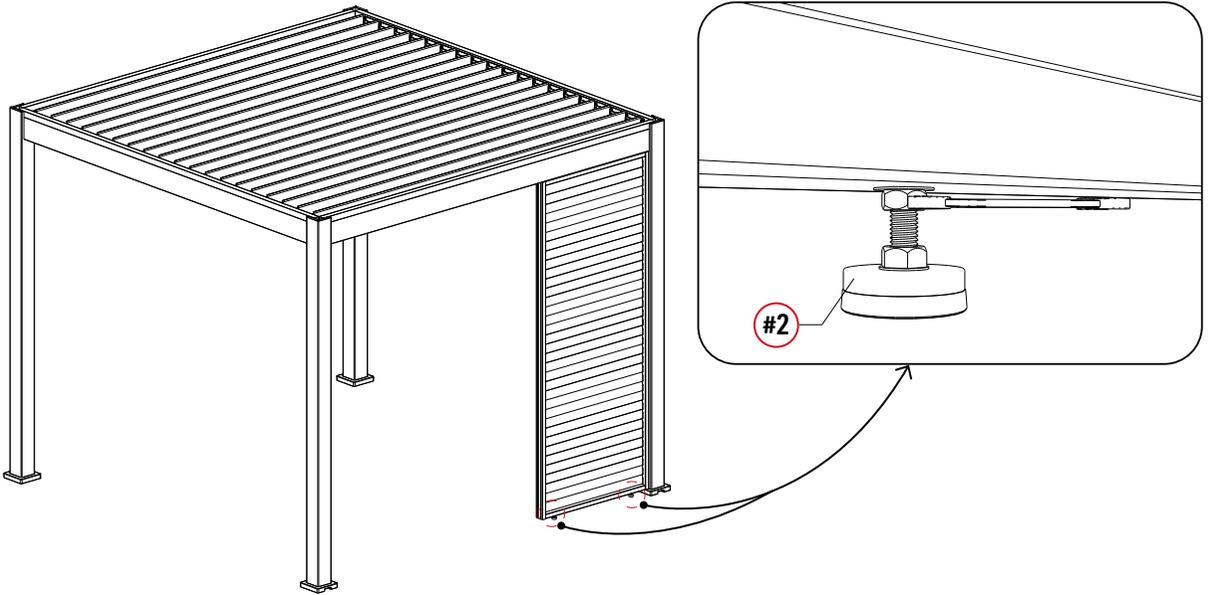



## STEP 4

Fix the upper part of the privacy panel with the pergola by using supplied screws.

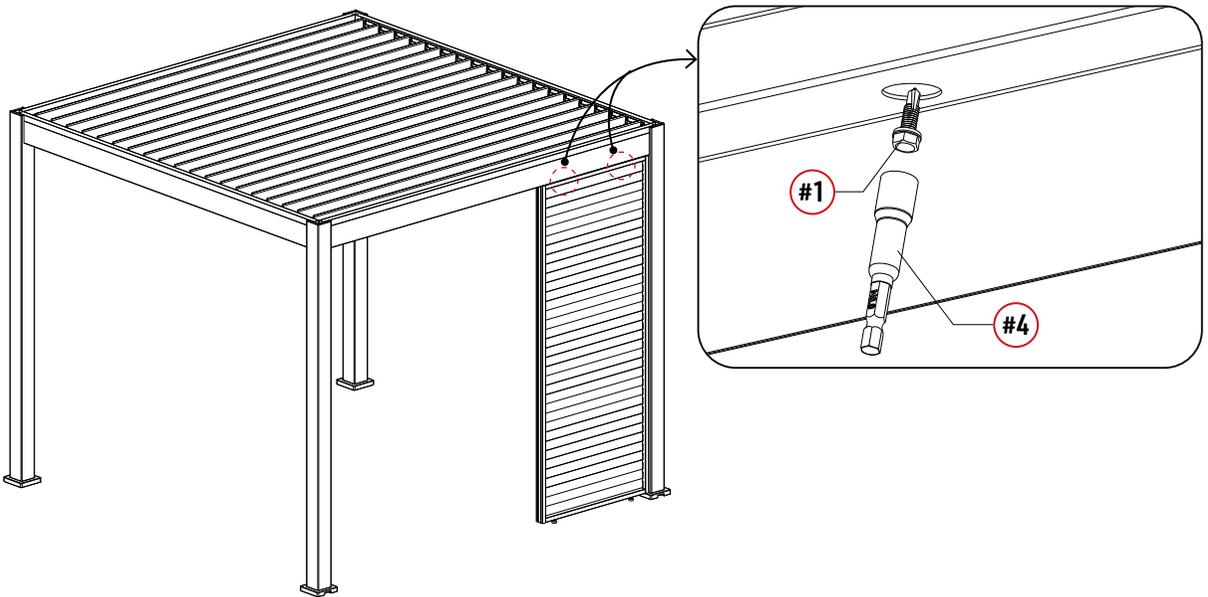



## STEP 5

Fasten the side frame of the privacy panel by using supplied screws.

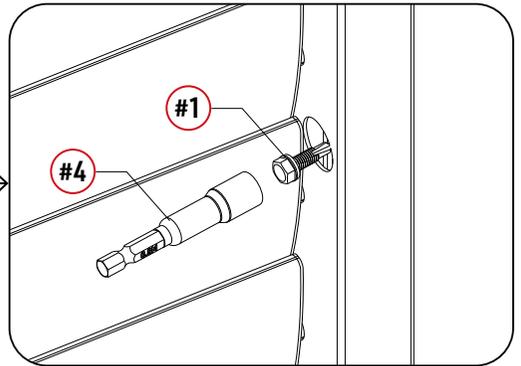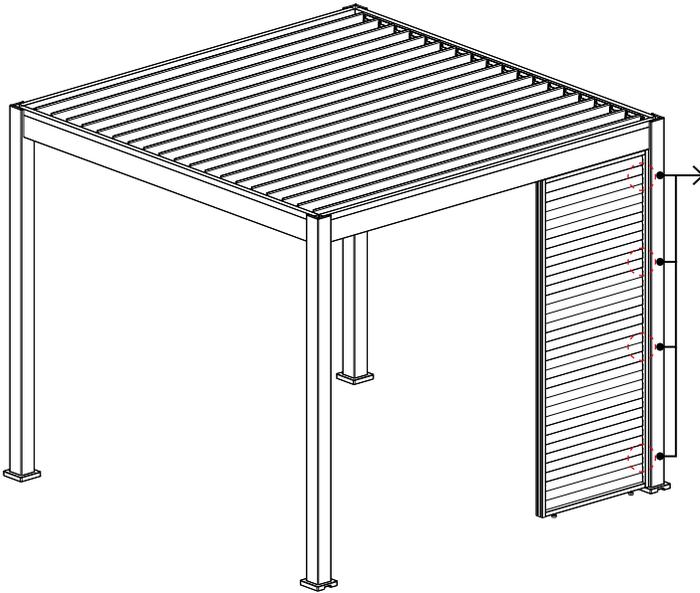

## STEP 6

Cover the holes on the privacy frame with the provided plastic caps.

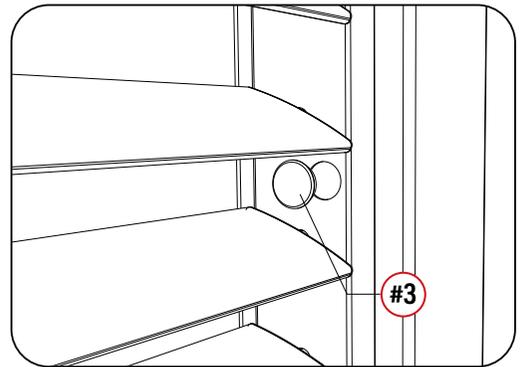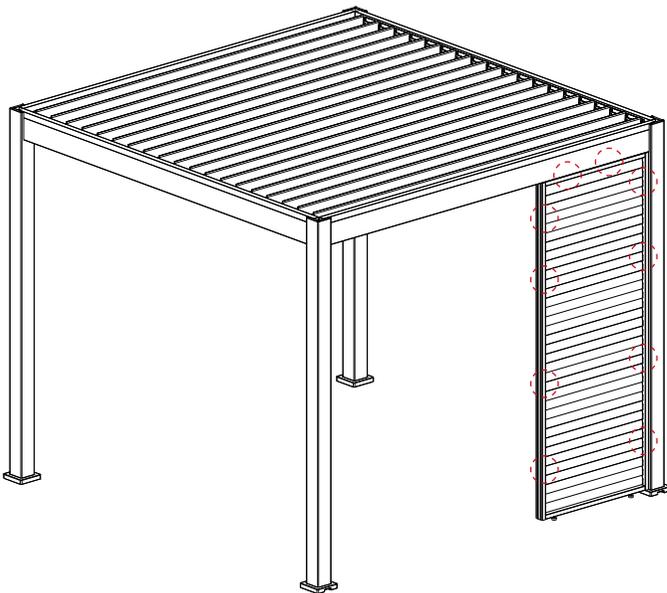

# Install Two or More Privacy Panels

To install two or more privacy panels, please repeat the same installation steps as above.

