

**ELEMENTS**  
FLUTED PANEL



**WPC**  
**WOOD PLASTIC COMPOSITE**

# *Fluted Panel*


**INDOOR & OUTDOOR**

- Resistant to water, molds & termites
- Have natural wood finish
- Low maintenance
- Easy to install
- Affordable






**DE WPC WALL FLUTED ELEMENTS**  
**4S-INDOOR LT GREY**  
160X24X2900MM




**DE WPC WALL FLUTED ELEMENTS**  
**4S-INDOOR NATURAL**  
160X24X2900MM



**DE WPC WALL FLUTED ELEMENTS**  
**4S-INDOOR BROWN**  
160X24X2900MM




**DE WPC WALL FLUTED ELEMENTS**  
**4S-INDOOR DK GREY**  
160X24X2900MM

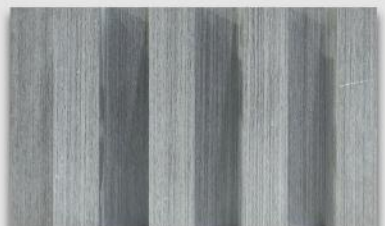



DE WPC WALL FLUTED ELEMENTS  
**4S-INDOOR MOCHA**  
160X24X2900MM



DE WPC WALL FLUTED ELEMENTS  
**4S-INDOOR CHERRY**  
160X24X2900MM



DE WPC WALL FLUTED ELEMENTS  
**3S-INDOOR GREY**  
195X28X2900MM



DE WPC WALL FLUTED ELEMENTS  
**3S-INDOOR MOCHA**  
195X28X2900MM






DE WPC WALL FLUTED ELEMENTS  
**3S-INDOOR MOCHA**  
195X14X2900MM




DE WPC WALL FLUTED ELEMENTS  
**3S-INDOOR BROWN**  
195X14X2900MM

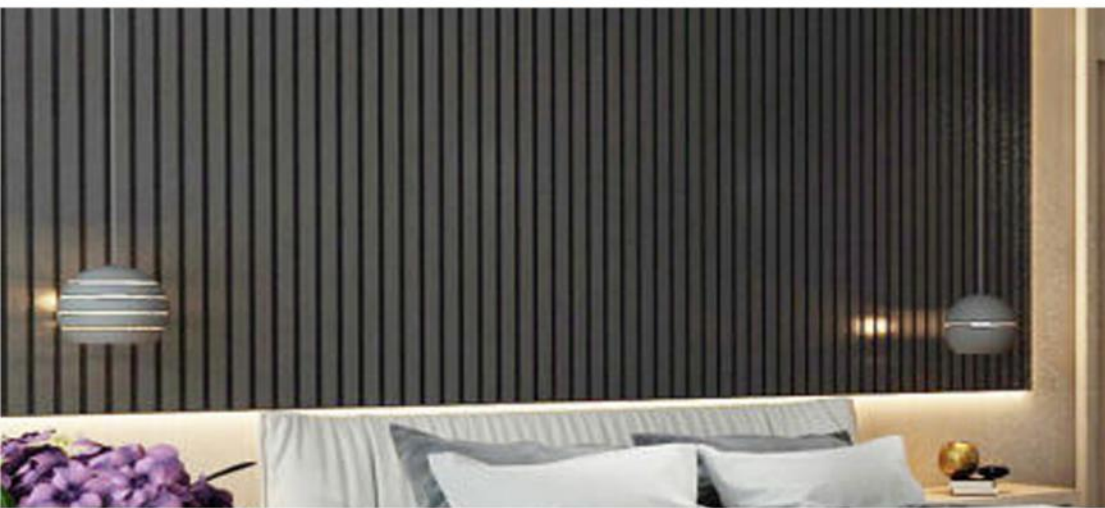

DE WPC WALL FLUTED ELEMENTS  
**3S-INDOOR GREY**  
195X14X2900MM



DE WPC WALL FLUTED ELEMENTS  
**3S-INDOOR NATURAL**  
195X14X2900MM

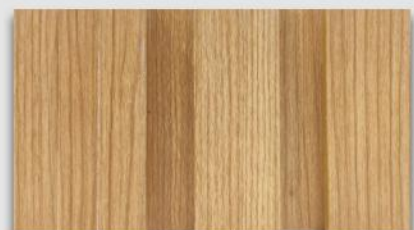



**DE WPC WALL FLUTED ELEMENTS  
4S-OUTDOOR CHERRY**  
220X26X2900MM



**DE WPC WALL FLUTED ELEMENTS  
4S-OUTDOOR GREY**  
220X26X2900MM



**DE WPC WALL FLUTED ELEMENTS  
4S-OUTDOOR NATURAL**  
220X26X2900MM



**DE WPC WALL FLUTED ELEMENTS  
4-S OUTDOOR WENGUE**  
220X26X2900MM





**DE WPC ELE WALL  
FLUTED PANEL**

**3S - INDOOR CHERRY**

195X28X2900MM



**DE WPC ELE WALL  
FLUTED PANEL**


**3S - INDOOR BROWN**

195X28X2900MM







**DE WPC FLOOR DECKING  
OUTDOOR CHERRY**  
150X25X2900MM

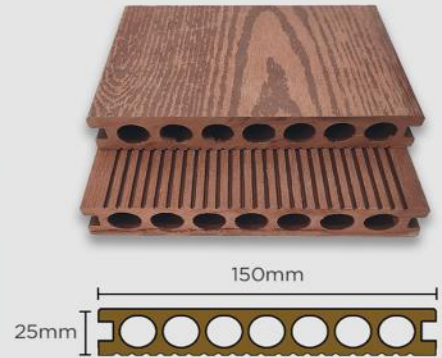


**DE WPC FLOOR DECKING  
OUTDOOR NATURAL**  
150X25X2900MM

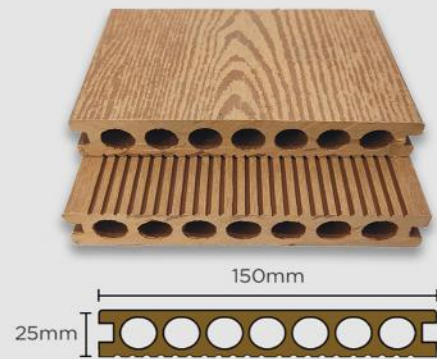

**DE WPC FLOOR DECKING  
OUTDOOR WENGUE**  
150X25X2900MM

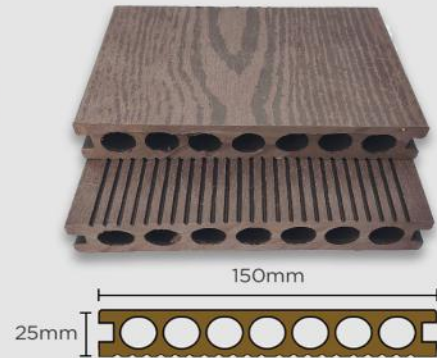


**DE WPC FLOOR DECKING  
OUTDOOR CHERRY**  
140X25X2900MM

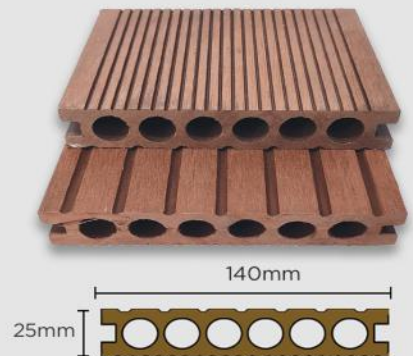




**DE WPC FLOOR DECKING  
OUTDOOR NATURAL**  
140X25X2900MM

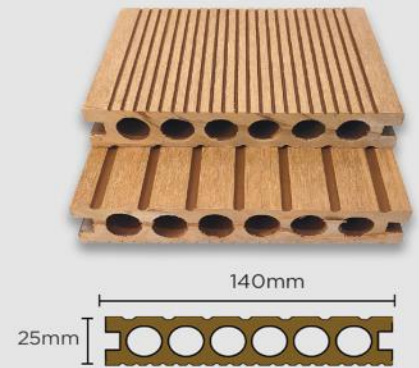

**DE WPC FLOOR DECKING  
OUTDOOR WENGUE**  
140X25X2900MM

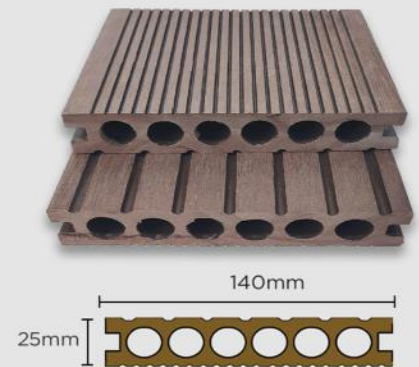

**DE WPC WALL SQUARE TUBE  
SINGLE INDOOR**  
40X50X2900MM




**DE WPC WALL SQUARE TUBE  
DOUBLE INDOOR**  
100X50X2900MM








**DE WPC ELE WALL FLUTED CORNER  
4S - OUTDOOR CHERRY  
40X50X2900MM**

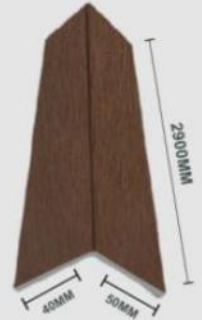

**DE WPC ELE WALL FLUTED CORNER  
4S - OUTDOOR WENGUE  
40X50X2900MM**

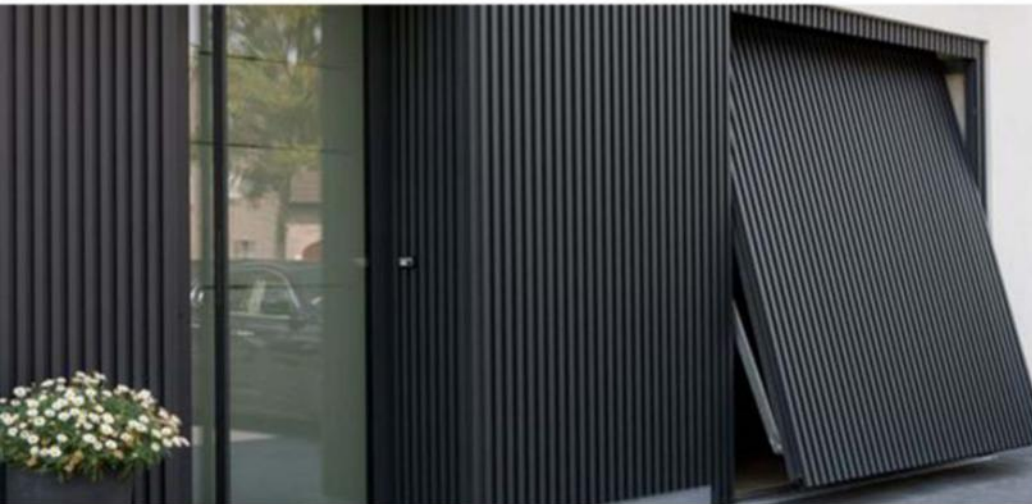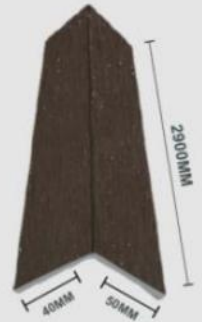

**DE WPC ELE WALL FLUTED CORNER  
4S - OUTDOOR GREY  
40X50X2900MM**

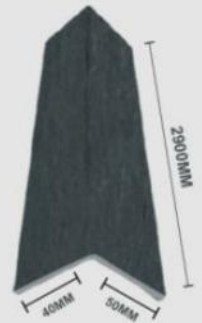

**DE WPC ELE WALL FLUTED CORNER  
4S - OUTDOOR NATURAL  
40X50X2900MM**





4-S CORNER BROWN



4-S CORNER CHERRY



4-S CORNER DK GREY



4-S CORNER LT GREY



4-S CORNER MOCHA



4-S CORNER NATURAL



3-S THIN CORNER WENGUE



3-S THIN CORNER MOCHA



3-S THIN CORNER NATURAL



3-S THIN CORNER DK BROWN



3-S THIN CORNER BROWN



3-S THIN CORNER GREY



3-S THIN CORNER MOCHA

### FLOOR DECKING ACCESSORIES



DE ACC ELEMENTS FLOOR DECKING CLICK



DE ACC ELEMENTS FLOOR DECKING KEEL 40X25MM

### WALL PANEL ACCESSORIES



DE ACC ELEMENTS WALL FLUTED METAL CLICK

#### Main components:



Indoorwpc wall panel



L-corner



Clip



Dicing saw



Air nailer



Styrofoam

#### Installation method

##### Methods 1



THE METOPE

THE KEEL

INTEGRATED WALLBOARD

It is better to drive the nail diagonally into the hard surface. The nail gun can be covered with another board that plugs in. It doesn't affect the aesthetics.



NAILING POSITION

##### Methods 2

Insert the fastener into the bottom edge of the wall panel. Fixed to the blank wall. This method applies to the wall with smooth surface wall with a flat surface.



FIX THE SCREW THE PLACE WHERE


##### Methods 3

WOOD KEEL LEVELING THE WALL. SELF-TAPPING SCREWS FOR STAINLESS STEEL FASTENERS FASTEN TO THE WOODEN KEEL. THIS METHOD INSTALLS ALL PLATES. IT CAN BE DISASSEMBLED AND REUSED.



#### Step 1

Cut the wall panel to the appropriate length, and apply styrofoam on the back.

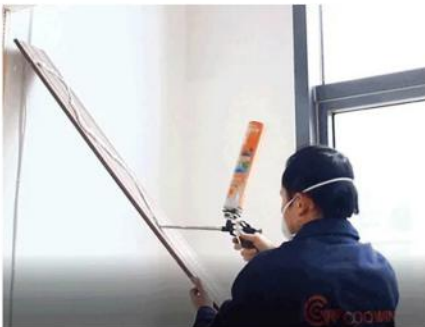

#### Step 2

Stick the wall panel on the wall and fix by air nailer.



#### Step 3

Fix the wall panel to the wall in turn with clips.



#### Step 4

Glue the L corner and stick on the wall panel, the installation is finished.



Note: Before installing the wall panel, please make sure the wall is flat and solid.