







CARPORT

Montageanleitung - DE





1/6




REF	BILD		Menge
A1		 150X150-2550	4

REF	BILD	Menge
N1		4
N2		4







REF	BILD	Menge
S2	 6×35	16
S6	 10×80	16



2/6





REF	BILD	Menge
Z1	 4mm	1
Z2	 4mm	1
Z3	 6mm	1
Z4	 6mm	1

REF	BILD	Menge
Z5	 PH2	1
Z6		1
Z7		1









2/6

REF	BILD		Menge
D1		 120X195-2517.5	2
D2		 120X195-2517.5	2
F1		 25X45-2494	4


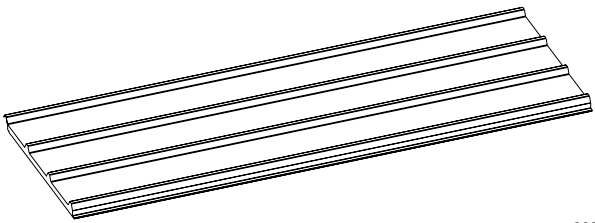
REF	BILD	Menge
N3		2
N4		4

REF	BILD	Menge
S1	 6mm	16
S3	 5×19	40
S4	 5×100	30
S5	 4×16	4


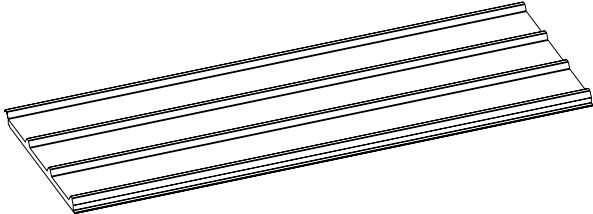
3/6

REF	BILD		Menge
D1			2
D2			2
B2		 120X195-2910	2
F1			4


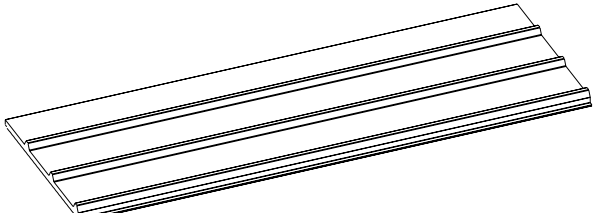
4/6

REF	BILD		Menge
W1		 2895-1080	2

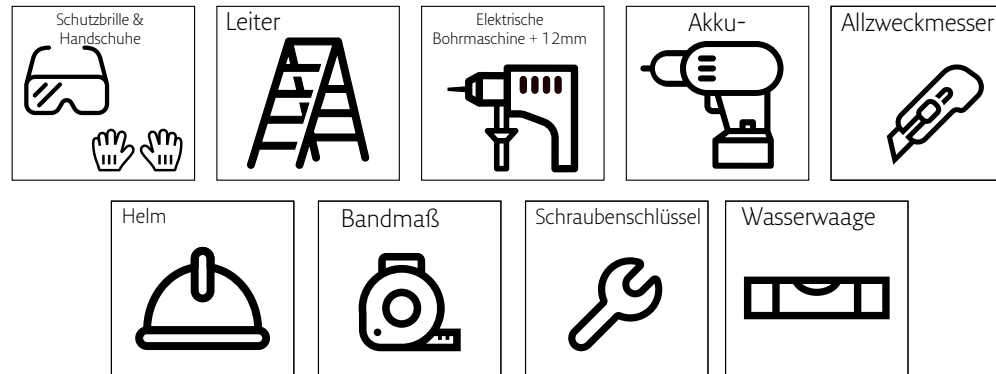
5/6

REF	BILD		Menge
W1		 <small>2895-1080</small>	2

6/6

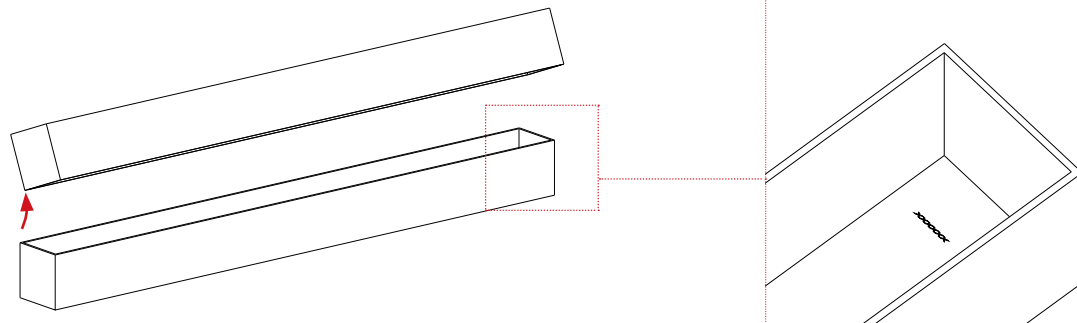
REF	BILD		Menge
W2		 <small>2895-1023</small>	1

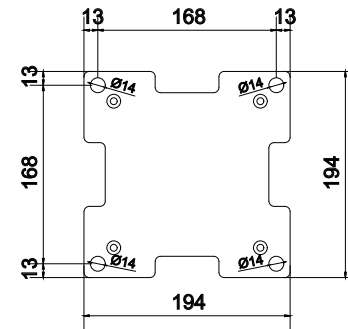
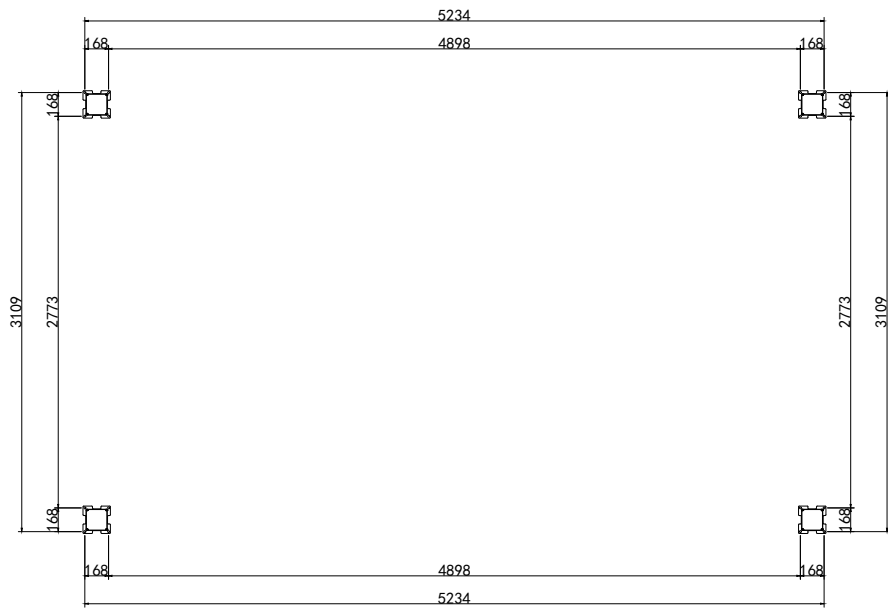
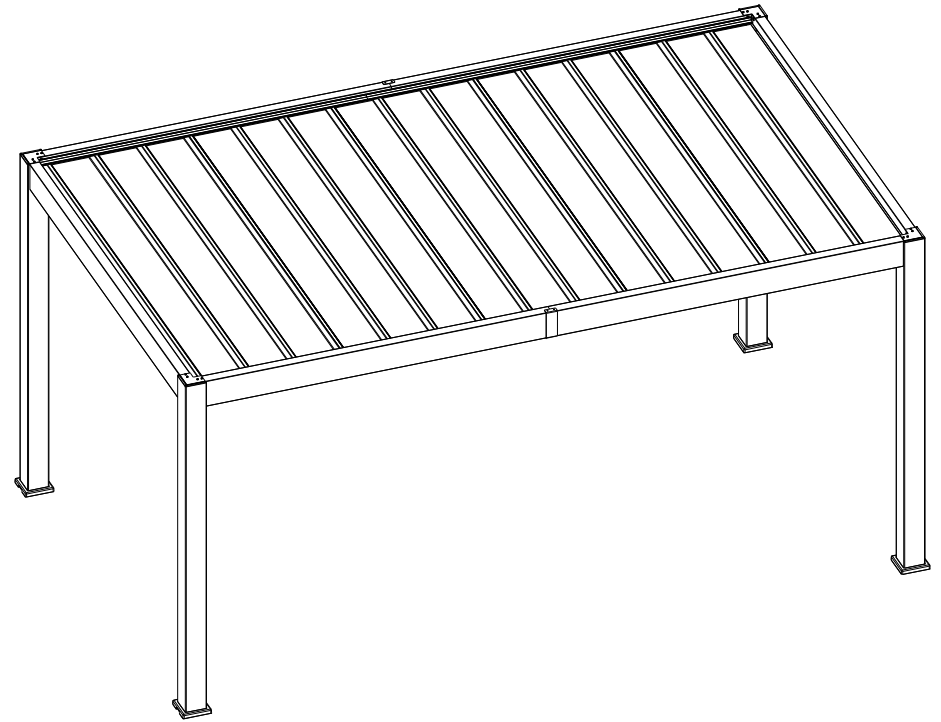
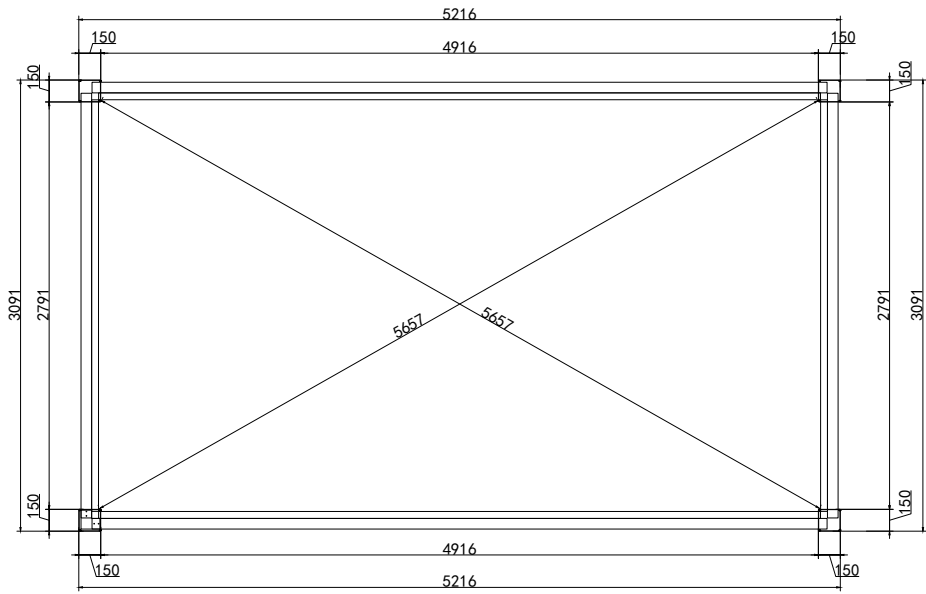
Notwendiges Werkzeug und Sicherheitsausrüstung (nicht beiliegend)






Diese Instruktionen müssen im gesamten Verlauf des Produktlebenszyklus aufbewahrt werden. Wir raten Ihnen, diese sehr sorgfältig zu lesen, bevor Sie mit dem Aufbau beginnen. Der Verbraucher ist für jegliche Schäden oder Verletzungen, die durch inkorrekte oder unsachgemäße Installation verursacht wurden, verantwortlich.

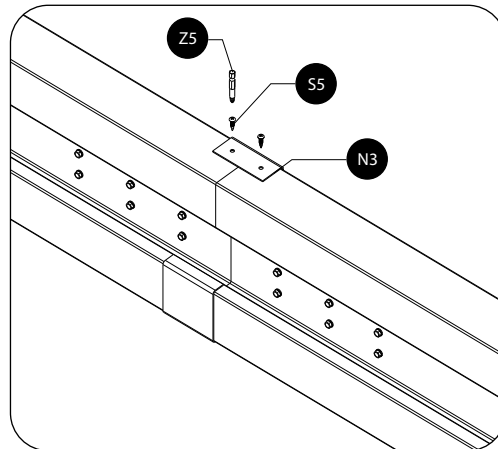
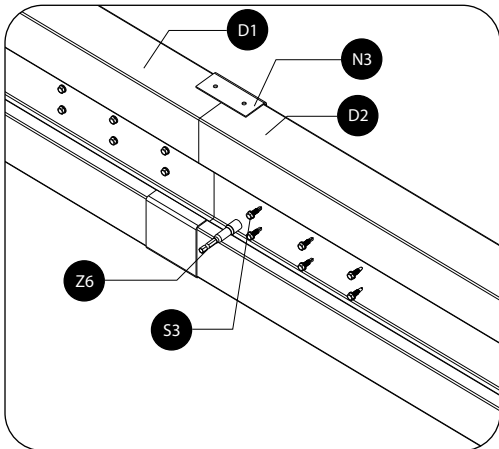
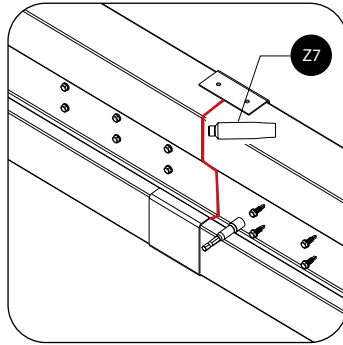
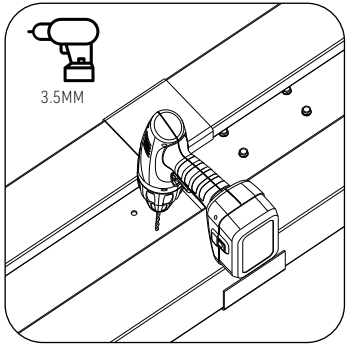
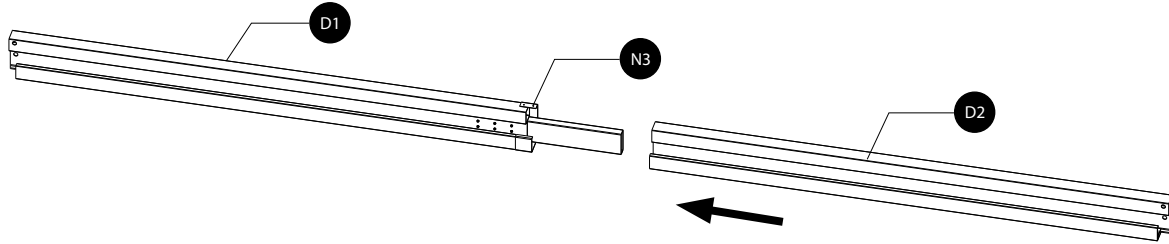
Auf der Innenseite des Kartons befindet sich eine Produktverfolgungsnummer (siehe Abbildung unten). Für einen besseren und effizienten Kundendienst in der Zukunft, wenn Sie den Karton abreißen, machen Sie bitte ein Foto der Tracking-Nummer und speichern Sie das Foto.






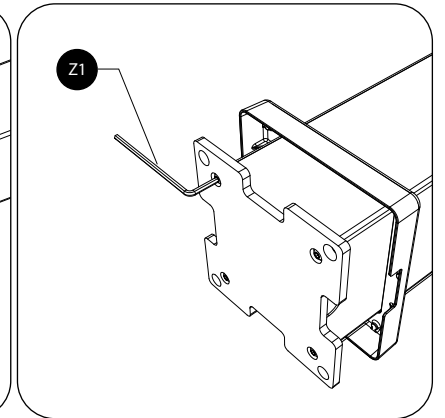
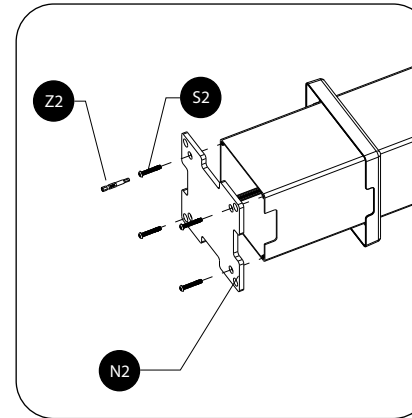
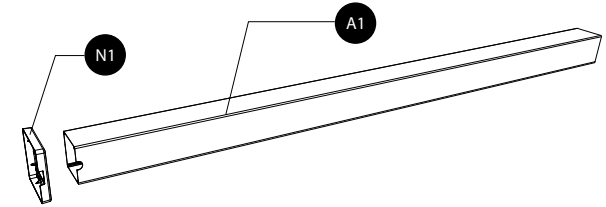


S3	 5x19	12
S5	 4x16	4
N3		2


X2

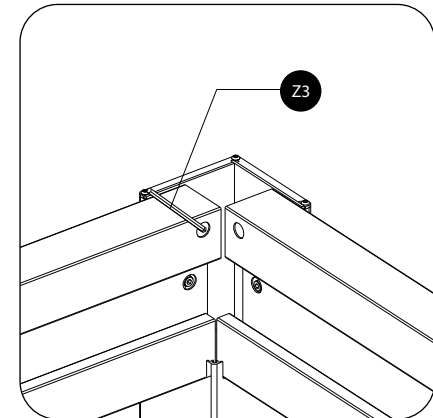
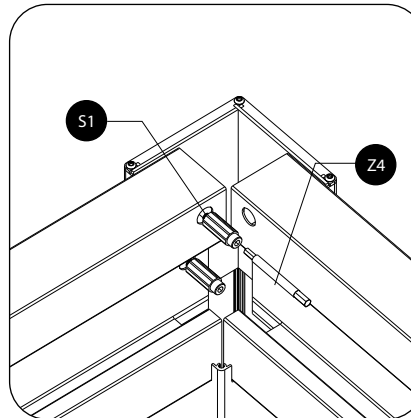
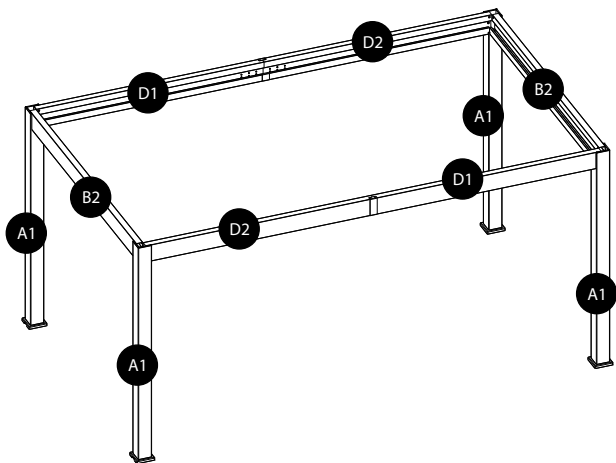
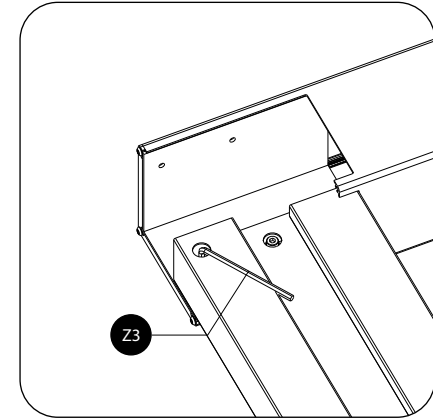
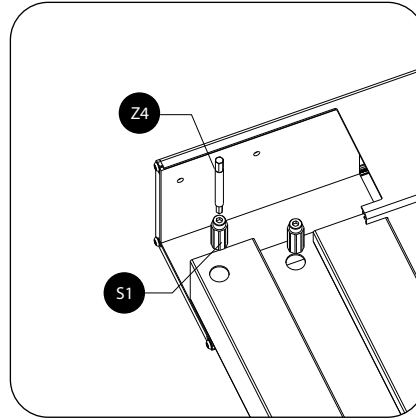
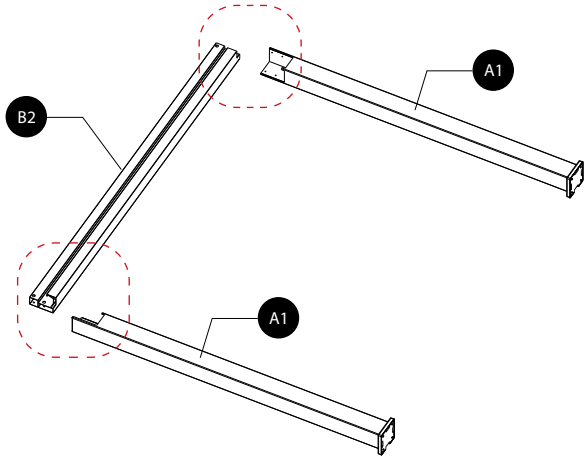


S2	 6x35	16
N1		4
N2		4






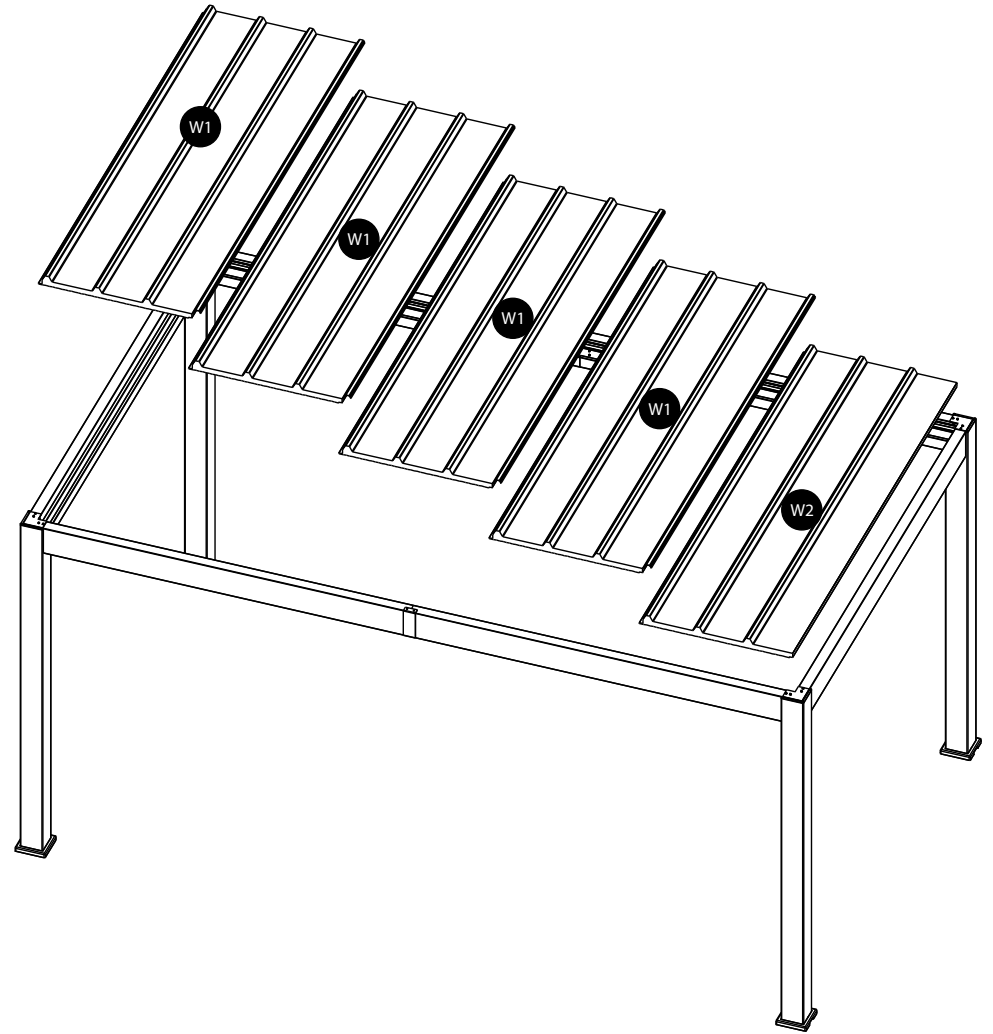
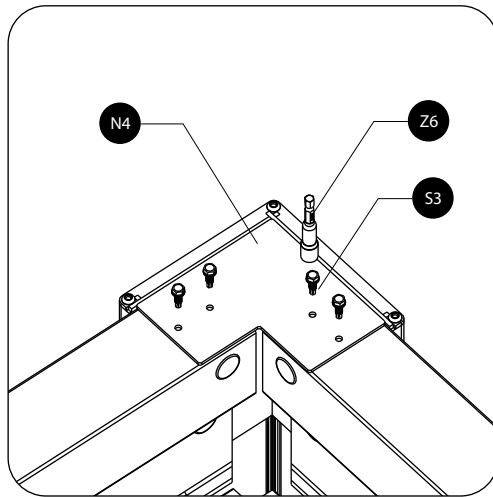
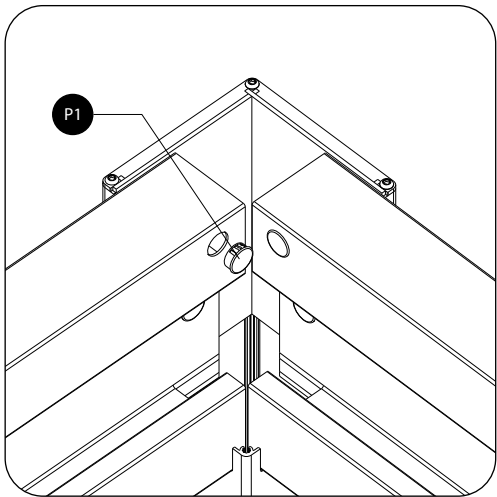
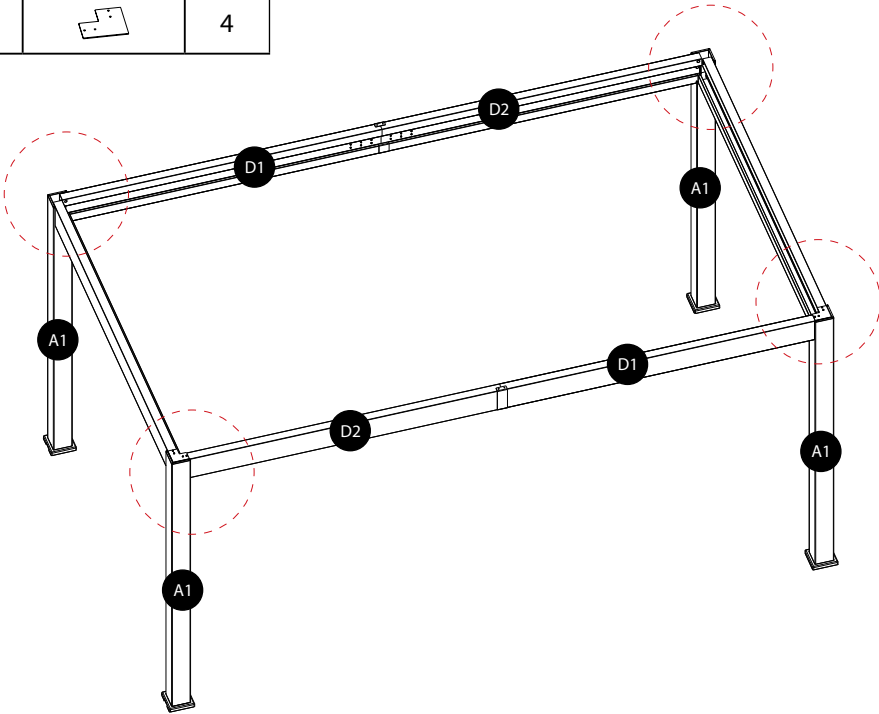
Kombination A

S1		16
----	---	----





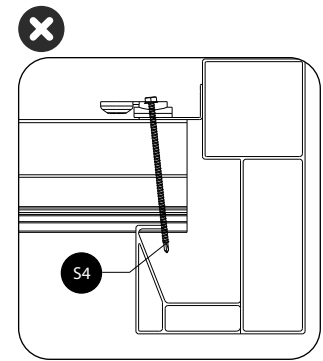
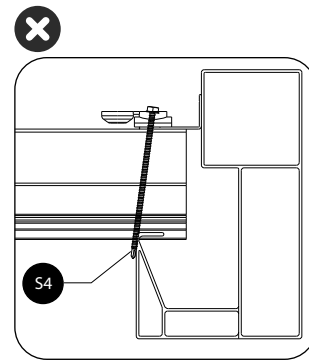
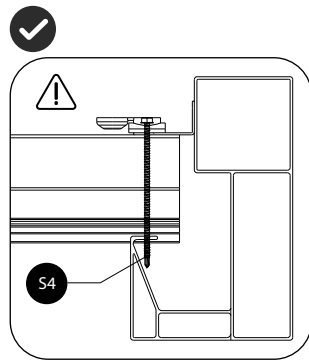
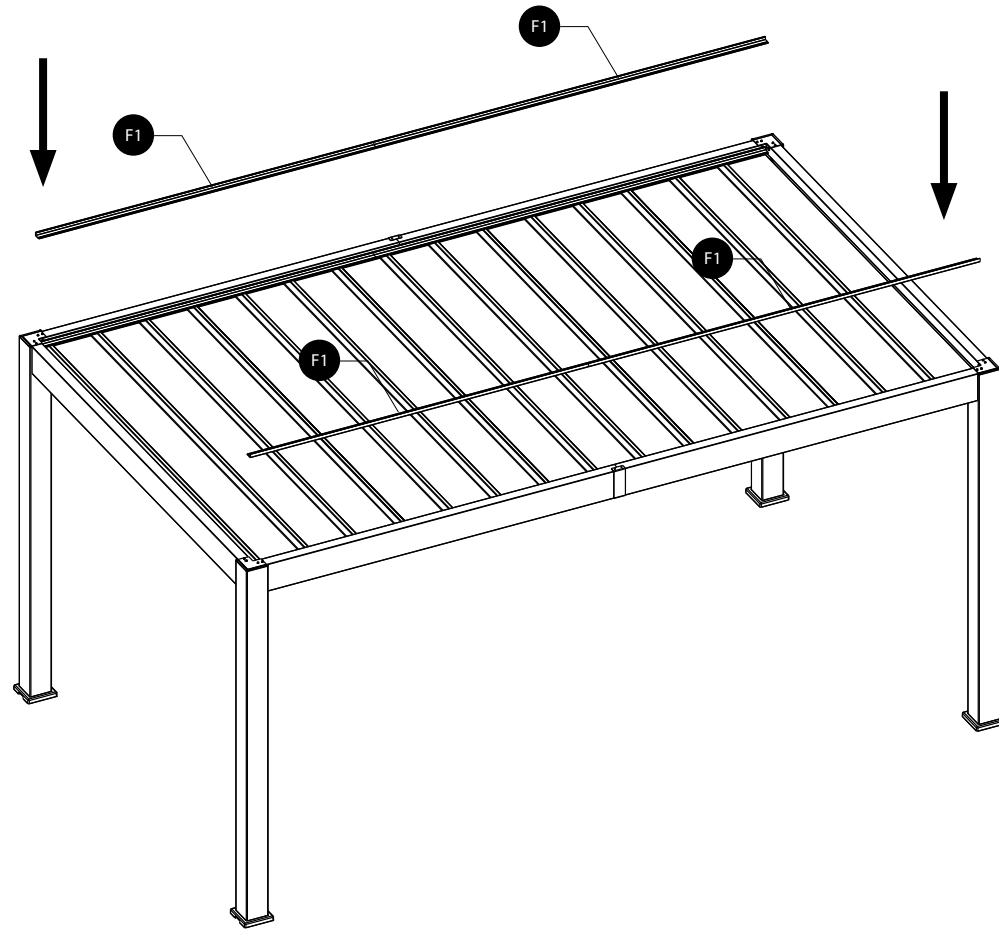
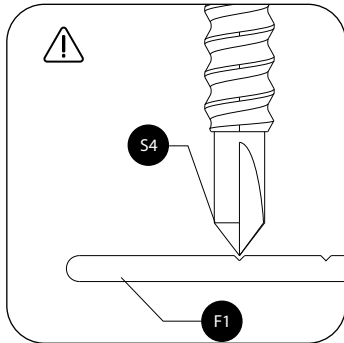
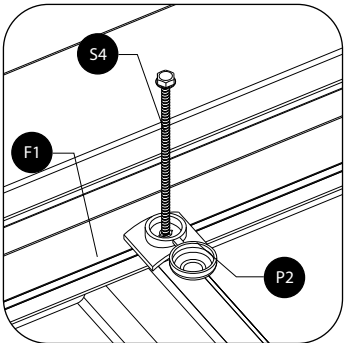
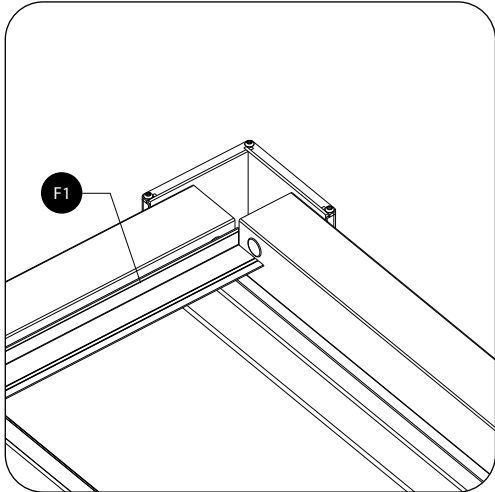
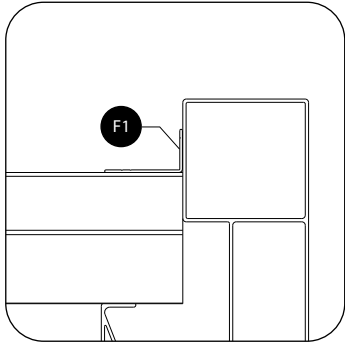
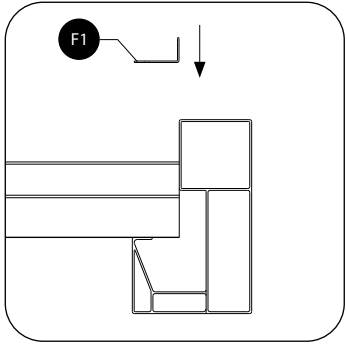
Kombination A

P1		16
S3	 5x19	16
N4		4





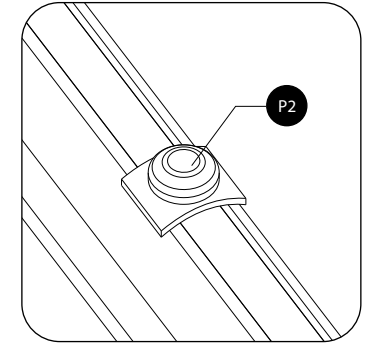
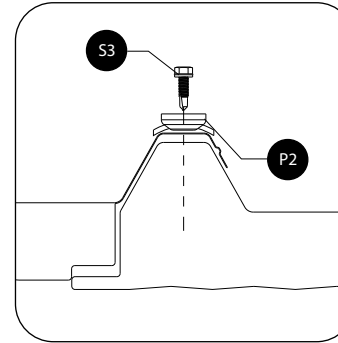
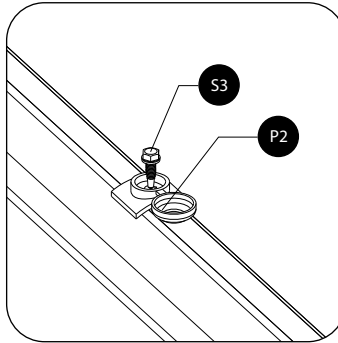
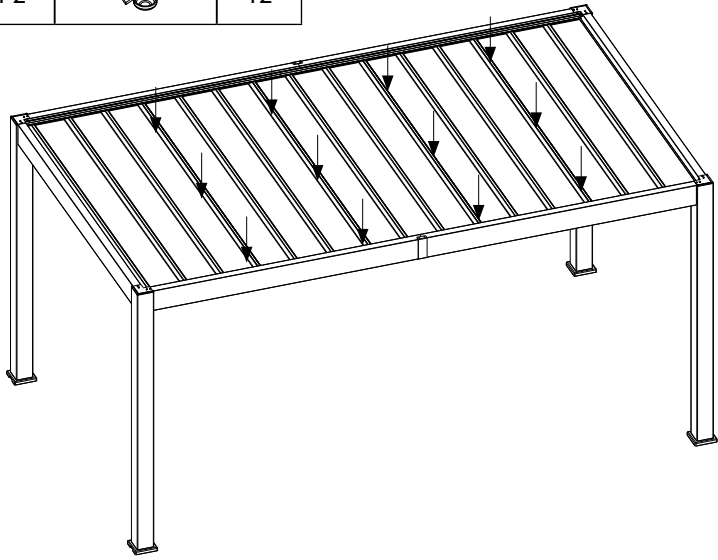
Kombination A


P2		30
S4		30

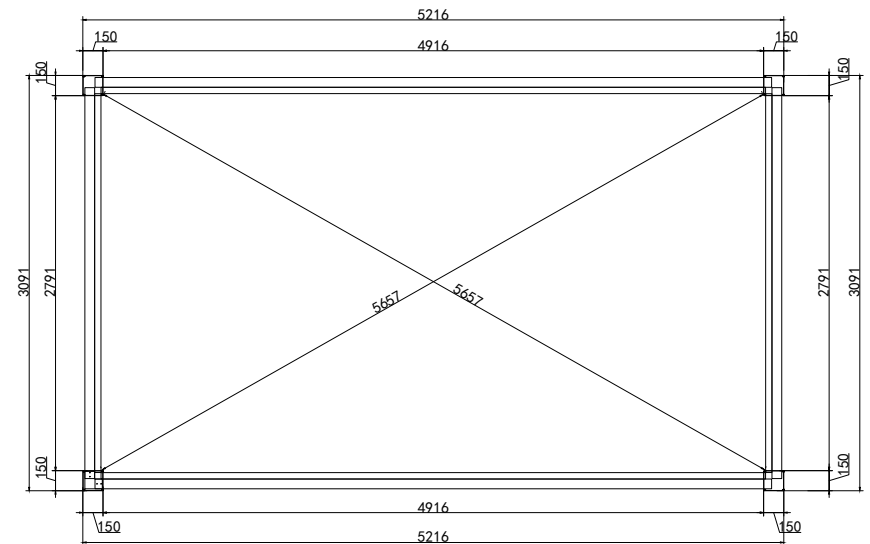
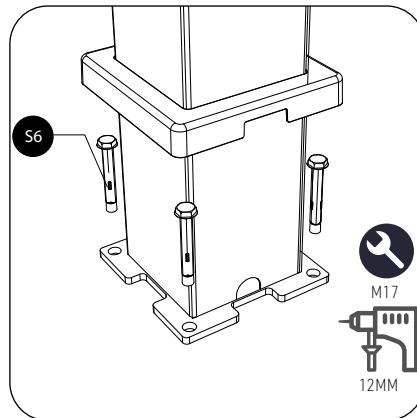
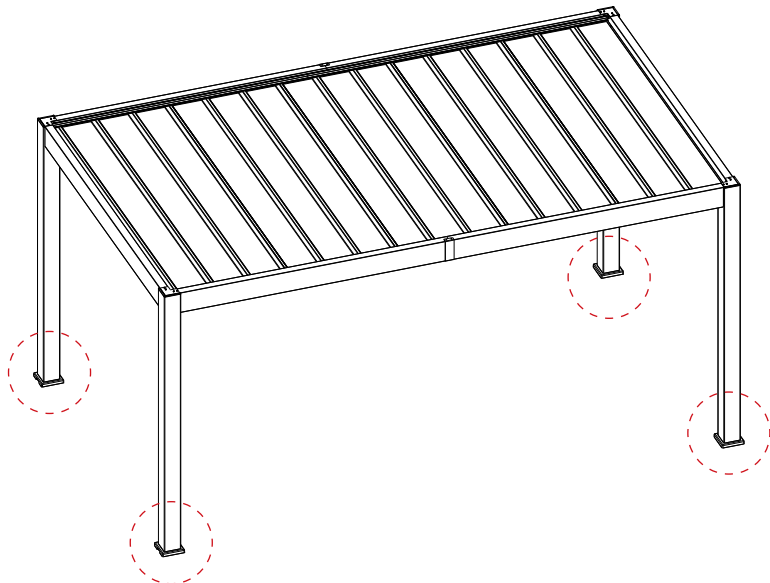


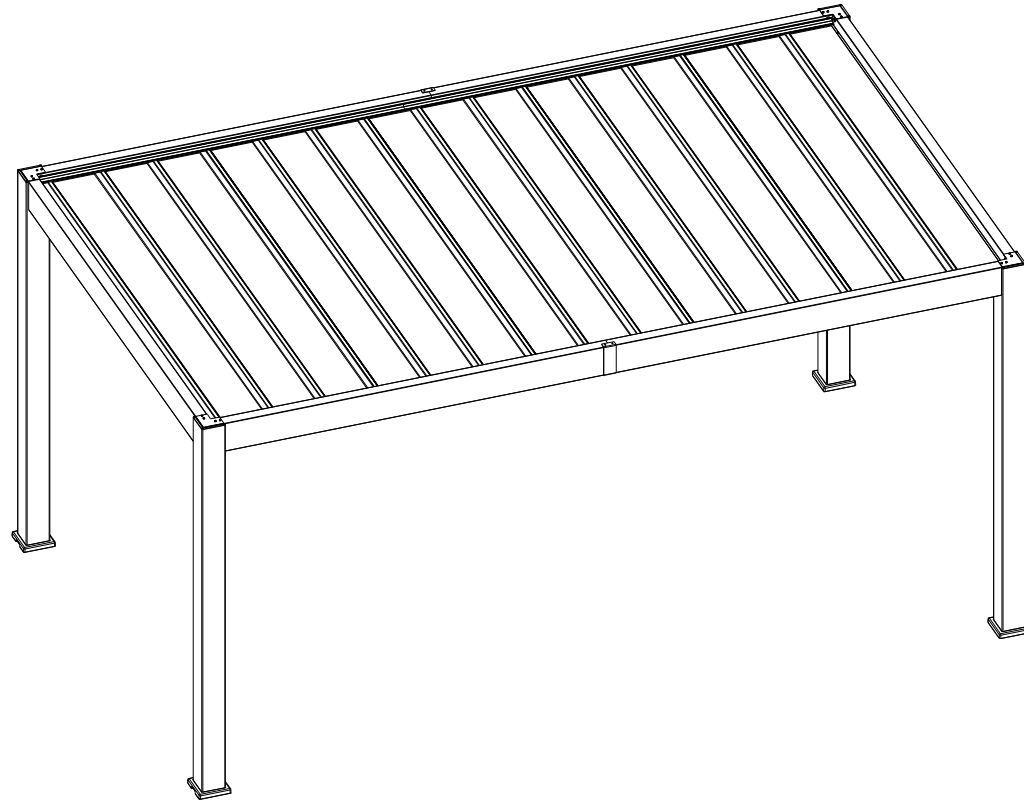
Kombination A

S3	 5x19	12
P2		12

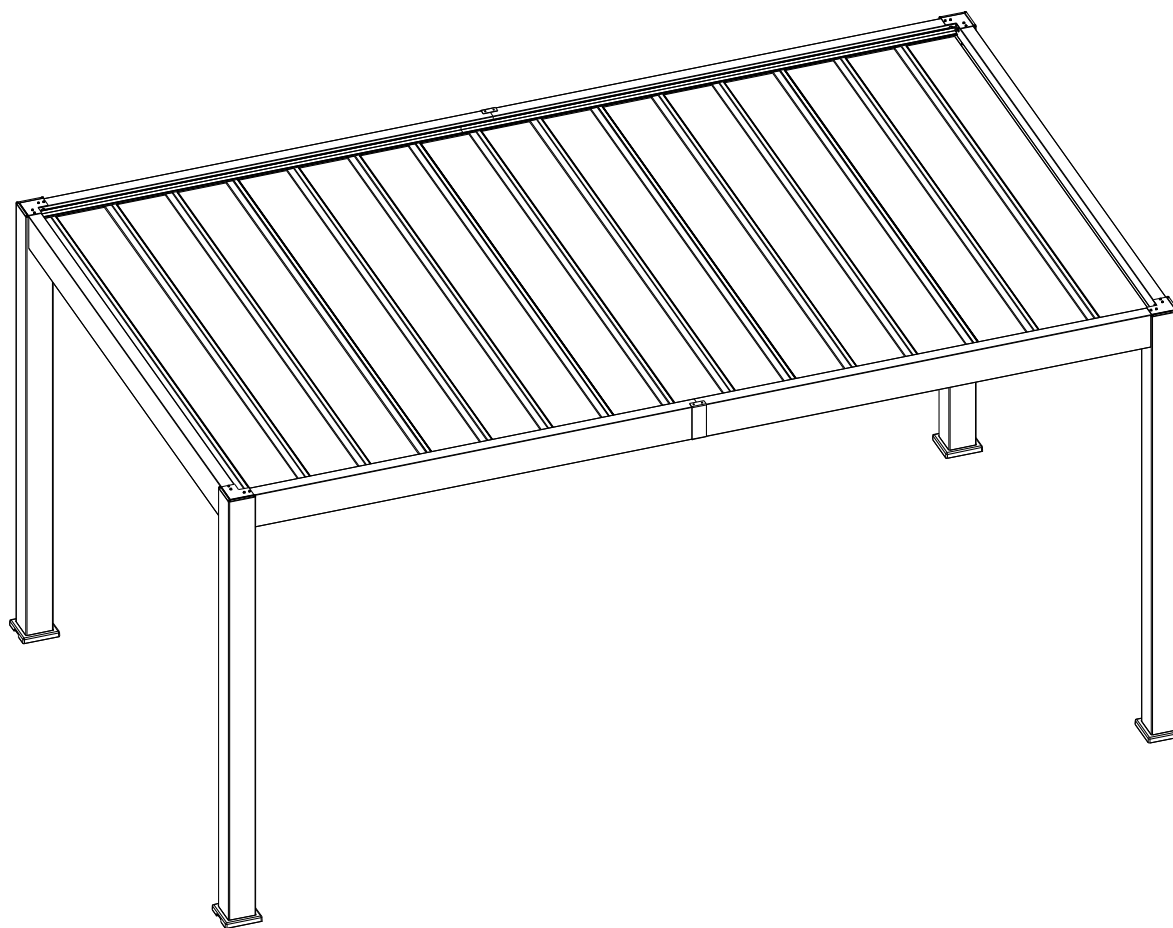


S6		16
----	---	----







CARPORT







CARPORT

Assembly Instructions - EN





1/6




REF	PICTURE		QTY
A1		 150X150-2550	4

REF	PICTURE	QTY
N1		4
N2		4







REF	PICTURE	QTY
S2	 6x35 4mm	16
S6	 10x80	16



2/6





REF	PICTURE	QTY
Z1	 4mm	1
Z2	 4mm	1
Z3	 6mm	1
Z4	 6mm	1

REF	PICTURE	QTY
Z5	 PH2	1
Z6		1
Z7		1









2/6

REF	PICTURE		QTY
D1		 120X195-2517.5	2
D2		 120X195-2517.5	2
F1		 25X45-2494	4


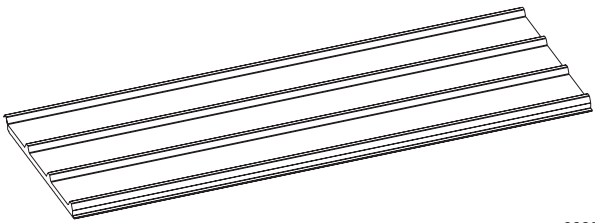
REF	PICTURE	QTY
N3		2
N4		4

REF	PICTURE	QTY
S1	 6mm	16
S3	 5x19	40
S4	 5x100	30
S5	 4x16	4


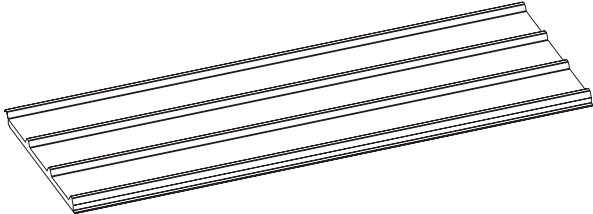
3/6

REF	PICTURE		QTY
D1		 120X195-2517.5	2
D2		 120X195-2517.5	2
B2		 120X195-2910	2
F1		 25X45-2494	4


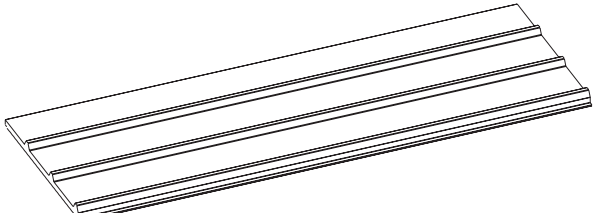
4/6

REF	PICTURE		QTY
W1		 2895-1080	2

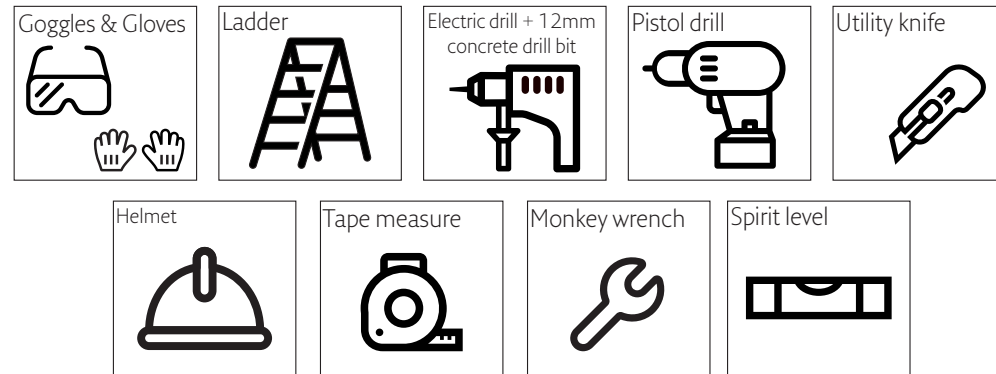
5/6

REF	PICTURE		QTY
W1		 <small>2895-1080</small>	2

6/6

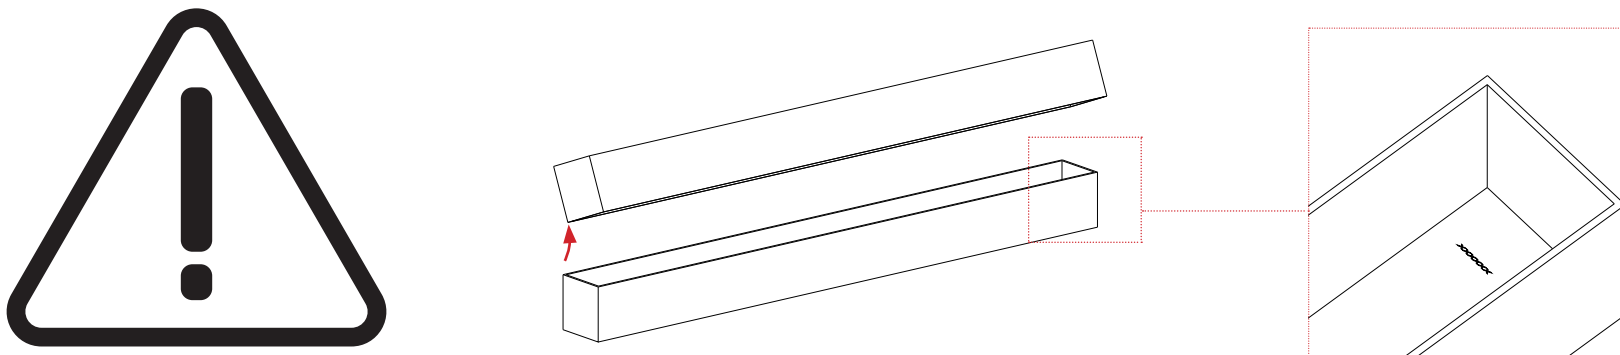
REF	PICTURE		QTY
W2		 <small>2895-1023</small>	1

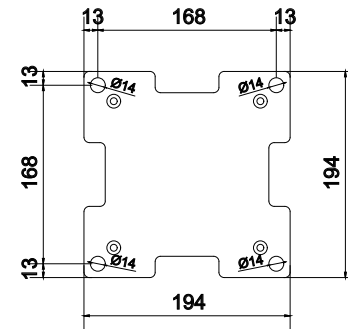
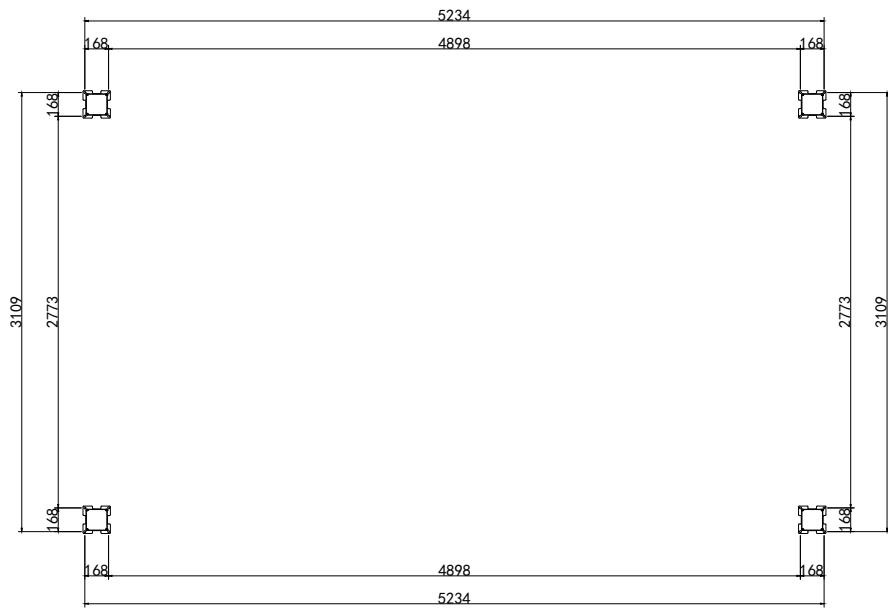
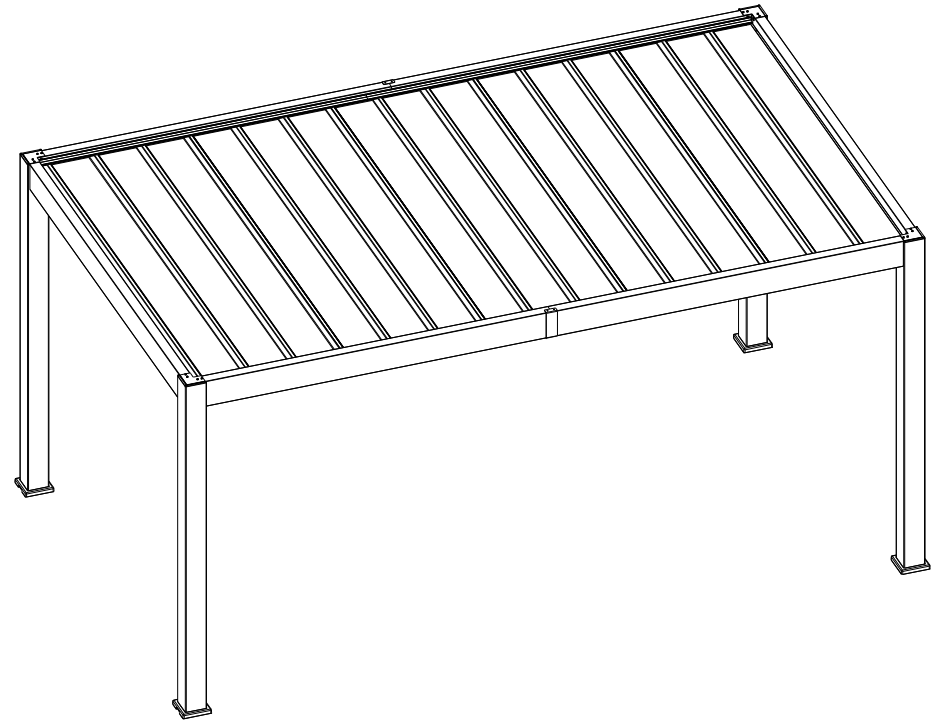
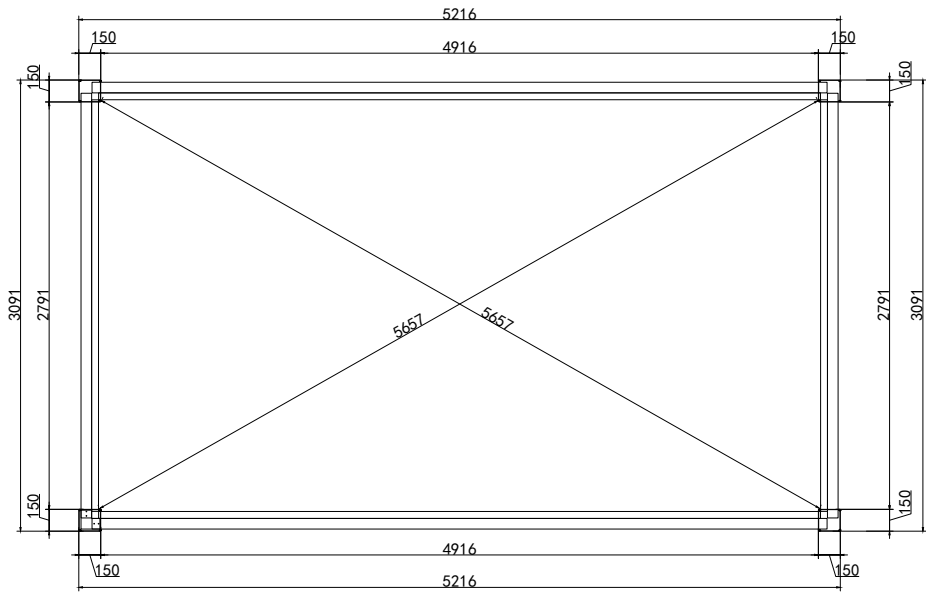
NECESSARY TOOLS AND SAFETY GEAR (NOT SUPPLIED)






These instructions have to be saved during the whole product life cycle. We advise you to read these very carefully before proceeding to the assembly. The user will be reliable for any damages or injuries caused due to incorrect or improper installation.

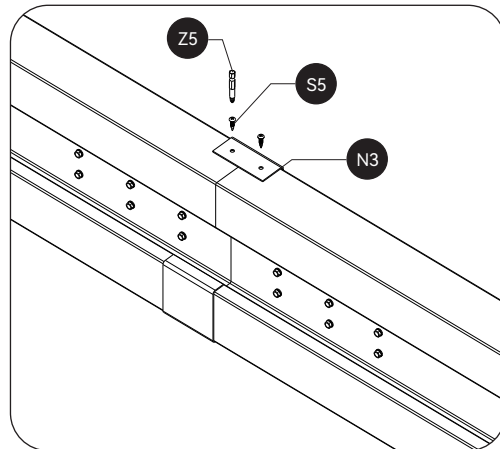
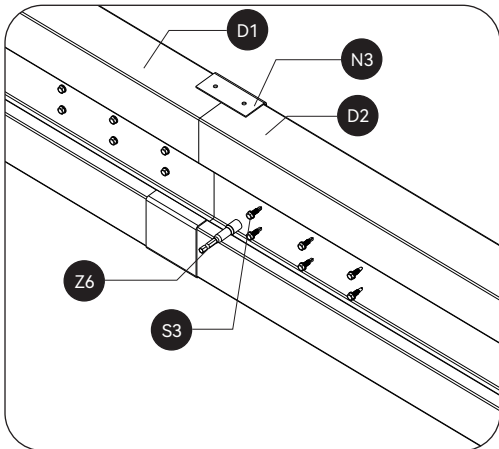
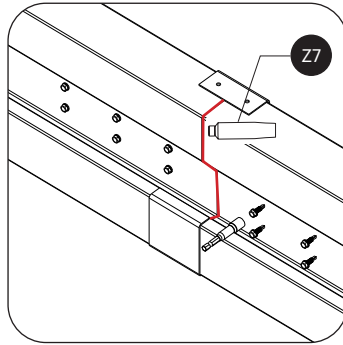
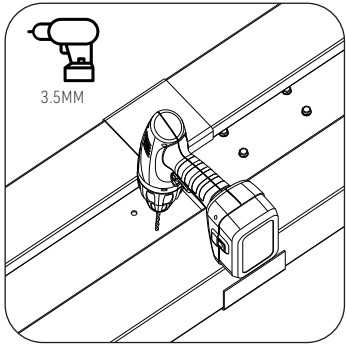
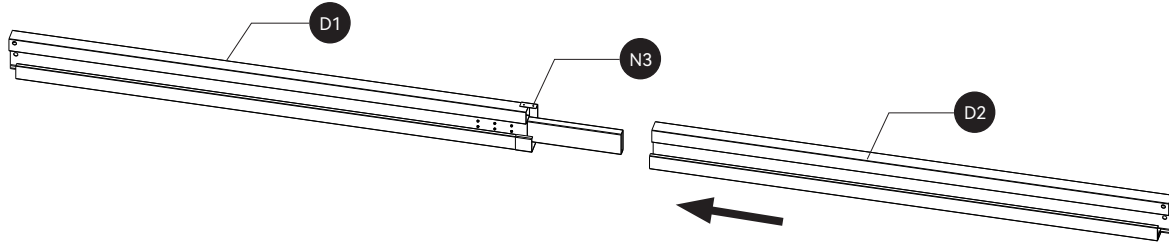
There is a Product Tracking Number in the inner side of the carton(see below diagram). For better and efficient after-sales in the future, when tear down the carton box, please take a photo of the Tracking Number and save the photo.






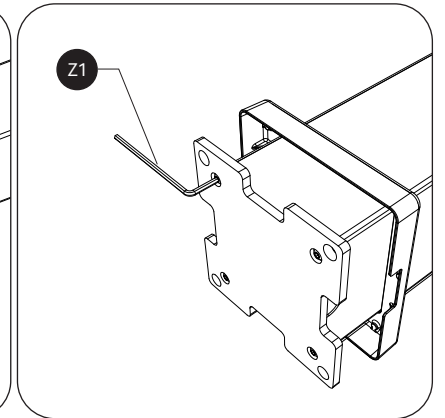
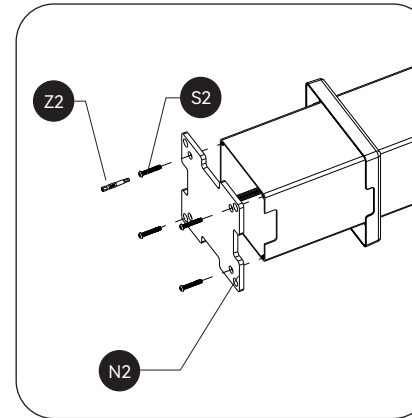
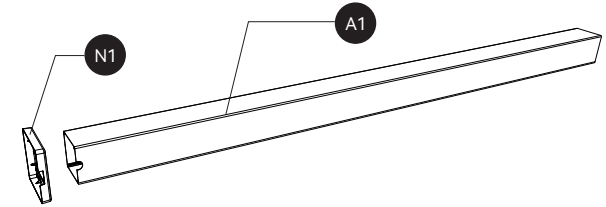


S3	 5×19	12
S5	 4×16	4
N3		2


X2

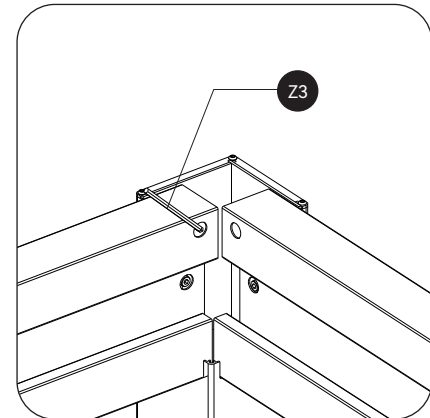
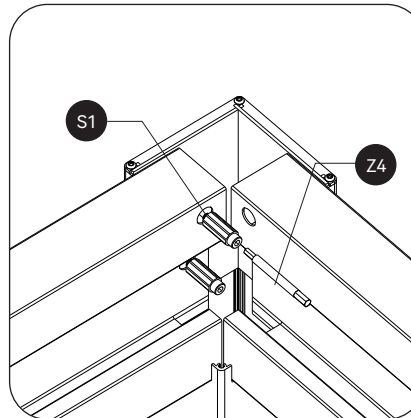
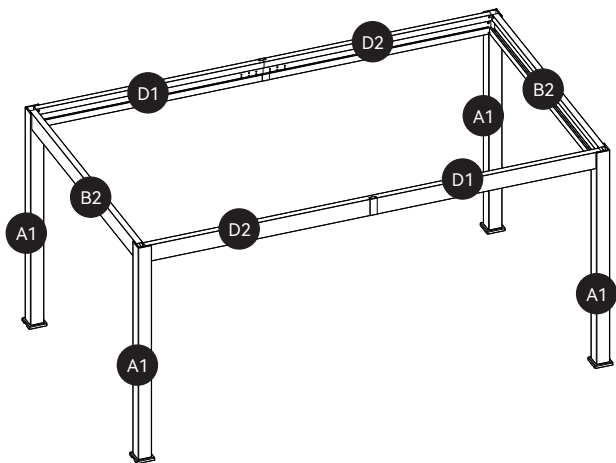
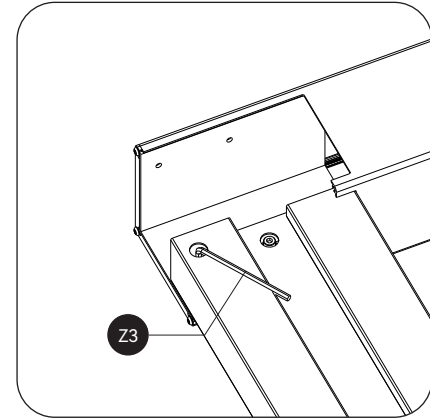
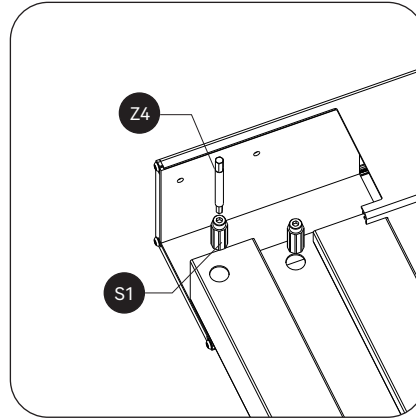
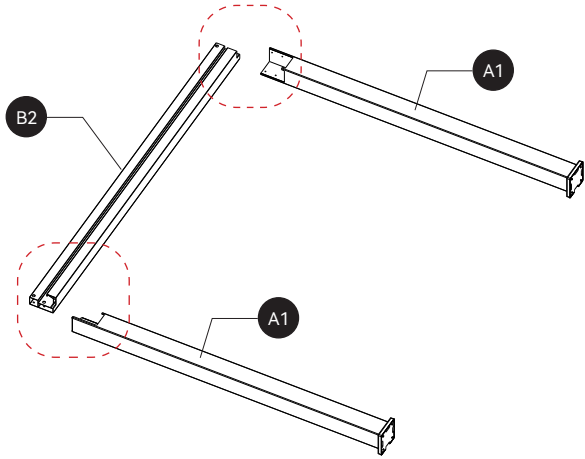


S2	 6×35	16
N1		4
N2		4






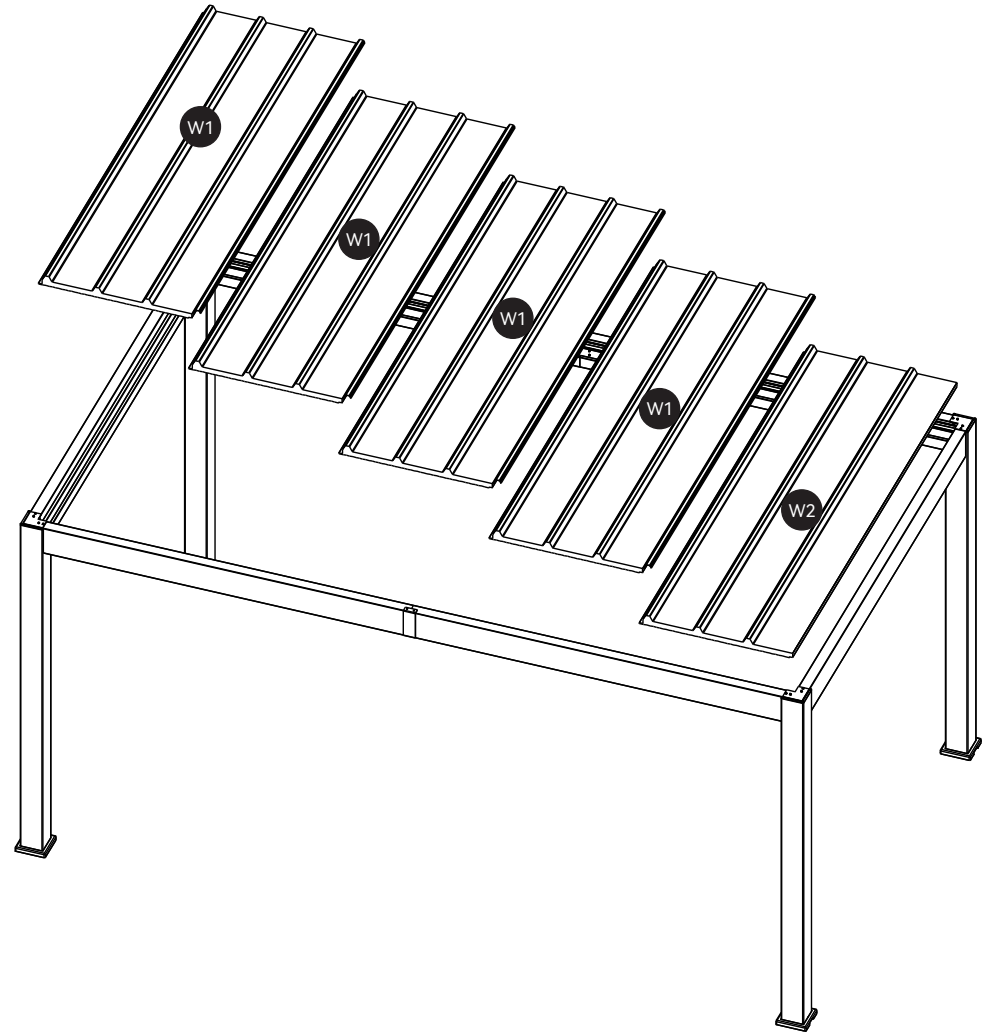
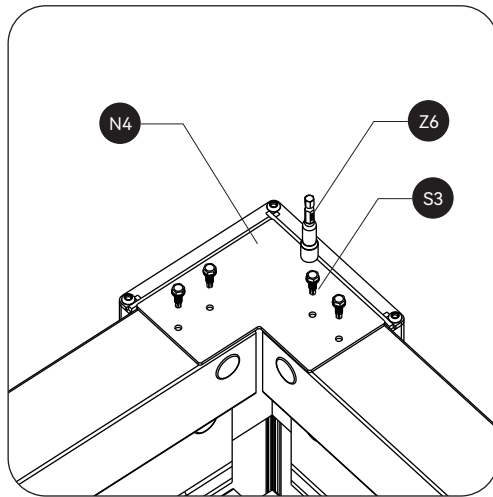
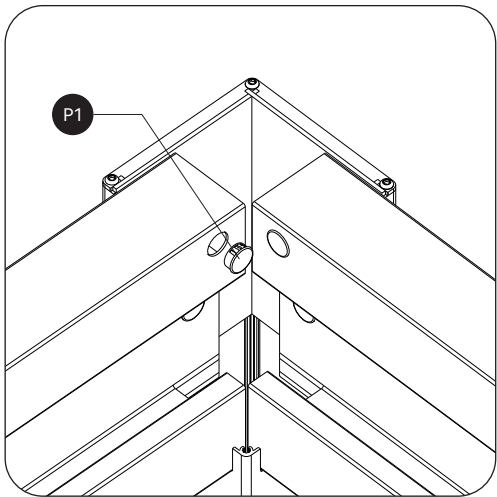
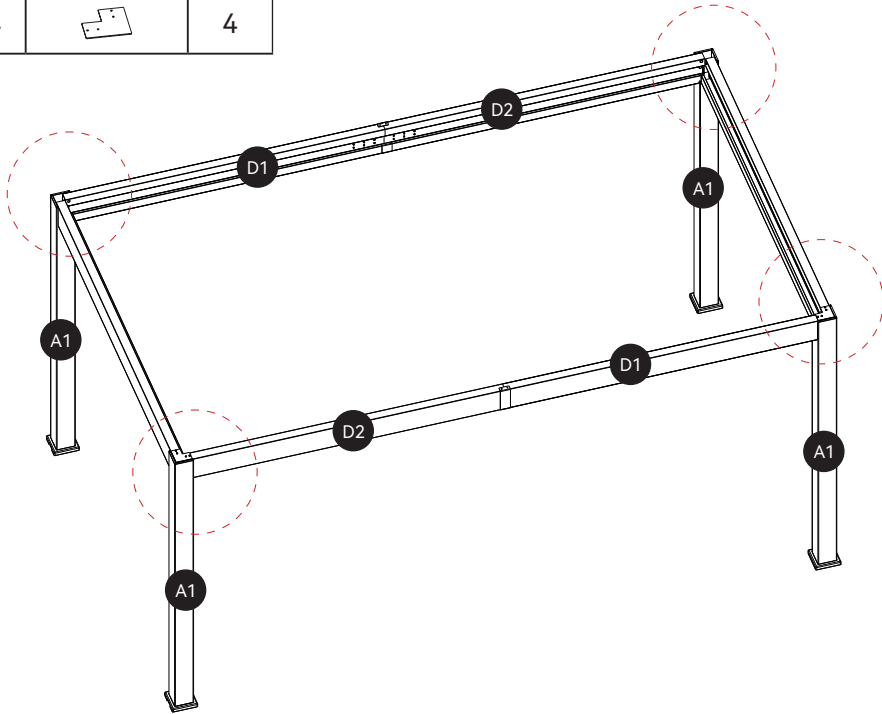
Combination A

S1		16
----	---	----





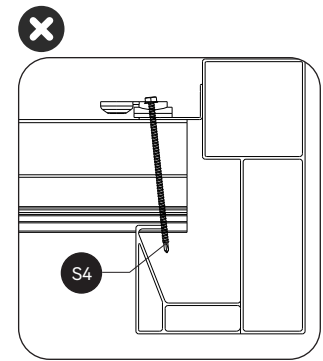
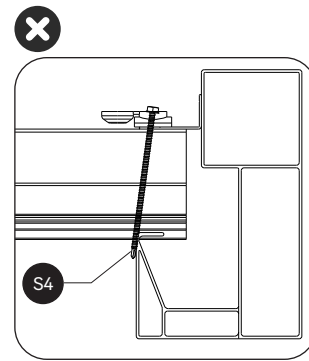
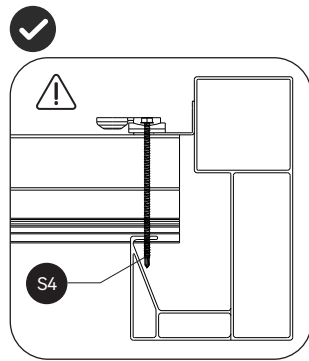
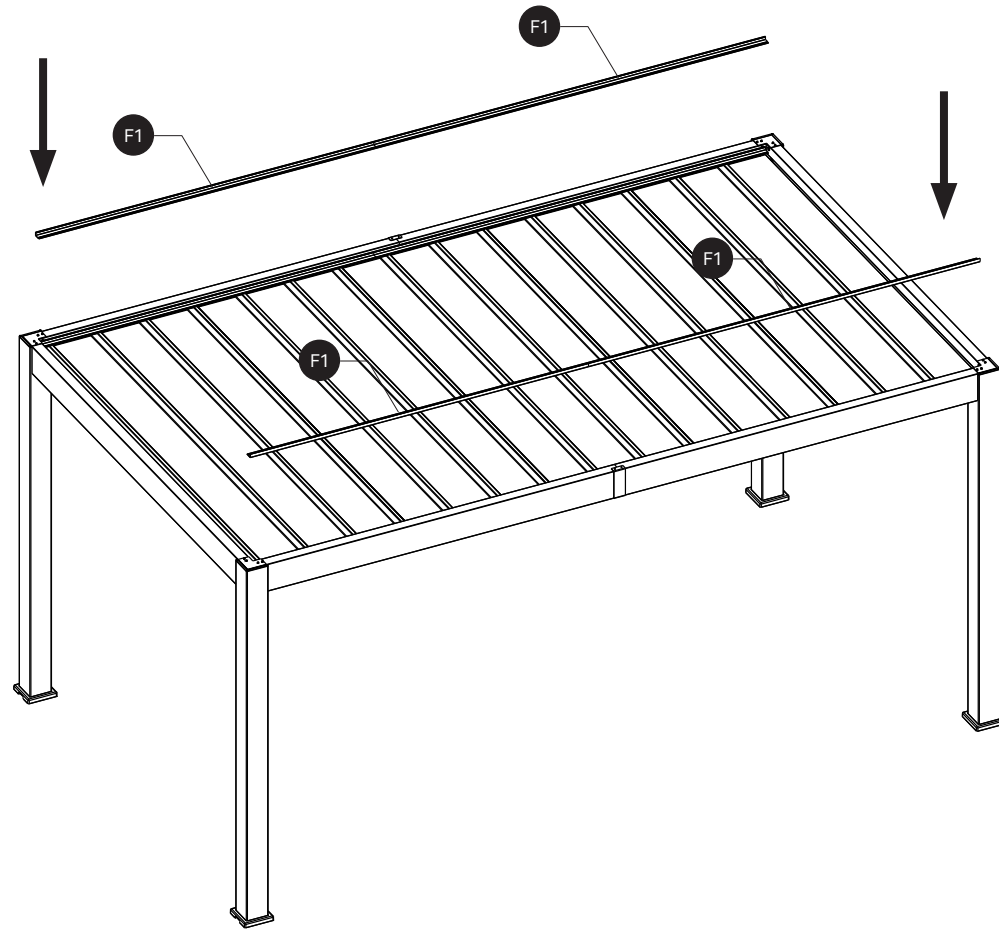
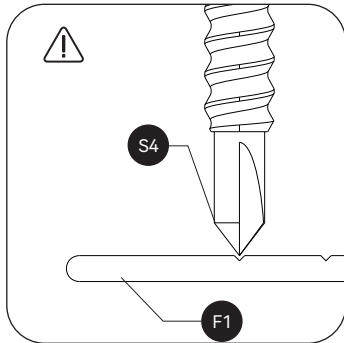
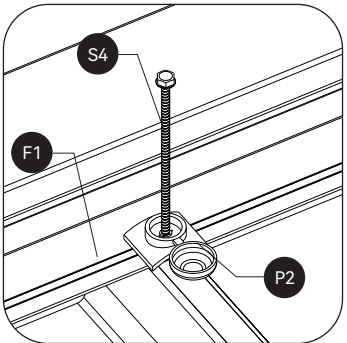
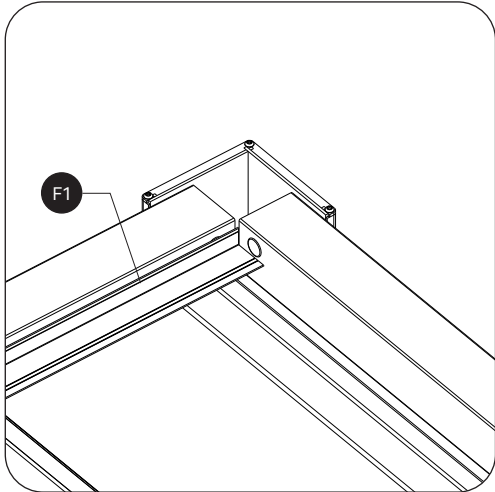
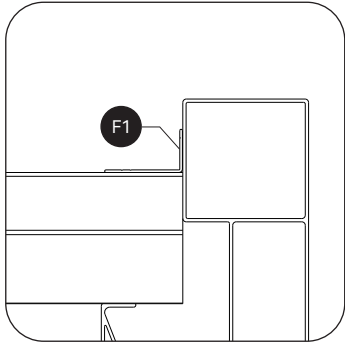
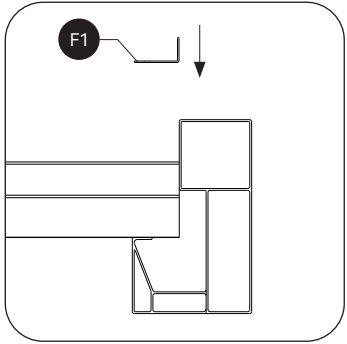
Combination A

P1		16
S3	 5x19	16
N4		4





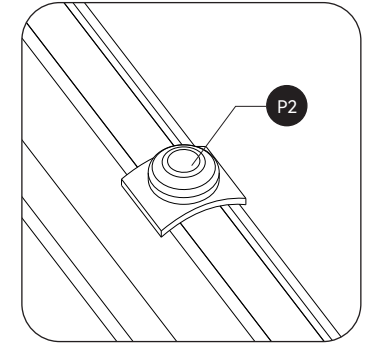
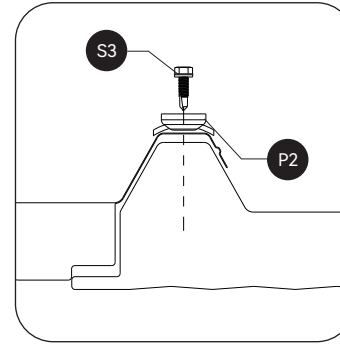
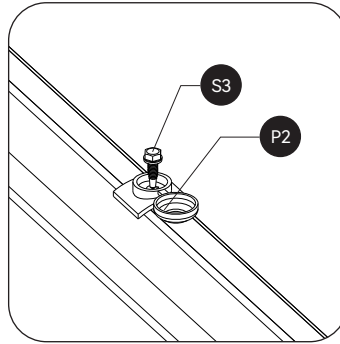
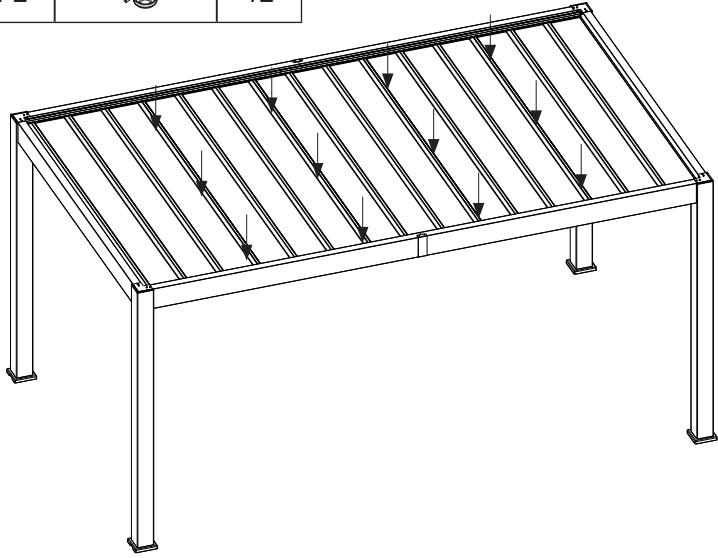
Combination A


P2		30
S4		30

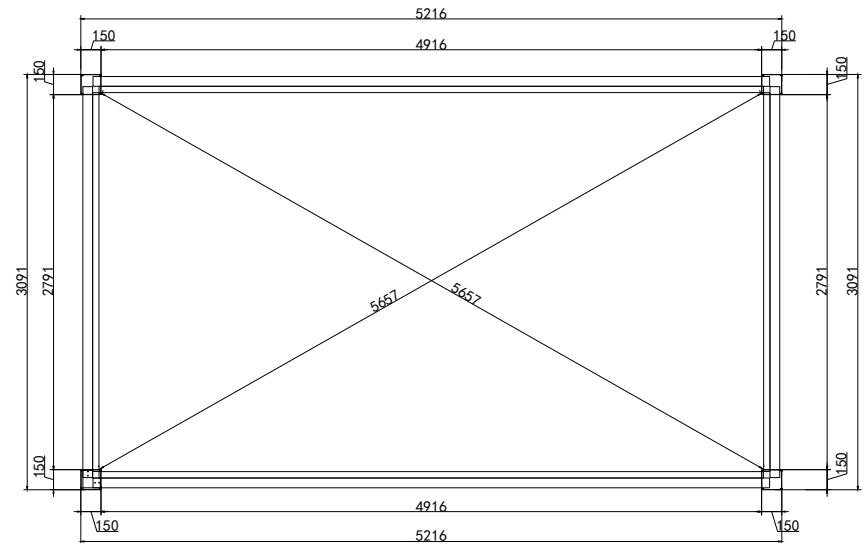
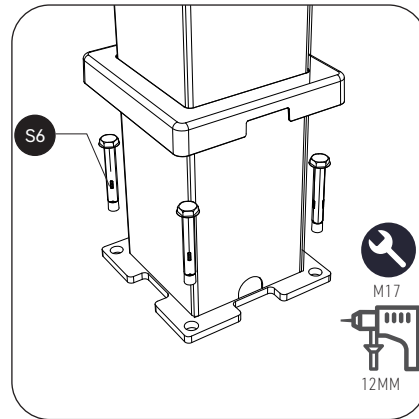
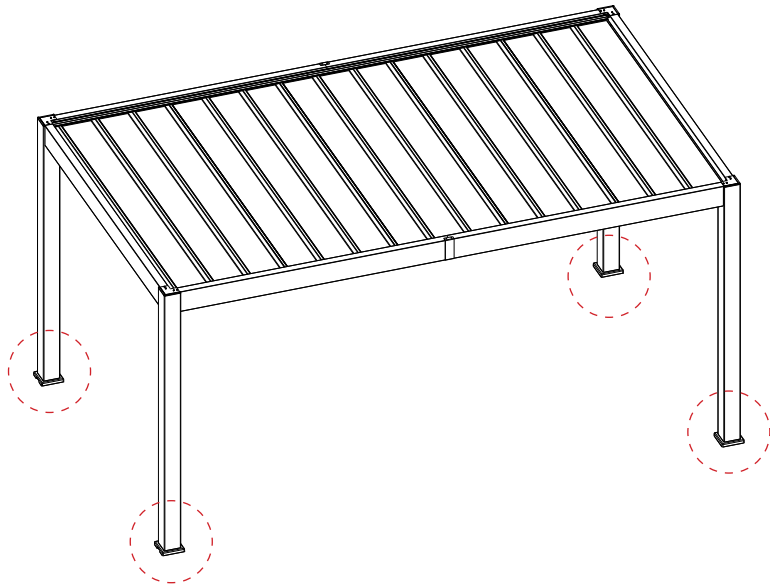


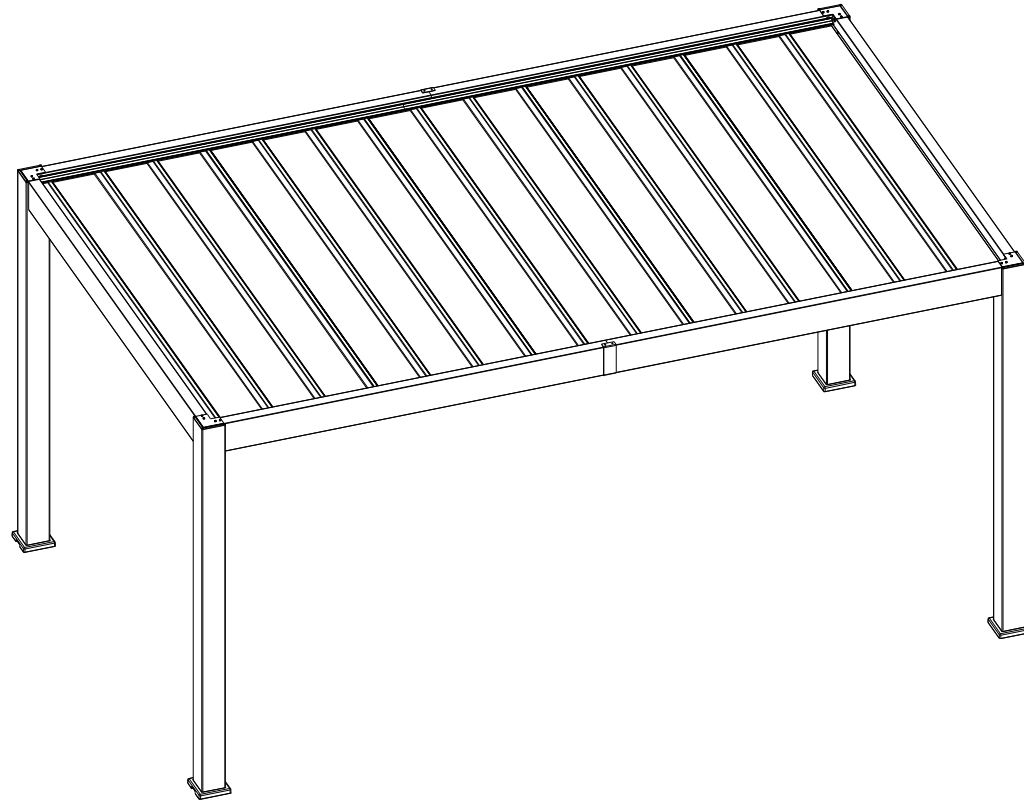
Combination A

S3	 5x19	12
P2		12



S6		16
----	---	----





CARPORT