







25 Years of Building Experience



Custom Manufacturing



Quick Turnaround




Tailored Service



Tested Safety
Products

QuickInstall Grab Rails



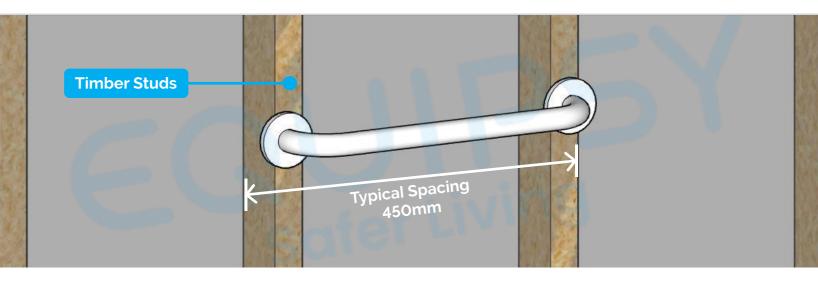

QuickInstall Grab Rails provide a tailored solution for improving safety, mobility, and comfort in a variety of environments. These grab rails ensure reliable support to help individuals maintain their independence and quality of life.

- Various Uses: Ideal for use in bathrooms, showers, entryways, steps, or outdoor areas, providing secure handholds wherever support is needed.
- Indoor and Outdoor Use: Designed to perform in both indoor and outdoor environments, offering dependable support in any setting.
- Easy Installation: Ergonomically designed for effortless use, with simple installation methods that allow for quick setup by professionals or caregivers.
- Low Maintenance: Easy-to-clean surfaces that resist wear, ensuring hygiene and long-lasting performance in all weather conditions.

Note: In areas where studs are not ideally located, our <u>StudSecure Modular Grab Rails</u> can be installed to extend and catch further available studs.

Enhance daily living with **QuickInstall Grab Rails** that deliver safety, comfort, and independence across a range of environments.

















Concealed Fix Grab Rails









Used for assisted living for toilets, doorways, pathways, stairs, and hallways



Concealed Fix Grab Rails -Brushed Satin

Length & Diameter	SKU
200 x Ø32mm	SS23R
300 x Ø 25mm	SS32RC
300 x Ø32mm	SS33R
450 x Ø 25mm	SS42RC
450 x Ø32mm	SS43R
600 x Ø 25mm	SS62RC
600 x Ø 32mm	SS63R
750 x Ø 32mm	SS73R
900 x Ø 32mm	SS93R



Concealed Fix Grab Rails -Polished Chrome

Length & Diameter	SKU
200 x Ø32mm	PS23R
300 x Ø 25mm	PS32RC
300 x Ø32mm	PS33R
450 x Ø 25mm	PS42RC
450 x Ø32mm	PS43R
600 x Ø 25mm	PS62RC
600 x Ø32mm	PS63R
750 x Ø32mm	PS73R
900 x Ø 32mm	PS93R



Concealed Fix Grab Rails -Knurled Satin

Length & Diameter	SKU
300 x Ø32mm	KS33R
450 x Ø 32mm	KS34R
600 x Ø 32mm	KS63R



Concealed Fix Grab Rails - Peened (Firm Grip)

Length & Diameter	SKU
300 x Ø32mm	FS33R
450 x Ø 32mm	FS43R
600 x Ø 32mm	FS63R



Concealed Fix Grab Rails -Black Satin

Length & Diameter	SKU
300 x Ø 32mm	BS33R
450 x Ø32mm	BS43R
600 x Ø 32mm	BS63R



Concealed Fix Grab Rails - Ripple Ivory

Length & Diameter	SKU
300 x Ø2 5mm	IR32RC
300 x Ø32mm	IR33R
450 x Ø 25mm	IR42RC
450 x Ø32mm	IR43R
600 x Ø2 5mm	IR62RC
600 x Ø32mm	IR62R



Concealed Fix Grab Rails -Smooth White

Length & Diameter	SKU
300 x Ø32mm	WS33R
450 x Ø32mm	WS43R
600 x Ø 32mm	WS63R



Concealed Fix Grab Rails -Smooth Ivory

Length & Diameter	SKU
300 x Ø 32mm	IS33R
450 x Ø32mm	IS43R
600 x Ø 32mm	IS63R



Concealed Fix Grab Rails - Ripple White

SKU
WR32RC
WR33R
WR42RC
WR43R
WR62RC
WR62R



Single Hole Fix Grab Rails









Suitable for compact areas with tight hand clearance such as doorway architraves and doorjambs



Single Hole Fix Grab Rails -Brushed Satin

Length & Diameter	SKU
300 x Ø 25mm	SS32R
450 x Ø 25mm	SS42R
600 x Ø2 5mm	SS62R



Single Hole Fix Grab Rails -Polished Chrome

Length & Diameter	SKU
300 x Ø 25mm	PS32R
450 x Ø 25mm	PS42R
600 x Ø 25mm	PS62R



Single Hole Fix Grab Rails -Knurled Satin

Length & Diameter	SKU
300 x Ø2 5mm	KS32R
450 x Ø 25mm	KS42R
600 x Ø2 5mm	KS62R



Single Hole Fix Grab Rails -Peened (Firm Grip)

Length & Diameter	SKU
300 x Ø 25mm	FS32R
450 x Ø 25mm	FS42R
600 x Ø2 5mm	FS62R



Single Hole Fix Grab Rails -Black Satin

Length & Diameter	SKU
300 x Ø 25mm	BS32RN
450 x Ø 25mm	BS42RN



Smooth Hole Fix Grab Rails -Smooth Ivory

Length & Diameter	SKU
300 x Ø2 5mm	IS32R
450 x Ø 25mm	IS42R
600 x Ø2 5mm	IS62R



Single Hole Fix Grab Rails -Smooth White

Length & Diameter	SKU
300 x Ø 25mm	WS32R
450 x Ø 25mm	WS42R
600 x Ø 25mm	WS62R



Single Hole Fix Grab Rails -Ripple Ivory

Length & Diameter	SKU
300 x Ø 25mm	IR32R
450 x Ø 25mm	IR42R
600 x Ø 25mm	IR62R



Single Hole Fix Grab Rails - Ripple White

Length & Diameter	SKU
300 x Ø2 5mm	WR32R
450 x Ø 25mm	WR42R
600 x Ø2 5mm	WR62R







Exposed Flange Grab Rails











Suitable for compact areas with tight hand clearance such as doorway architraves and doorjambs



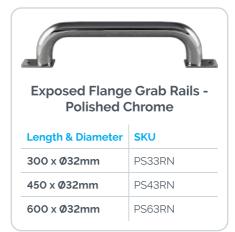

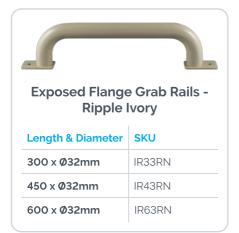







Offset Grab Rails












- Typically installed vertically
- Protruding design for a secure, accessible grip
- Visible and easy to reach for enhanced safety
- Ideal for assisting at doorways

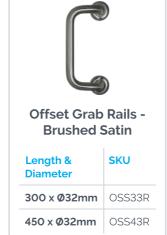

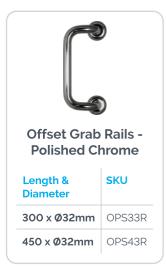

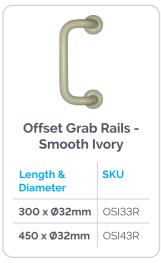





Drop Down Grab Rails










- Folds up and drops down
- Supports further from walls
- Three secure positions
- Mounts on floor posts
- Clears path of travel when raised



Drop Down Grab Rails with Toilet Roll Holder

Length & Diameter	SKU
600 x Ø 32mm	DDR600-TRH
700 x Ø 32mm	DDR700-TRH
800 x Ø32mm	DDR800-TRH

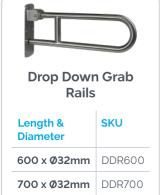

DDR800

800 x Ø32mm



Floor Mounted Drop Down Rail Post

Length & Diameter	SKU
300 x 846mm	DDRP1



Wall Mounted Drop Down Rail Post

Length & Diameter	SKU
120 x 846mm	DDRP2

Towel Grab Rails










- Weight bearing towel rail and grab rail
- Support weight and allow for towel hanging



Brushed Satin	
Length & Diameter	SKU
600 x Ø32 mm	SSTR6
750 x Ø32mm	SSTR7
900 x Ø 32mm	SSTR9
1200 x Ø32mm	SSTR12

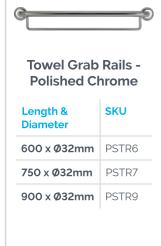







Angled Toilet Grab Rails














- Users can grip the rail from multiple directions for enhanced security
- Bend options for 40 degree and 90 degree
- Greater versatility compared to straight grab rails
- · 32mm diameter rail

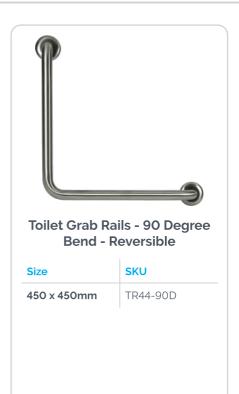

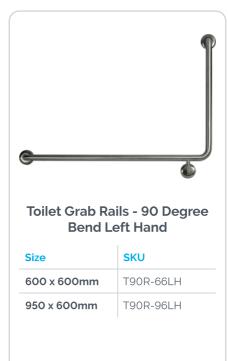

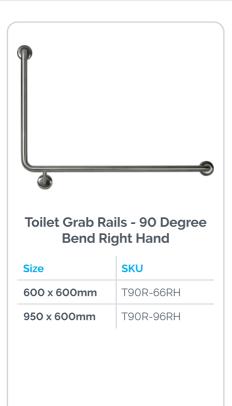

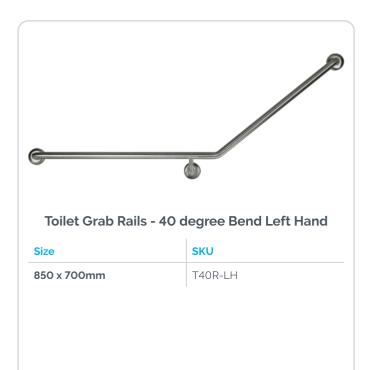

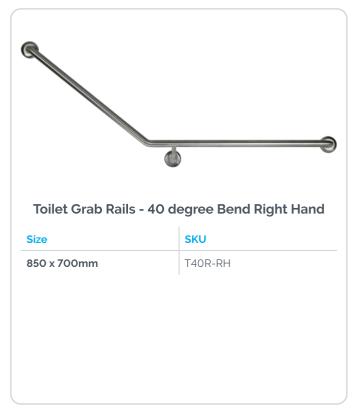



T Shower Grab Rails












- Typically used with a hand shower and sliding bracket for easy adjustment
- Designed for providing support in shower

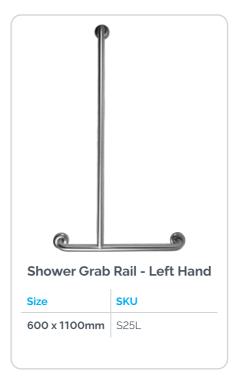

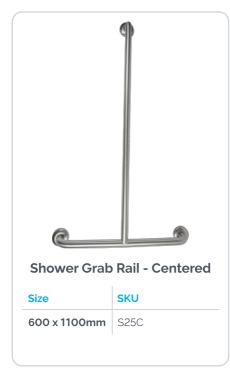

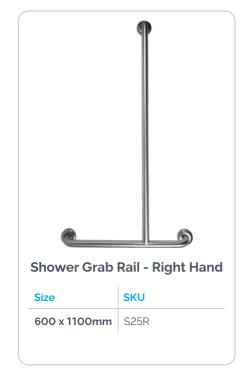

Sliding Grab Rails & Accessories










- Fixed end with sliding bracket
- Adjusts within 1000mm span
- Aligns with wall studs
- Includes reinsertable black end caps

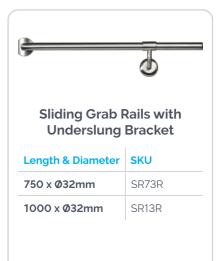



Adjustable Toilet Roll Holder to Suit 32mm Rail

- To suit 32mm grab rail
- Polished chrome finish

SKU ATRH32



1428.1 Sliding Shower Bracket

- To suit 32mm grab
- Brushed satin finish
- Suitable for use with hand showers

SKU SP-RS



Adjustable Sliding Bracket for 32mm Rails

- To suit 32mm grab rail
- ADA compliant design
- Suitable for use with hand showers

Size	SKU
138 x	SP-SBADA
1000mm	







Installation Manual



Compliance

These products should be installed as specified by AS1428.1. They are designed to safely support people requiring assistance in bathrooms and toilets up to a minimum force of 1100 N, as per this standard.

Tools Required

- Stud finder
 - er
- Level
- · Permanent marker
- · Cordless drill driver
- Drill hardware
- · Appropriate PPE
- Step 1 Determine the location of your rail and the surface it is being

attached to.

Step 2

Mark out your fixing holes with your permanent marker, using your level for horizontal/vertical alignment.

Step 3


Use appropriate drill to drill the marked holes on the surface.


Step 4


Position the grab rail, aligning the flange holes with the drilled holes on the surface. Drill the screws into the holes to secure the grab rail into place.

Step 5

Slide the cover plates over the flanges. Twist and lock into place.

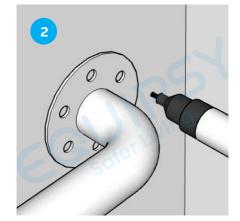

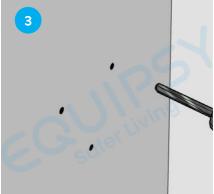

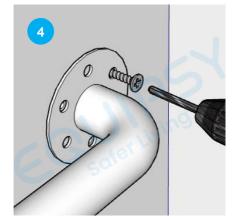





The information provided in this document is general in nature and should not be used as a substitute for expert advice in specific applications. All Equipsy products must be installed by qualified tradespeople. Equipsy is not responsible for any damage to products, walls, or fixtures resulting from improper installation or maintenance.








Product Drawings

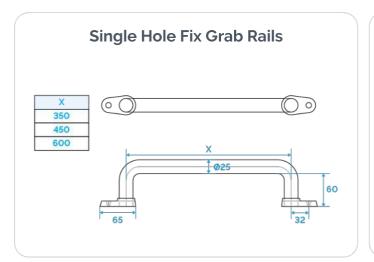


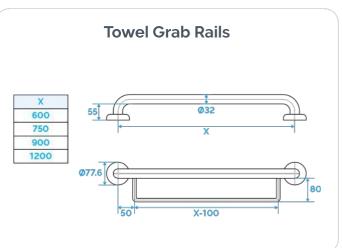


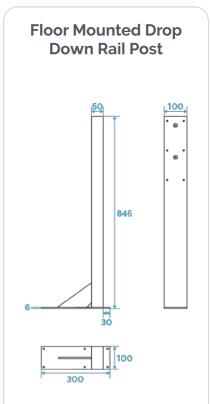

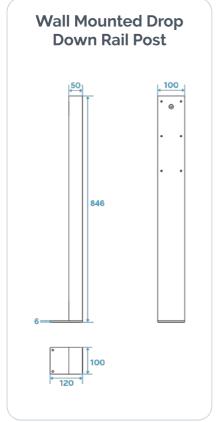

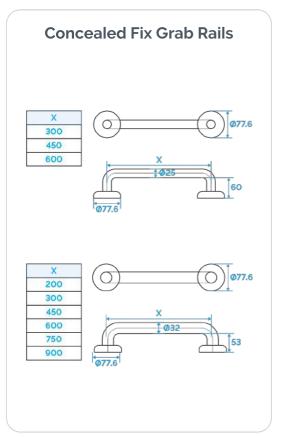

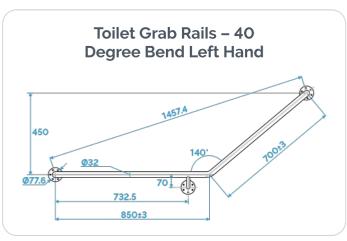

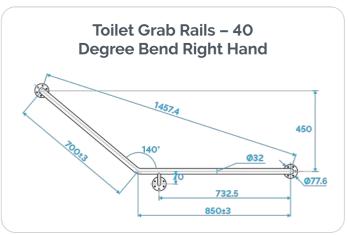














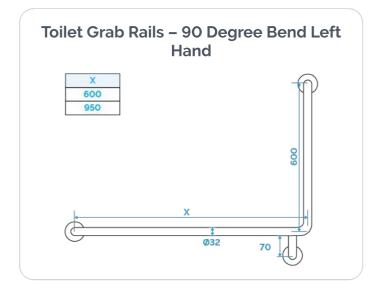


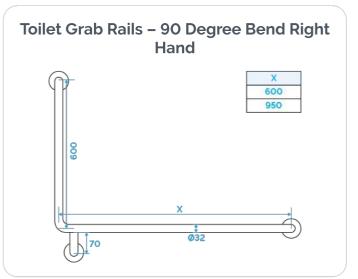


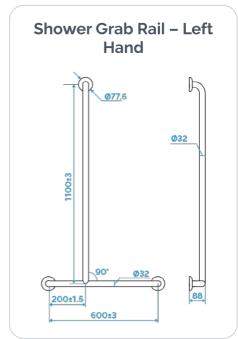

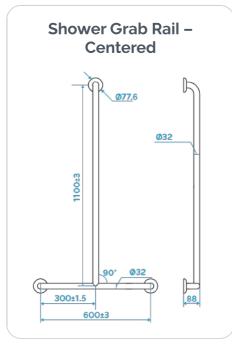

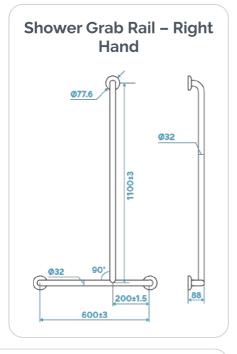

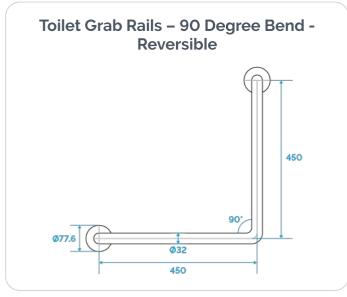

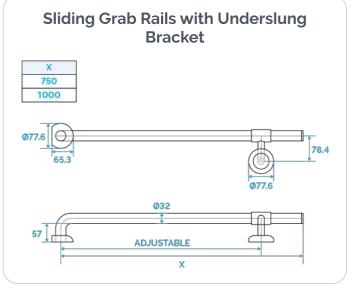



EQUIPSY Safer Living
















ACCESS OUR WEBSITE:



(03) 9087 2199





9 49a Quinn St, Preston VIC 3072



www.equipsy.com.au