





SMART DOOR LOCK USER MANUAL



Your step-by-step guide for installing, configuring, and connecting your Smart Door Knob.

This device is engineered for ease of use and is compatible with various modern door types, including main entry doors, bedroom doors, sliding doors, and traditional swing doors.

This lock is designed to seamlessly replace existing door handles, ensuring both convenience and security.



SUMMARY

I. Before Installation

J

 $\{O\}$

a) Packaging List	Page 4
b) Device Details	Page 5
c) Handle Direction	Page 6
d) Clutch Direction	Page 7

II. Device Installation

a) Remove Existing Lock	Page 8
b) Insert New Latch	Page 8
c) Install Lock Handles	Page 8
f) Tighten Screws	Page 8
g) Install New Batteries	Page 8

III. Device Programming

a) Reset & Keypad Legend......Page 9 b) Access Door Lock Settings.....Page 10 c) Add Administrator.....Page 11 d) Delete Administrator.....Page 12 e) Language Setting.....Page 13 f) Passage Mode....Page 14

SUMMARY

IV. Mobile App Connection

a) Download the Mobile App	Page 15
b) Log In & Register	Page 15
c) Reset Password	Page 16
d) Add Locations	
e) Connect To Network	Page 19
f) Add Devices	Page 20
g) Add Members	Page 25


V. Mobile App Features

a) Access Log Records	Page 26
b) Alert Notifications	-
c) Dynamic Password	
d) Temporary Password	Page 27
e) Remote Unlock	-


VI. Additional Information

a) Auto Lock	Page 29
b) Wrong Password Lockout	Page 29
c) Low Battery Notifications	Page 29

a) Packaging List

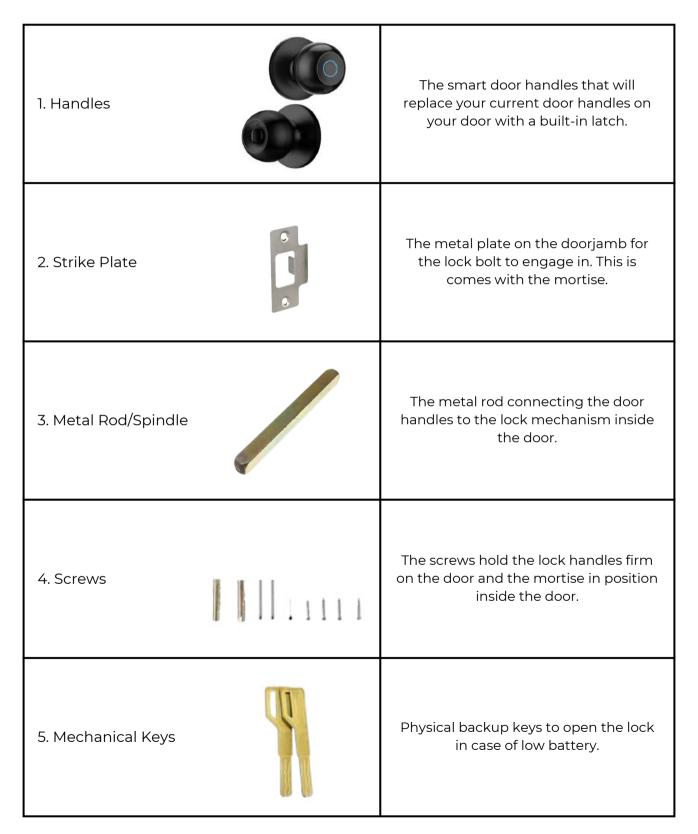

b) Device Details

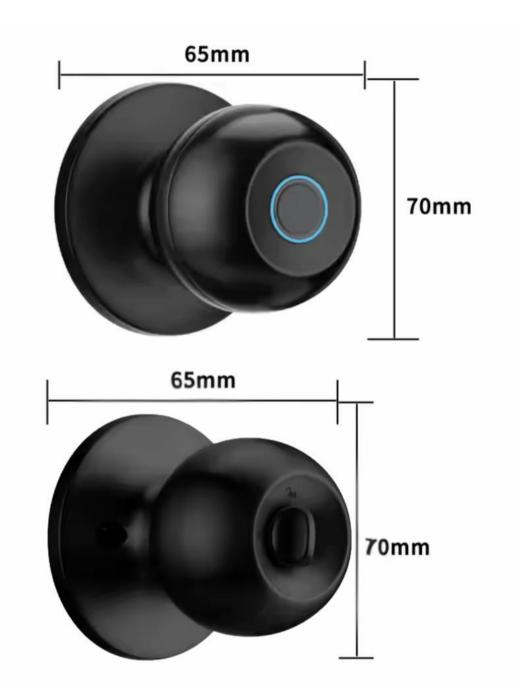

GET SMART

c) Handle Direction (Optional)

To adjust the handle direction on the Smart Lock based on your door's opening or orientation, ensure the handle is properly aligned before securing the screws.

Important Note:

Verify that the handle returns to its correct position after adjustment; otherwise, it may become misaligned or too loose.

d) Clutch Direction (Required)

Before installing the lock, it's crucial to correctly set the clutch to ensure proper functionality of the locking mechanism depending on whether your door swings open to the left "L" or right "R". This is done by turning the metal rod clockwise for doors that swing open to the left and counterclockwise for right.

The clutch is located behind the center of the door handle.

Once the clutch is adjusted correctly, the smart door lock will be secure, and entry will only be possible using a fingerprint, passcode, or keycard.

Important Note:

If the clutch direction is not set correctly, the smart lock will not function properly, even though the system may indicate it is "locked."



II. DEVICE INSTALLATION

a) Remove Existing Lock

Begin by unscrewing the bolts that secure your current door knob. Carefully pull out the existing lock.



b) Insert New Latch

- Insert the new Mortise and Strike Plate into the door frame.
- Secure them by tightening the screws on the top and bottom sides.
- Ensure that the latch bolt is positioned at the top side of the lock.

c) Install Lock Handles

- Secure the Front Handle to the door by inserting the Metal Rod into the middle hole behind the handle. Ensure the positioning pins pop out and hold the handles in place.
- Use the Lock Body Screws to pass the Metal Rod through the door, securing the handle firmly.

d) Tighten Screws

Insert the power cord from the Front Handle through the door to connect it to the Back Door Handle.

e) Install New Batteries (optional)

After fixing both handles with screws, insert the batteries into the designated compartment. Close the compartment by placing the cover on top and securing it with screws.

III. DEVICE PROGRAMMING



a) Reset & Keypad Legend

To ensure that your smart lock is in its initial state before programming, perform a reset by doing the following:

- Locate a small hole or button on the lock handle.
- Use a pin to long-press the button for at least 10 seconds or until you see a light flash.
- When both red and green light flashed, this indicates that the reset process has been confirmed.

* = to go back or return.



123456 = the default administrator information.

Note:


Under the initial state, any fingerprint, keycard, and password can unlock or open the smart lock.

$\langle \hat{\mathbb{O}} \rangle$

III. DEVICE PROGRAMMING

b) Access Door Lock Settings

- Only an authorized fingerprint and passcode can unlock the device, as well as through the mobile app.
- Always remember to activate your Smart Lock first before entering your administrator passcode.

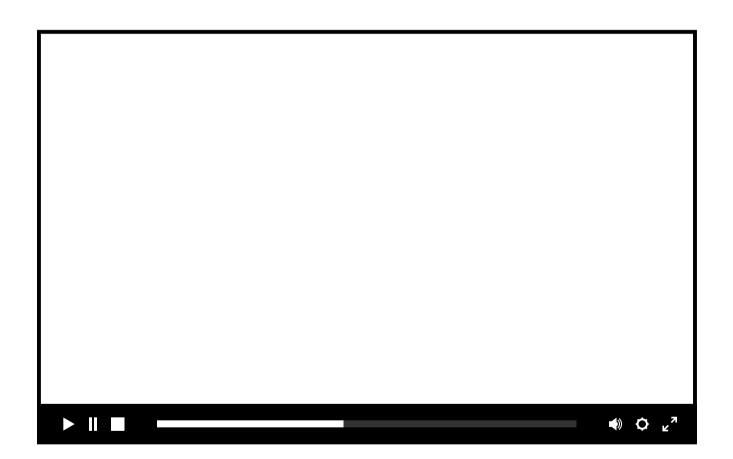

III. DEVICE PROGRAMMING



c) Add Administrator

Make sure to reset the lock before adding an administrator for the first time. The Administrator will be User 00 and can be set up using a passcode or fingerprint.

To add a fingerprint:

- Open the mobile app and go to Settings.
- Select 'Fingerprint Management'.
- Choose a user where you intend to add the fingerprint and continue to add the biometrics on the lock fingerprint sensor by clicking the 'Start Capturing' button.
- Long-press the fingerprint sensor until everything has been captured and saved into the system.

{Ô}

III. DEVICE PROGRAMMING

d) Delete Administrator

To delete a user or administrator from your Smart Lock, follow the steps below:

- Open the mobile app and go to Settings.
- Select 'Member Management'.
- Choose the user you intend to remove.
- Click delete.



III. DEVICE PROGRAMMING

e) Language Setting

To set the language of your Smart Lock to English, follow these steps:

- Open the mobile app and go to Settings.
- Locate the option to change the language.
- Select English and click save to continue.

III. DEVICE PROGRAMMING

f) Passage Mode

To enable passage mode on your Smart Lock, allowing it to remain unlocked for a certain period, follow these steps:

- Turn the knob found on the inside lock panel to \square
- Turn it vertically to disable passage mode.

THE CONNECTED SHOP

IV. MOBILE APP CONNECTION

a) Download The Mobile App

Download the app from the Google Play Store or Apple App Store by searching for "Tuya Smart" or by scanning the provided QR code.




Look for the Tuya Smart Logo



b) Log In and Register

- After downloading, select your country.
- You will be redirected to register via email.
 - For existing users, log in using your registered email and password on the login page.
- A verification code will be sent to your email; enter it in the app within the specified time limit.
- Once the verification code is entered, you will be prompted to set your password.
- After completing these steps, you will have full access to the Tuya Smart app on your mobile phone to start adding your device.

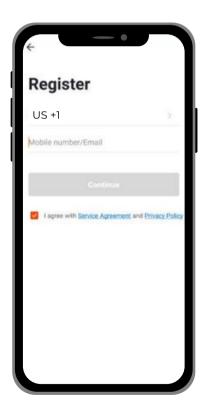


Smart Door Knob User Manual

IV. MOBILE APP CONNECTION

c) Reset Password

- On the login page, click the "Forgot Password" button located below the "Login" button.
- Select your country, which the app will usually detect automatically, and proceed with the password reset process.
- Enter your email address to receive a verification code.
- Once you receive the code, enter it into the app within the allotted time.
- You will then be prompted to set a new password, giving you full access to the Tuya Smart Platform.

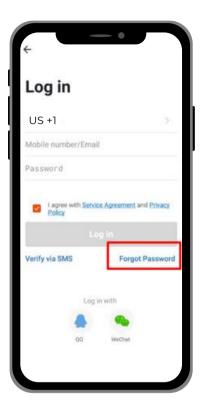

GET SMART

16

IV. MOBILE APP CONNECTION


d) Add Locations

- Tap the button in the top-left corner of the screen and select 'Home Management' from the dropdown list.
- A single account can manage multiple locations simultaneously, allowing the user to operate multiple devices within a selected location.





IV. MOBILE APP CONNECTION

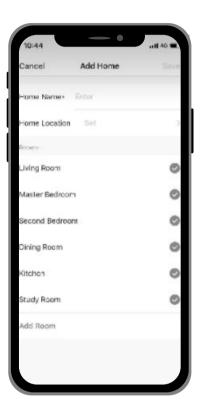

- If you already have a Home set up, click 'Join a Home.' If not, click 'Create a Home.'
- Enter the required details on the screen and click 'Confirm.

Note: Other household members will have the ability to control the smart devices registered to this household, but they will not have the authority to modify, add, or delete devices.

IV. MOBILE APP CONNECTION



e) Connect To Network


To pair your smart lock with the mobile app:

- Activate the smart lock and press 1 and # on the keypad to enter pairing mode.
- Enter your Administrator Passcode when prompted.
- Open the mobile app to add the device (please refer to the following instructions on programming the lock via the mobile app).

IV. MOBILE APP CONNECTION


f) Add Devices

- Ensure that both your devices and phone are connected to the same 2.4GHz Wi-Fi network.
- To connect the lock to the app, touch any button on the keypad to light it up.
- Press "1" followed by "#". The lock will then prompt you for administrator information. If no administrator is set, enter the default code "123456" and press "#" to confirm.
- The lock's hotspot will now be activated. Make sure you have the Tuya Smart app downloaded on your phone.

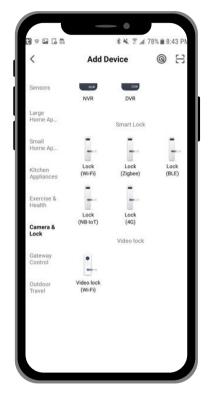

20


IV. MOBILE APP CONNECTION

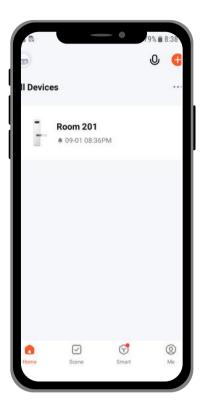

- To add a device, tap 'Add Device' or the "Plus" button at the top-right corner of the app screen, and select 'Add Device.'
- From the list of devices, choose 'Camera & Lock' on the left side, then click 'Lock (Wi-Fi)' to select your Smart Lock device.

Follow the remaining prompts to complete the setup process.

IV. MOBILE APP CONNECTION

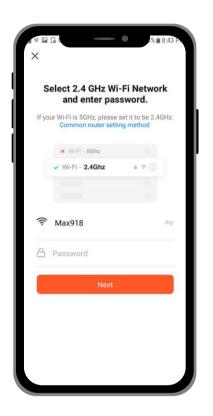

- You will be prompted to connect the Smart Lock to your 2.4 GHz home WiFi network. Ensure that you input the WiFi password correctly. Next, select AP mode and confirm that the indicator light is blinking. At the same time, make sure that the "0" is blinking on the keypad.
- Then, go to your phone's Settings > WiFi, refresh the page, and find the "Smart Life xxx" connection. Connect to this network.
- Do not worry if the connection shows "no internet," as this is the lock's hotspot that will connect to your home WiFi network.


Note: Ensure that both your phone and the Smart Lock are connected to the 2.4 GHz WiFi network, not a 5 GHz or other network, as the lock will not be added to the app on other connections.

Note: Ensure that both your phone and the Smart Lock are connected to the 2.4 GHz WiFi network, not a 5 GHz or other network, as the lock will not be added to the app on other connections.

IV. MOBILE APP CONNECTION

- Check if the light indicator is blinking.
- After tapping the 'Confirmation' button, you will be prompted to select the current status of the light indicator. You will have two options:
 - AP Mode ("Access Point mode"): This uses access points like a Wi-Fi Hotspot. If you choose AP Mode, you must connect your phone to the lock or device's hotspot before proceeding to the next step.
 - EZ Mode ("Easy-connect mode"): This mode is generally most compatible if you are directly connecting your phone to the Wi-Fi router.

Select the appropriate mode based on your current setup to continue.

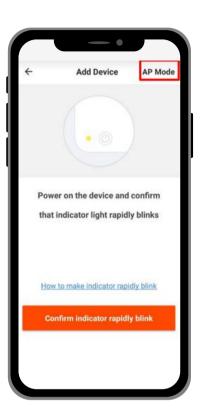



GET SMART

IV. MOBILE APP CONNECTION




• After completing these steps, ensure that your phone and the device are close. You will receive a prompt on both the lock and your screen confirming that the pairing was successful.

All Devices

Room 201

• Once pairing is completed, you can proceed to finish adding your device. Afterward, you have the option to change the device's name and manage its functions as needed.

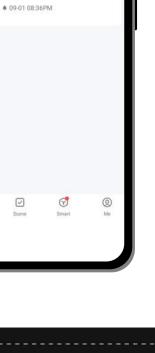

0

24

GET SMART

IV. MOBILE APP CONNECTION

g) Add Members

To grant others access to a device by adding them as members of a specific location or room, follow these steps:



- Tap the 'Me' tab at the bottom-right corner of your screen.
- Click on 'Home Management.
- Select the location where you want to add the new member.
- Tap 'Add Member' and choose the method to share the invitation with the new member.



GET SMART

V. MOBILE APP FEATURES

a) Access Log Records

- From the Home Page, select the Smart Lock you want to review.
- Click on 'Records' to access the unlock history.





b) Alert Notifications

- From the Home Page, select the Smart Lock you wish to use.
- Choose the 'Alarm' option to view the history of the lock, including any instances where it may have been compromised or when an incorrect password was entered.

V. MOBILE APP FEATURES



c) Dynamic Password (optional)

- Tap the 'Key' button on your phone screen to generate a Dynamic Password (a short-term password valid for only a few minutes).
- Enter the Dynamic Password on the lock pad to unlock the device.

d) Temporary Password (optional)

- On the Lock Screen, tap the 'Temporary PW' button located at the bottom right.
- Click 'Add' and set the temporary password, the name of the user, and the start and end date/time. Ensure that the time on your mobile app and the lock are synchronized.
- Click 'Done' in the top-right corner to complete the setup.
- Activate the lock pad, enter the temporary code you created, and press '#' to confirm and enable the temporary lock function.

Pleas	e onter	tempo	racy D	55400	0	
		6		6	3	4
Serve	indomii)				
	ol tim	e e				
The fa	ilure t	me				

V. MOBILE APP FEATURES



e) Remote Unlock

To grant access to someone when you are away, instruct them to press 9 and # on the lock keypad. This action will send a notification or request to your mobile app, allowing you to confirm and remotely unlock the door.

VI. ADDITIONAL INFORMATION

a) Auto Lock

The system will automatically exit if there is no operation for over 10 seconds.

b) Wrong Password Lockout

If an incorrect password is entered more than five times consecutively, the keypad will lock for 30 seconds and will not respond to any input during this time.

c) Low Battery Notifications

When the battery is low, the lock will emit a sound each time it is opened. After the alarm sounds, the lock can only be opened 200 more times. Once this limit is reached, each unlocking attempt will be delayed by 5 seconds. It is essential to replace the batteries before reaching the 200 unlock limit.



Congratulations!

You have successfully installed your very own Smart Door Knob. Thank you for being a valued customer of The Connected Shop.

THECONNECTEDSHOP.COM





